

# Advanced Wireless Foot Pedal Center Clip & FlipSwitch™ Cover

**⚠ WARNING:** This product must be installed in accordance with the instructions provided. Failure to do so could result in personal injury, damage to your vessel and/or poor product performance.


**⚠ WARNING:** Performing service or maintenance without first disconnecting the battery can cause product damage, personal injury, or death due to fire, explosion, electrical shock, or unexpected motor starting. Always disconnect the battery cables from the battery before maintaining, servicing, installing, or removing motor components.

## In the box


- 1x center clip
- 1x FlipSwitch™ cover

## Installation


- 1 Pull the center clip locking tab (A) at the heel end of the foot pedal.

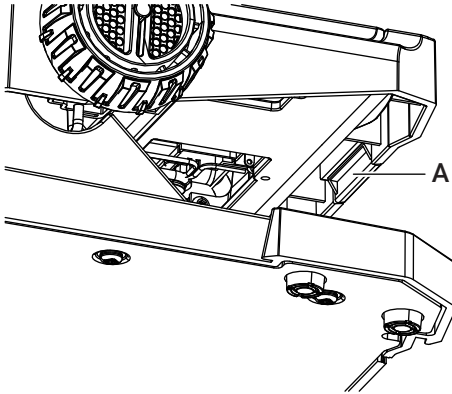

- 2 Lift off the center clip (B).

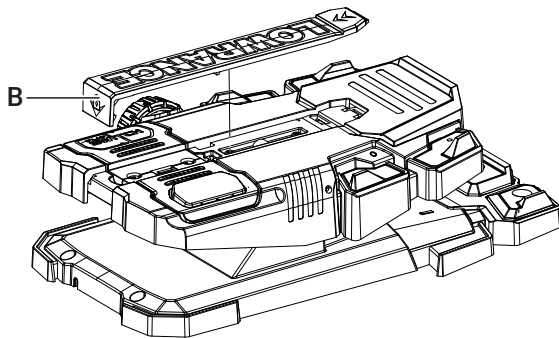

- 3 Press the FlipSwitch™ cover locking tab (C) and lift off the FlipSwitch™ cover.

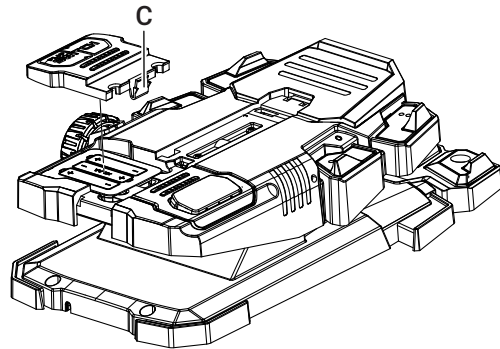

- 4 Click the new FlipSwitch™ cover into place.
- 5 Click the new center clip back into place.

