

FITTING INSTRUCTIONS FIT1367

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

**ROLLING LID – ELECTRIC
PX RANGER WITH WILDTRAK SAILPLANE**

RL101E-F



1. Matters need attention:

1. Please install the parts in a safe environment, and wear the corresponding safety protective equipment;
2. Please read this manual carefully before installing the product, pay attention to protect the surface of the vehicle, and avoid scratches during the installation process;
3. Check whether the parts in the package are complete before installation;
4. Please regularly check whether all the parts connected to the car are loose to ensure the safety of use;
5. Use traces between the slide track and the rolling curtain are normal test traces;
6. this curtain has no load-bearing function, do not place the heavy object above the curtain;
7. The drainage pipe passes through the drainage hole of the rear tail box;
8. Before folding up the curtain, make sure to ensure that the surface is clean to avoid foreign bodies involved in the box.

2. kindly reminder:

1. When the curtain is opened or closed, pay attention to check whether there is foreign body, avoid the human body contact with the opening and closing area, and avoid pinching;
2. When the box body and the side rod slide rail are installed, the rolling shutter has the automatic return function. Please pay attention to the stability to prevent clamping;
3. Please do not close the pet or person in the closed rear tail box, which may cause suffocation;
4. The number of people installing the curtain is recommended to be 2, and the installation time is about 45 -60 minutes.

























Ranger Wildtrak


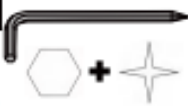

















Table of Contents

1. Product Introduction.....	3
1.1 Bill of Material.....	3
1.2 Product Component.....	5
2. Installation.....	6
2.1 Preparation.....	6
2.2 Assembly.....	8
2.3 Assemble the bracket.....	13
2.4 Product loading.....	16
2.5 Wiring.....	22
2.6 Adjust/check (Gage M5 or M6).....	26
3. Description.....	31
3.1 Introduction to remote control.....	32
3.2 Key Fob Control.....	32
3.3 Front Button Control.....	32
3.4 APP/Wechat Program.....	32
4. Maintenance and repair.....	34
4.1 Solutions to common problems.....	34
4.2 Rolling shutter failure analysis.....	34
5. Helpful Maintenance Hints.....	35


1. Product Introduction

1.1 Bill of Material

M1  1X	M2  1X			
M3  1X	M4  1X			
Adjust the accessories M5/M6 according to the actual situation				
M5  1X	M6  L1+R1			
M7  1X				
Bill of Material-Canister(Varies from different car models, but installation is the same)				
A  1X	B  6X	C  10X	D  2X	
E  2X	F  2X			
Bill of Material-Brackets				
G  4X	H  4X	I  L1+R1	J  4X	
K  6X	L  6X	M  2X	N  2X	O  6X

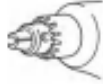Bill of Material-Tools						
P  S=5 1X	Q  S=5 1X	R  S=8/10 1X	S  Φ20 1X			
Electronic						
Y1  harness (in gray color) 1X	Y2  Original vehicle signal line (yellow) 1X	Y3  Cabin buttons 1X				
Y4  Cabin button extension cord 1X	Y5  20X	Y6  2X				
Maintenance						
Sealant  1X			Lubricant  1X			
Other Assistive tools (Provided by Customer)						
 Φ28 1X					 H ₂ O	

1.2 Product Component

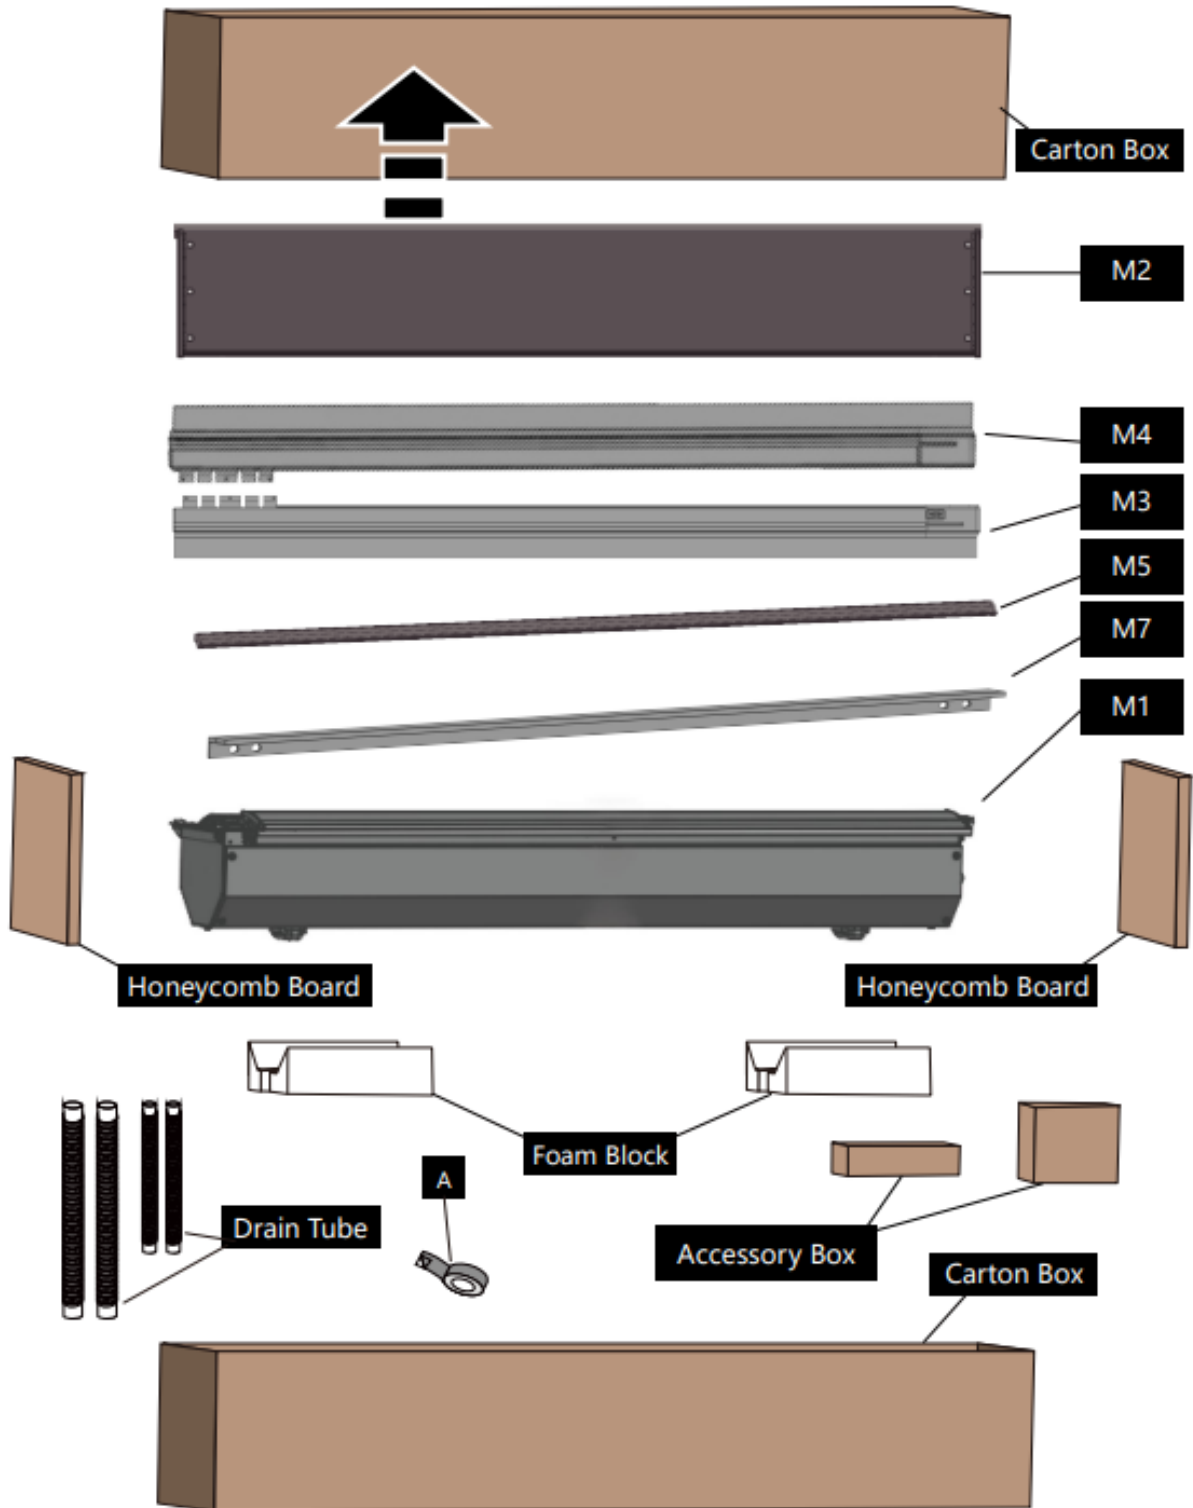


II. Installation

2.1 Preparation

1


Clean Up the mess on the train, as shown in the picture below.

USE:


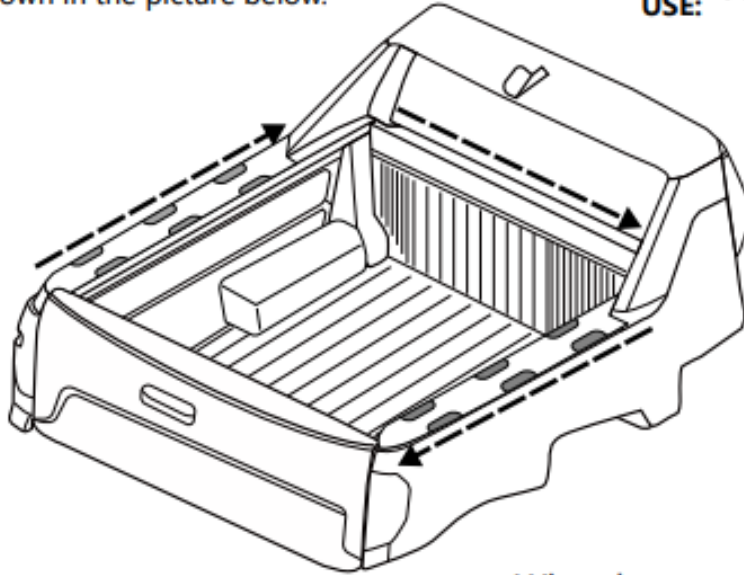


Wipe the mounting surface clean.

2

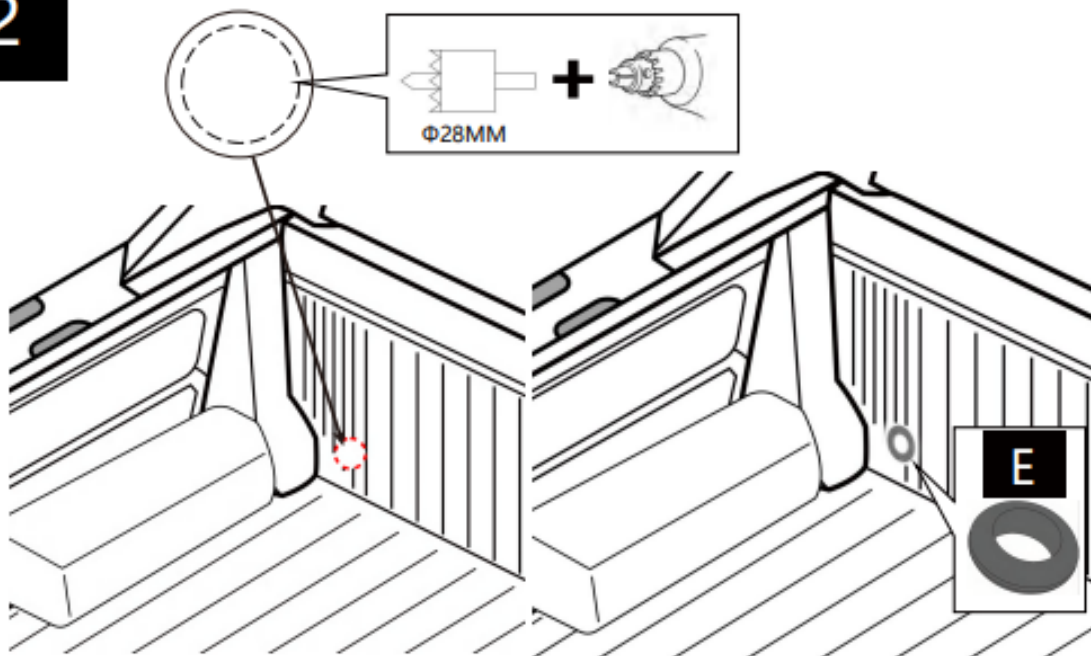


1. if the body has holes, then no drilling, drainage holes in the original car installation accessories E rubber ring.
2. If there is no drainable board, drill holes in the carriage. Use a $\phi 28$ mm drill bit with a hand drill to drill holes. After drilling, remove the burr cape and install the accessory E apron.

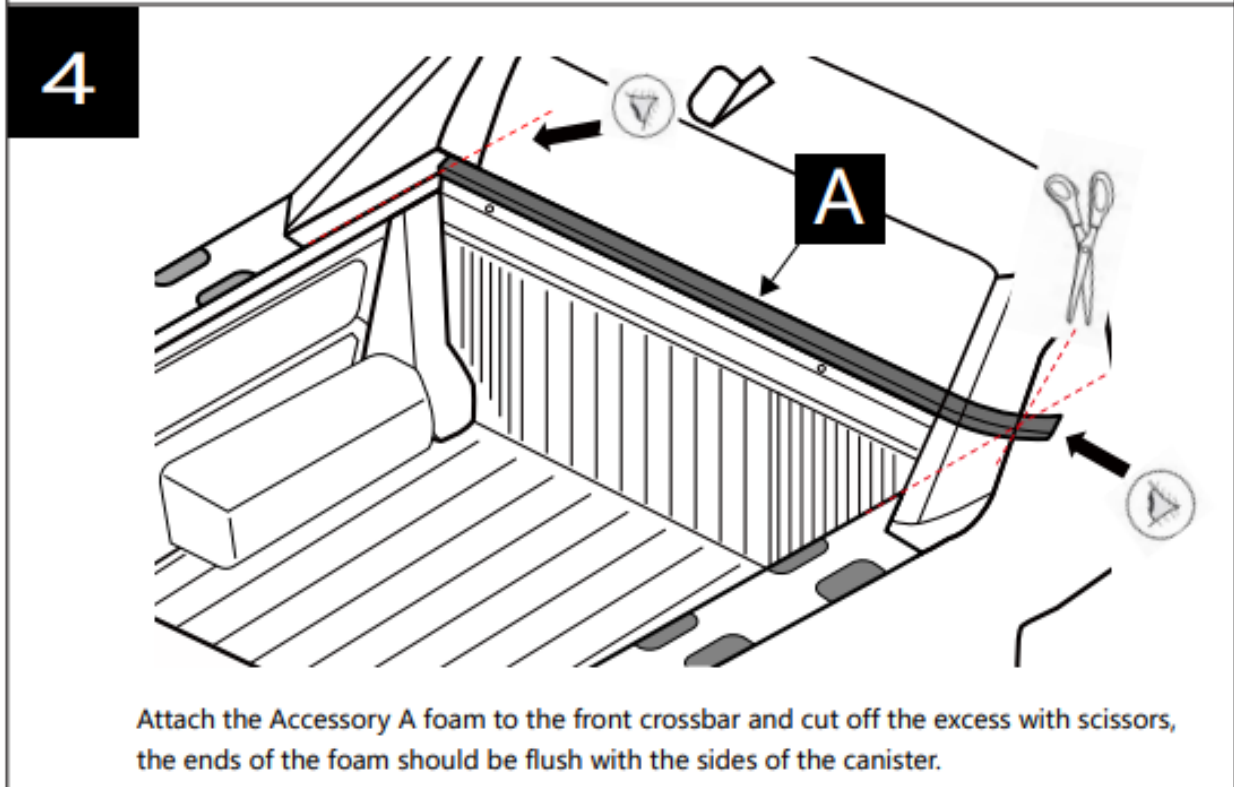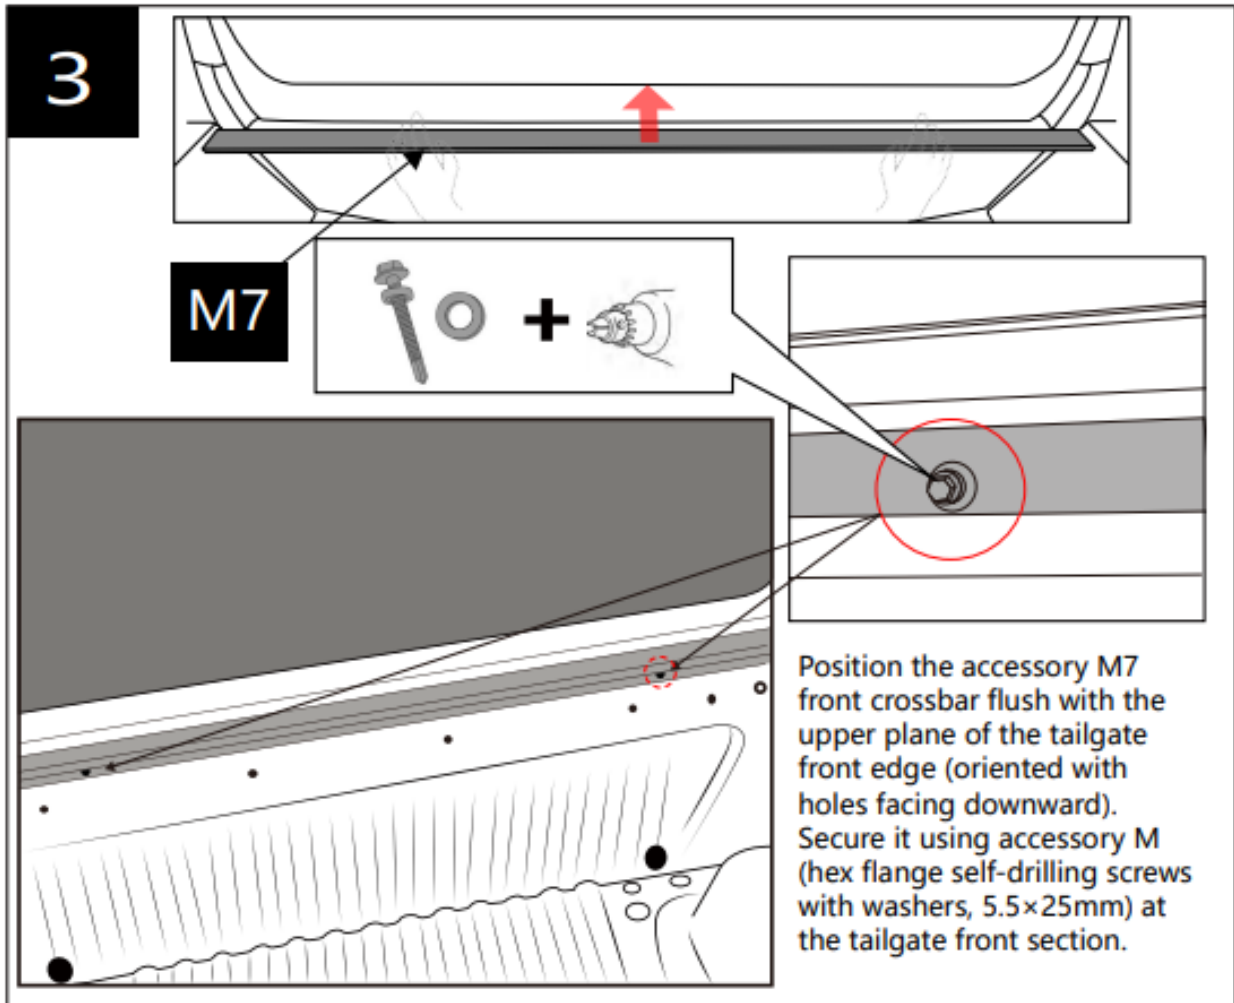

2.2 Assembly


5

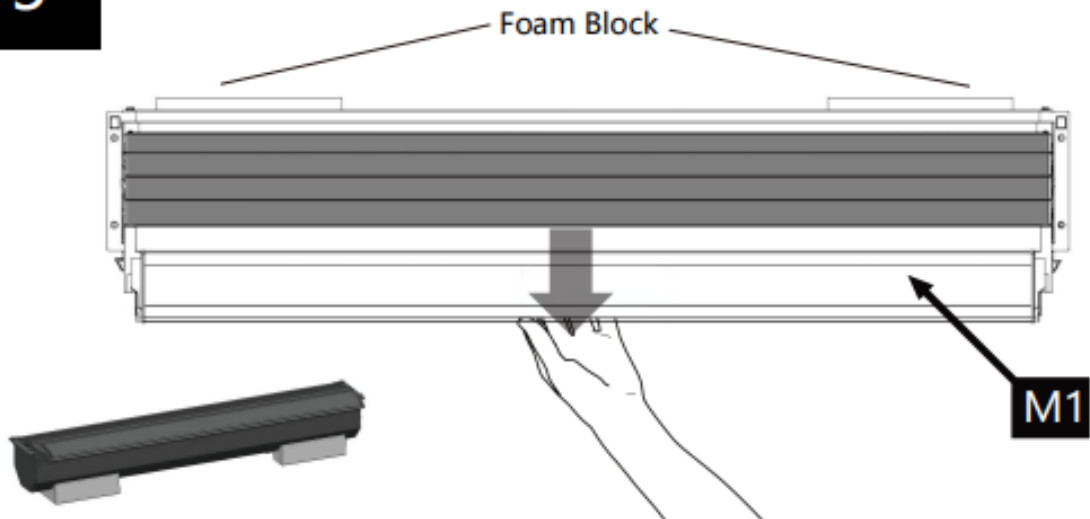

Box pull out 6-8 rolling shutter page.

TIPS: Avoid the use of brute force operation, damage the product.



6

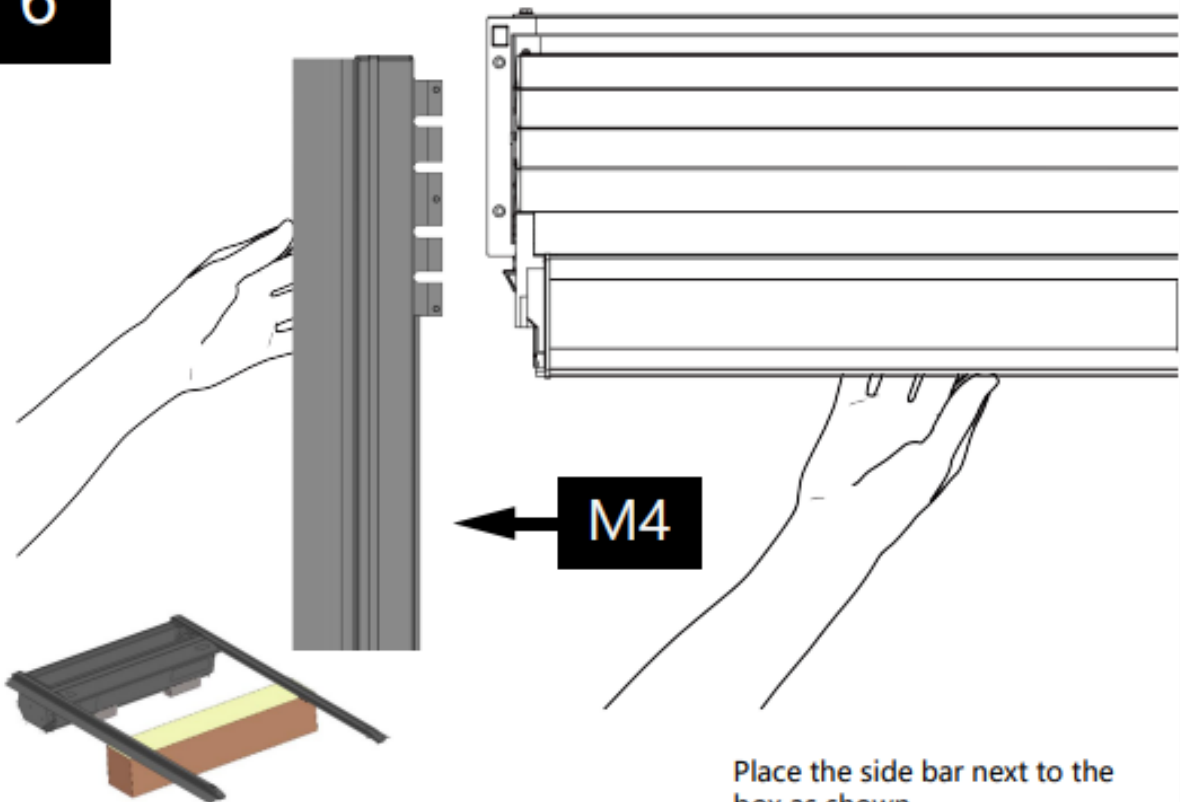

Place the side bar next to the box as shown.

TIPS: Avoid the use of brute force operation, damage the product.



7

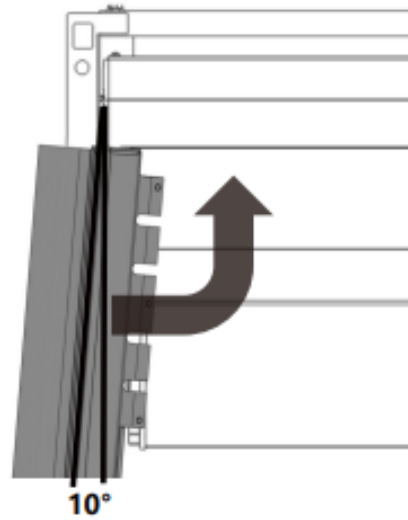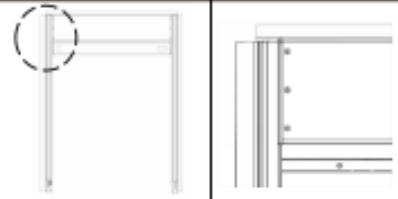

TIPS: Avoid the use of brute force operation, damage the product.

Lift the side bar up 10 ° and out 10 ° , and place the tailgate and shutter pages into the side bar chute.



8

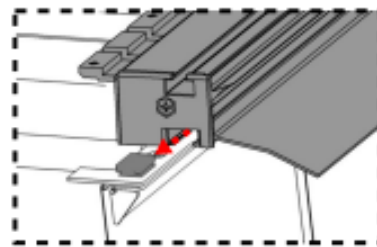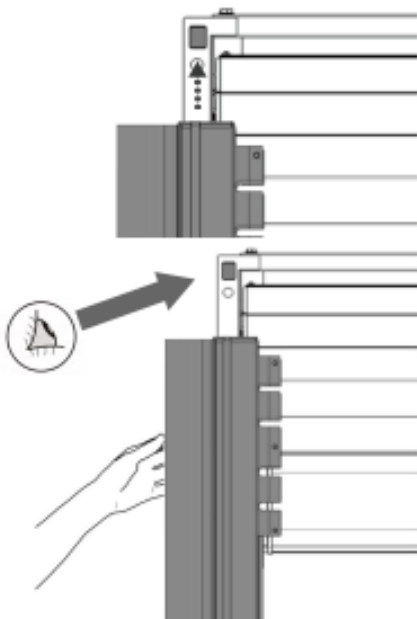

TIPS: Avoid the use of brute force operation, damage the product.

Align the side bar groove with the raised T-block and push the side bar until it can not move forward.

9

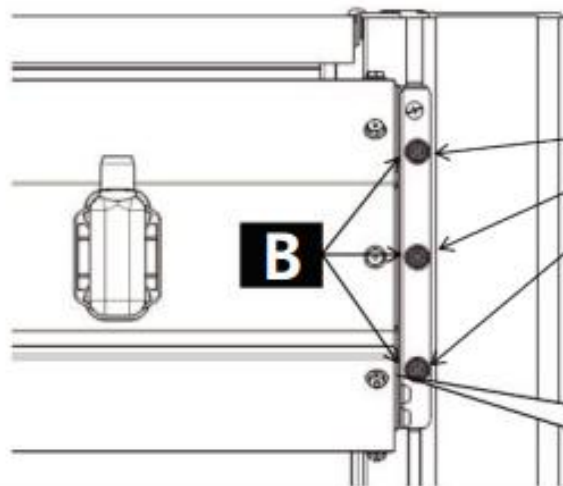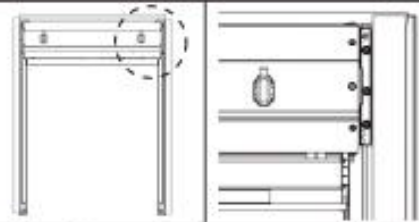

Floating nuts
for lockout



Note: After the first screw is half-way in, start installing the second screw. Fully tightening the first screw may make installing the second screw difficult.

USE:

P




Using the accessory P Hex Wrench, tighten the accessory B bolt.


S=5

TIPS: To do this, reverse the box up and down. If the bolts don't fit, try to align the side bar with the hole in the box.




10

Before fully fixing the side bar, make sure that the roller shutters are in line (distance A = A).

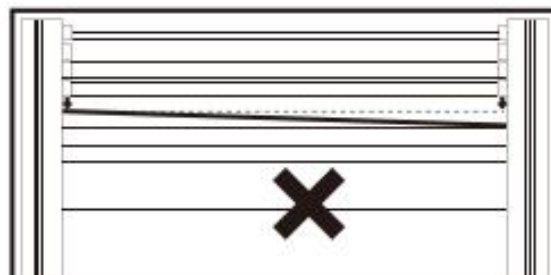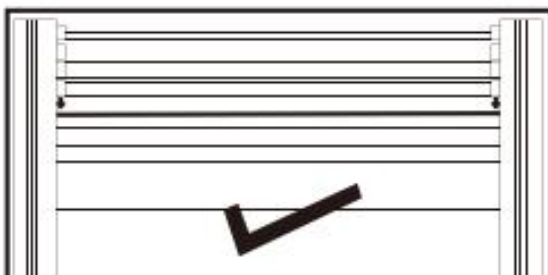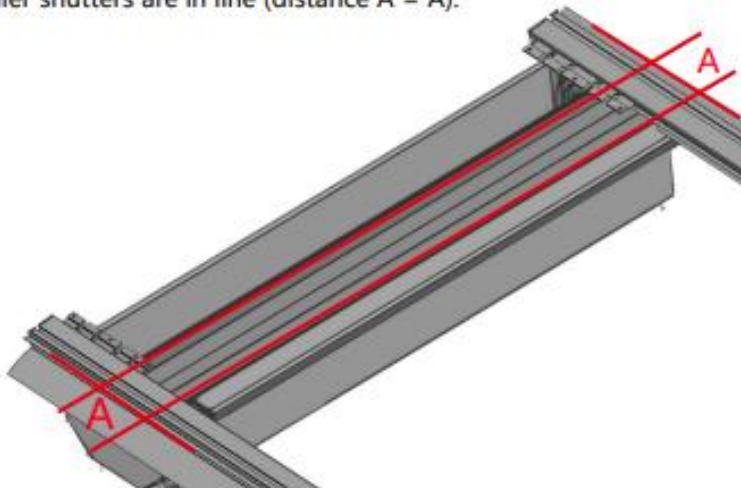

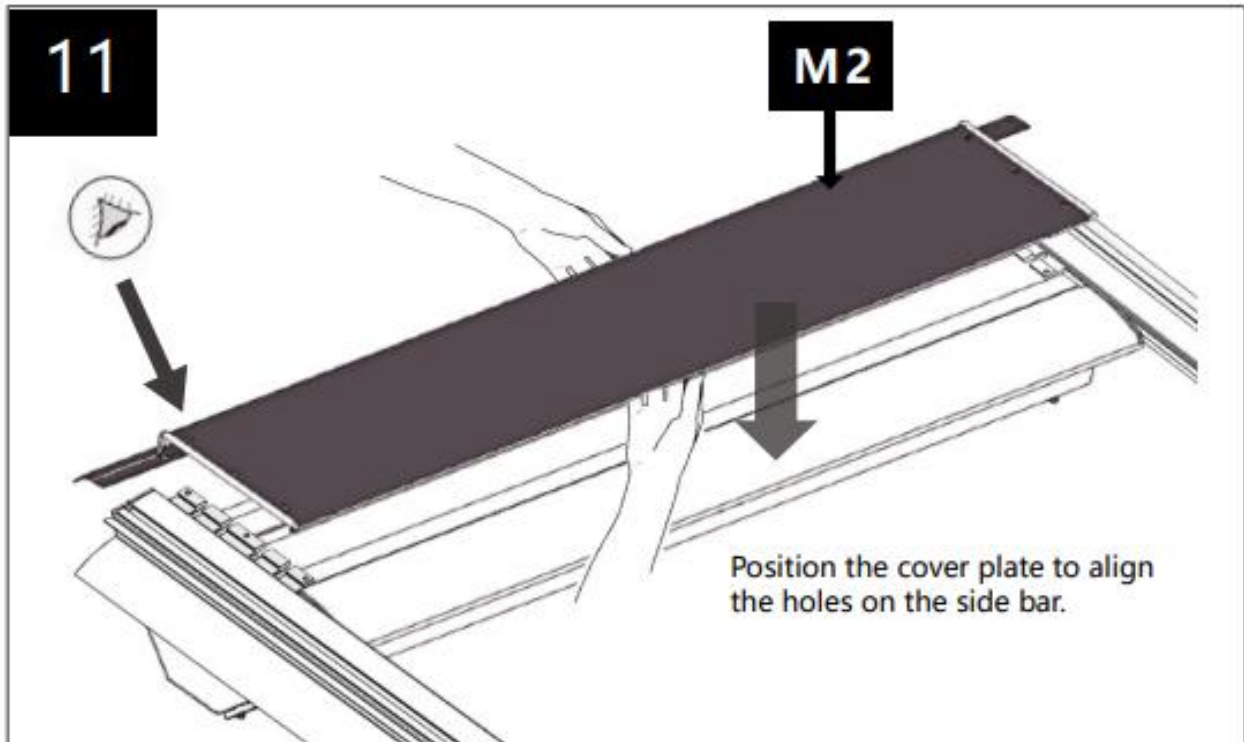


TIPS: Cover Plate should be aligned, do not scratch the box.

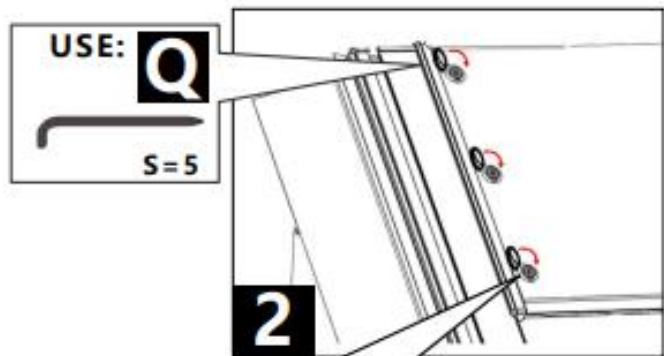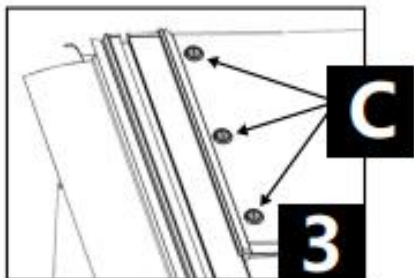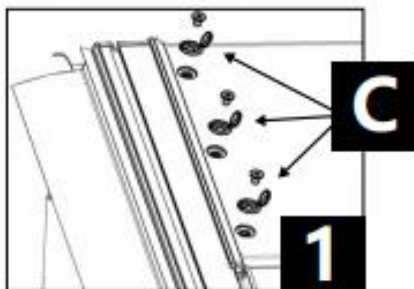

The holes on the cover plate are put into the base and bolts in the fittings C in turn. Tighten the bolts using the accessory Q cross wrench. Finally close the accessory C cover.

TIPS: Pretighten the left bolts, install the right bolts, and then tighten them all at once.

13

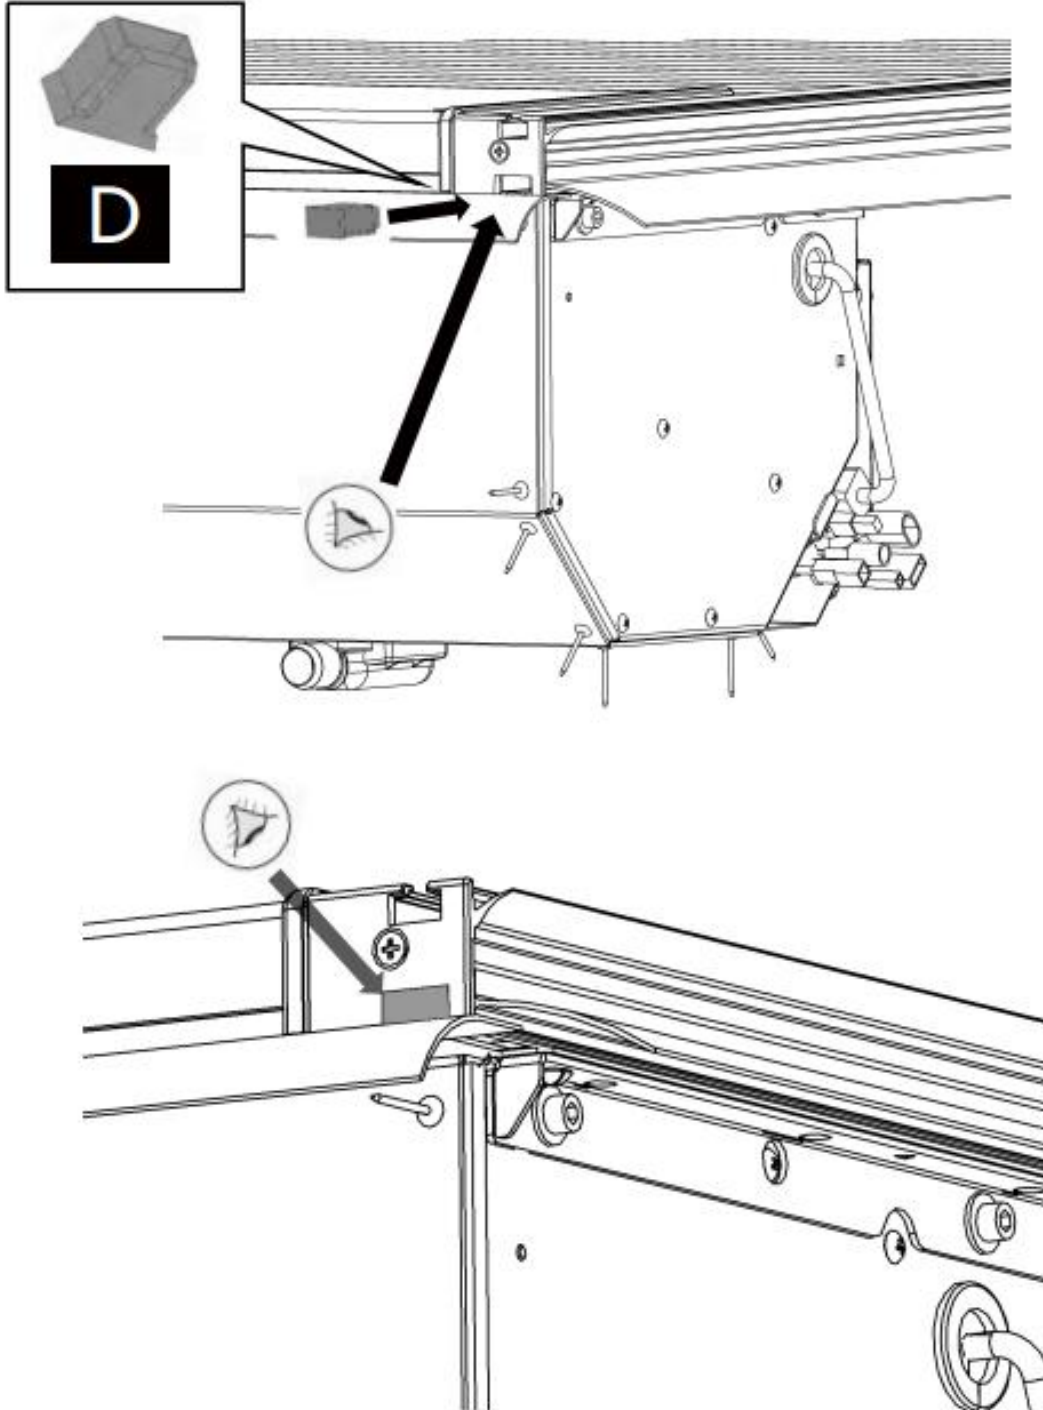


TIPS: The narrow part of accessory D should face down.

Place accessory D on the front end of the side bar as shown.


2.3 Mounting brackets

14

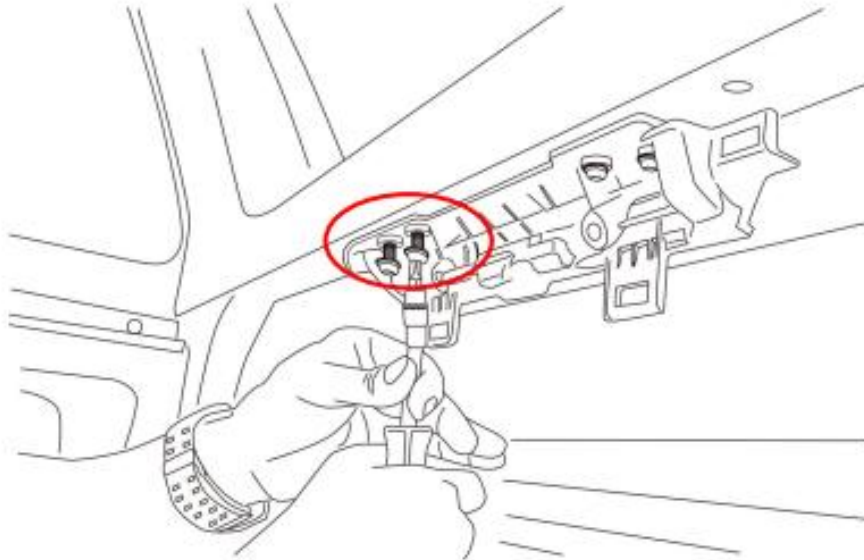


Remove the OEM screws (required for bracket installation) from the plastic trim components along the carriage edges (as picture). Repeat the same procedure for the middle bracket.

15

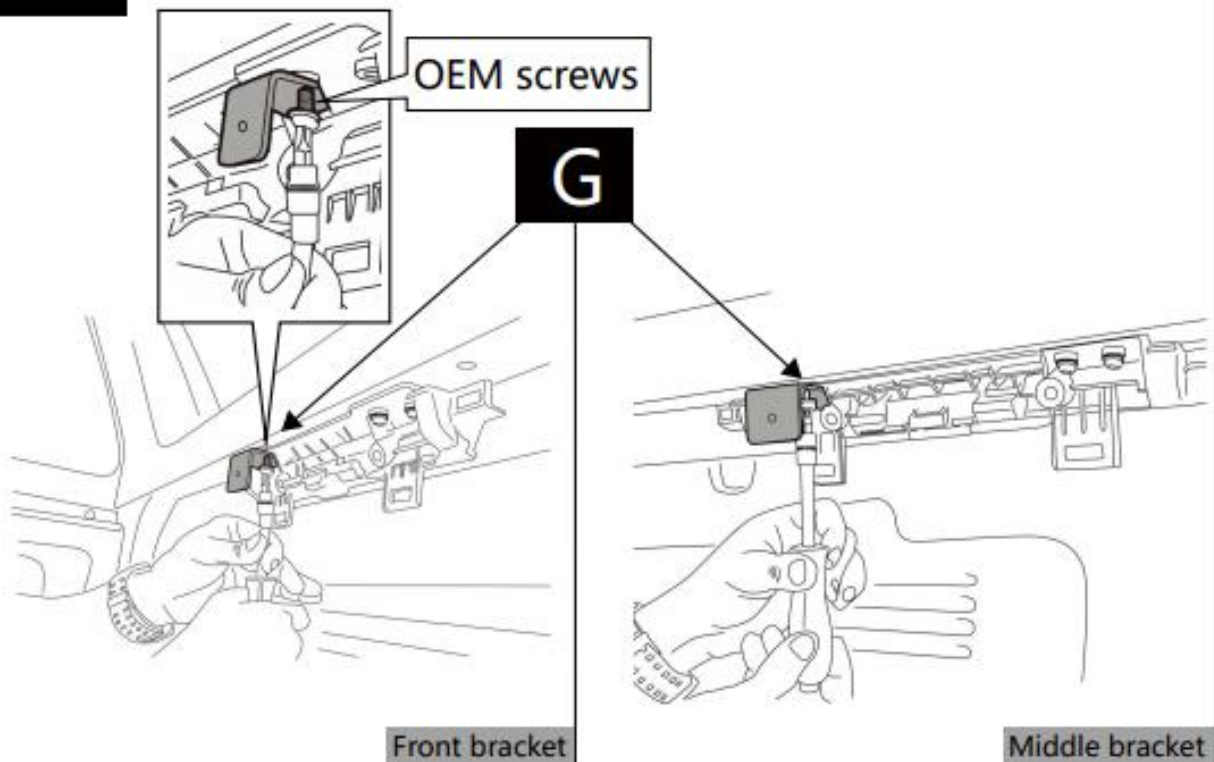


Using the vehicle's original matching screws, install accessory G brackets to both the front and center brackets. Secure the accessory G brackets to the carriage with a wrench (as shown in the illustration) – two on each side (left and right).

16

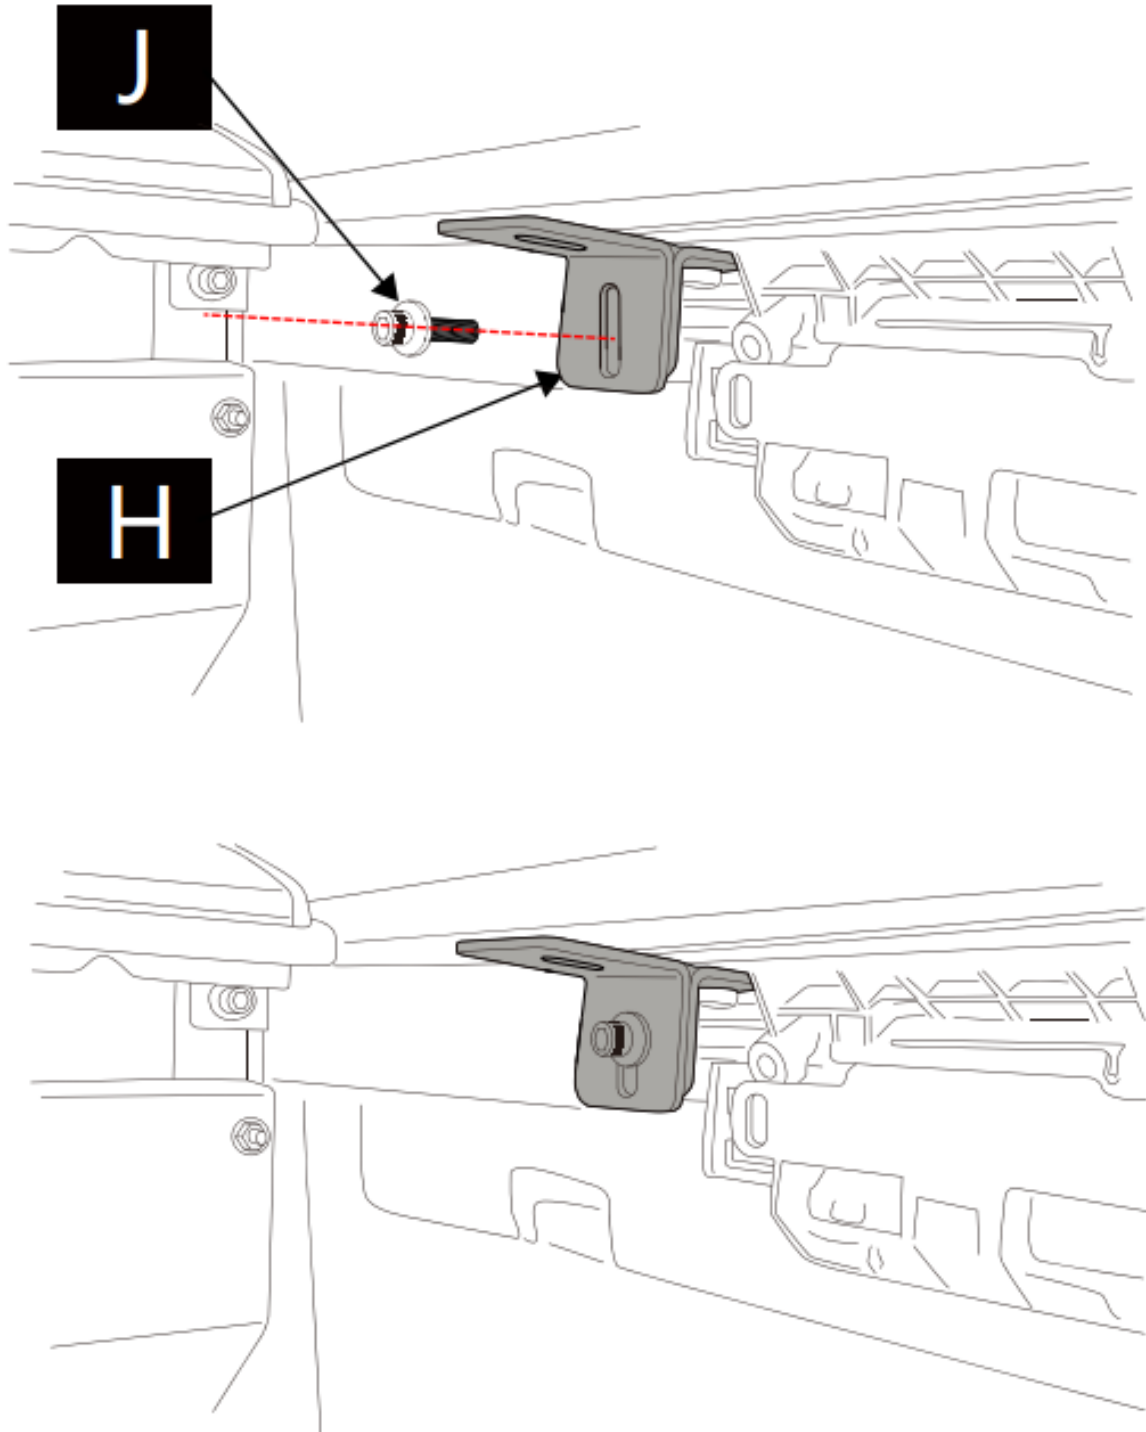

Assemble the screw, spring washer, and flat washer from accessory J, then connect bracket H to bracket G. Secure the assembly by tightening all four screws (two on each side) into the threaded holes of bracket G using a wrench.



17

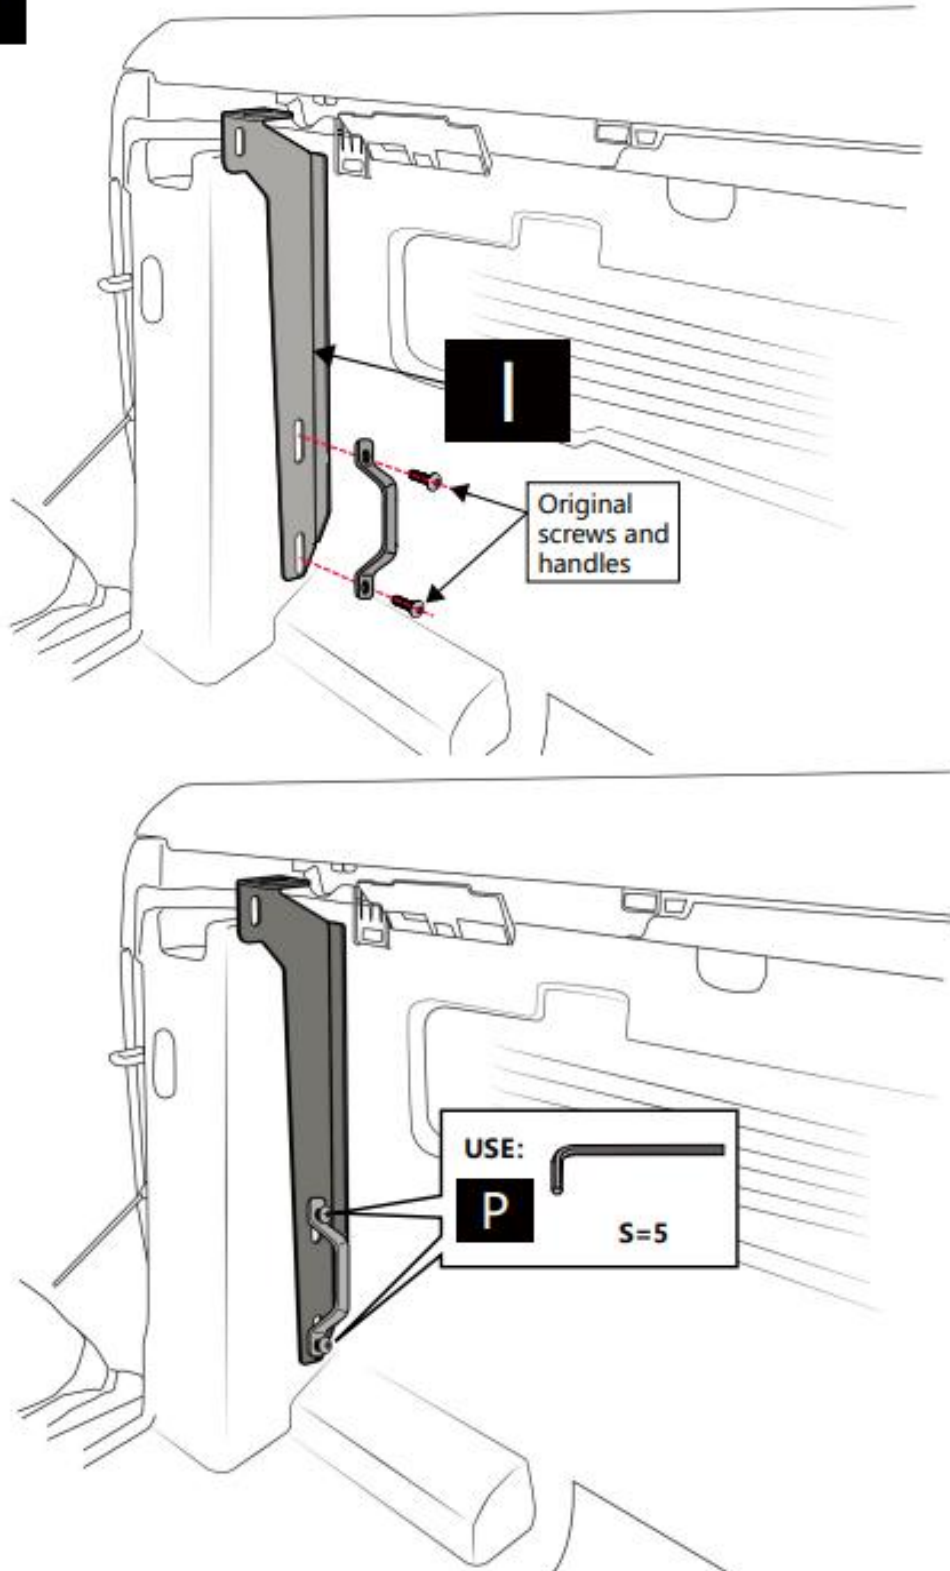

Remove the 2 M8×30 OEM screws of the vehicle tailgate cargo box treasure, install the rear bracket of accessory I in the position of the vehicle tailgate cargo box treasure, and then tighten it with the original screws, the same as the right side.

2.4 Product loading.


18

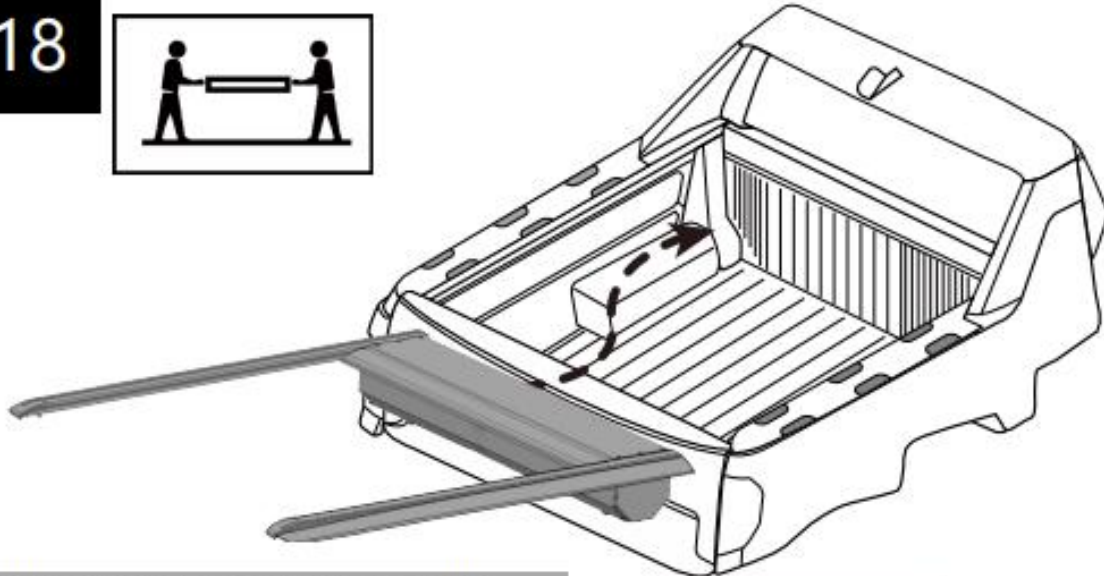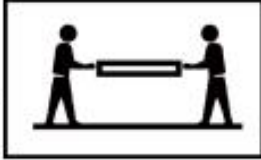

TIPS: In order to personal safety, and the appearance of the product without damage, it is recommended that two people on the carriage, to avoid the process of scratching the carriage and product surface.

Lift the box onto the carriage.


19

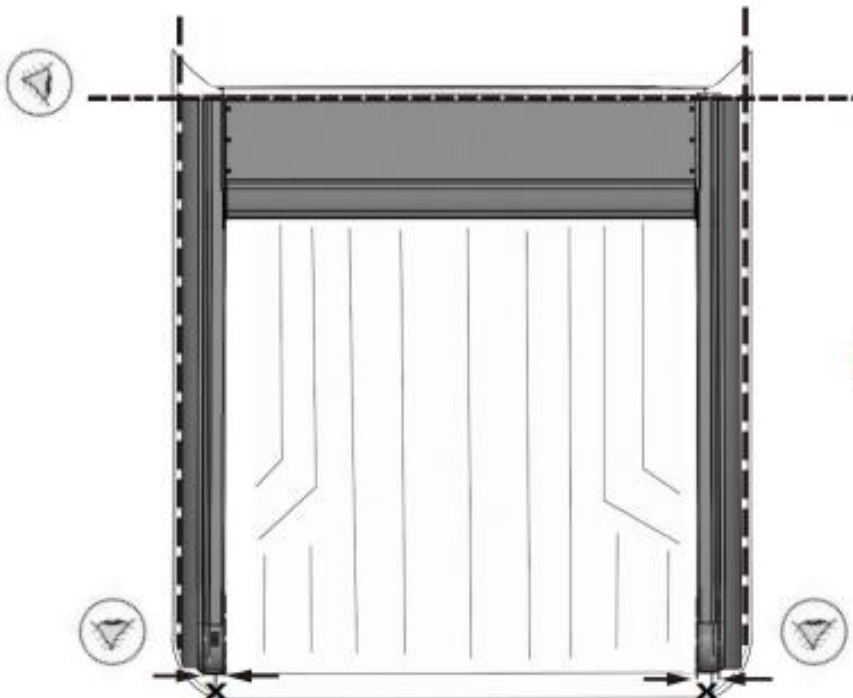


TIPS: If the product after the end of the 1CM-2CM without taking the tail, you need to move the shutter less backward.

Push the rolling shutter against the carriage until the distance between the two side bars and the carriage is the same.


20

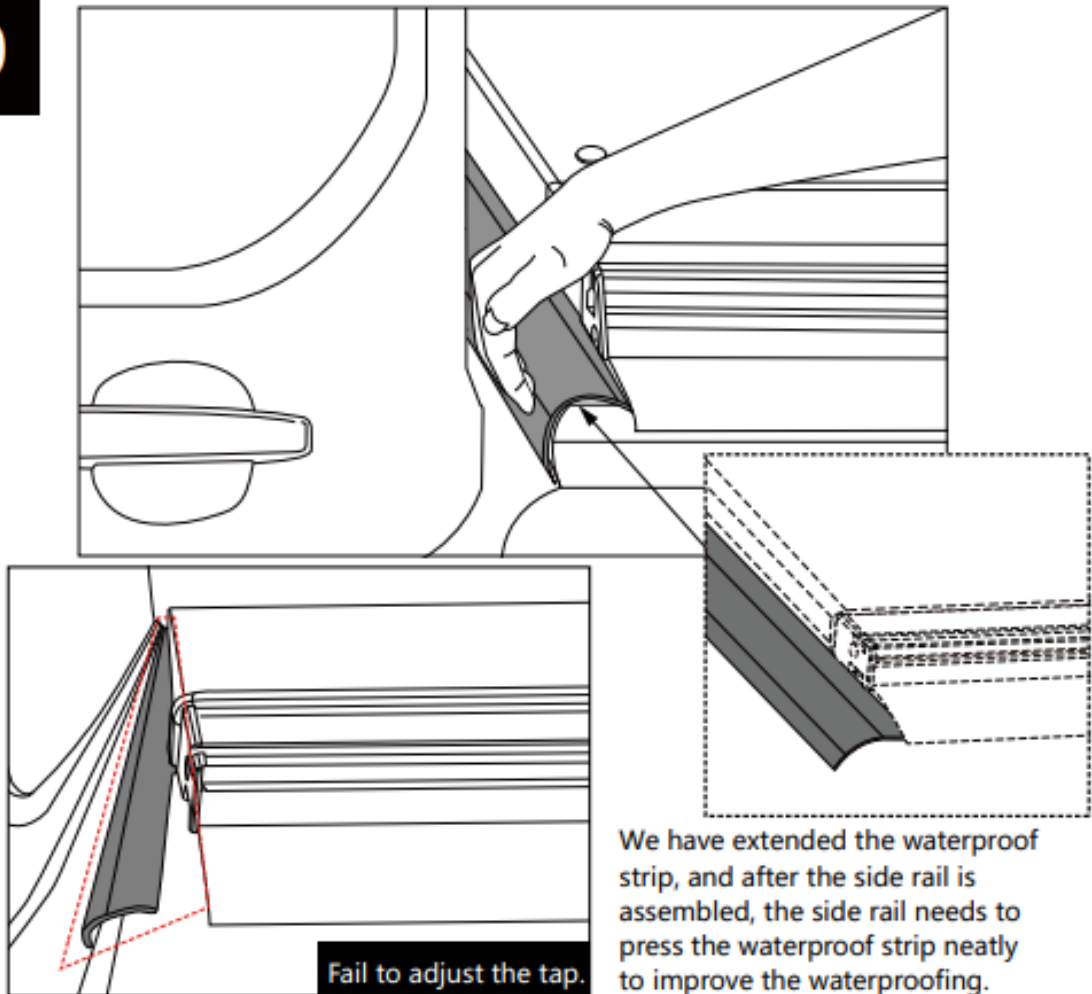


21

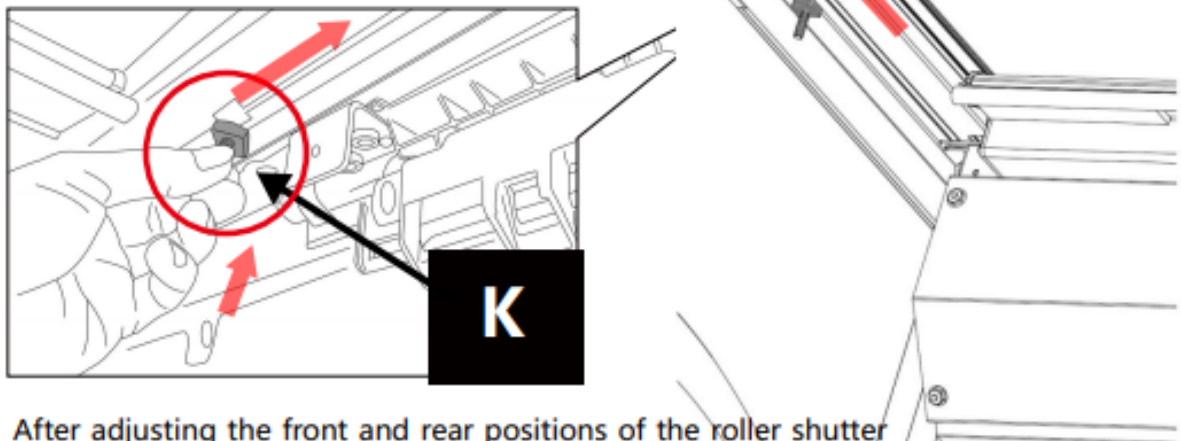


After adjusting the front and rear positions of the roller shutter appropriately, place 3 square head bolts in each of the slots under the left and right side rods of the roller shutter; then pre-tighten the bracket to the roller shutter using the accessory K square screws.

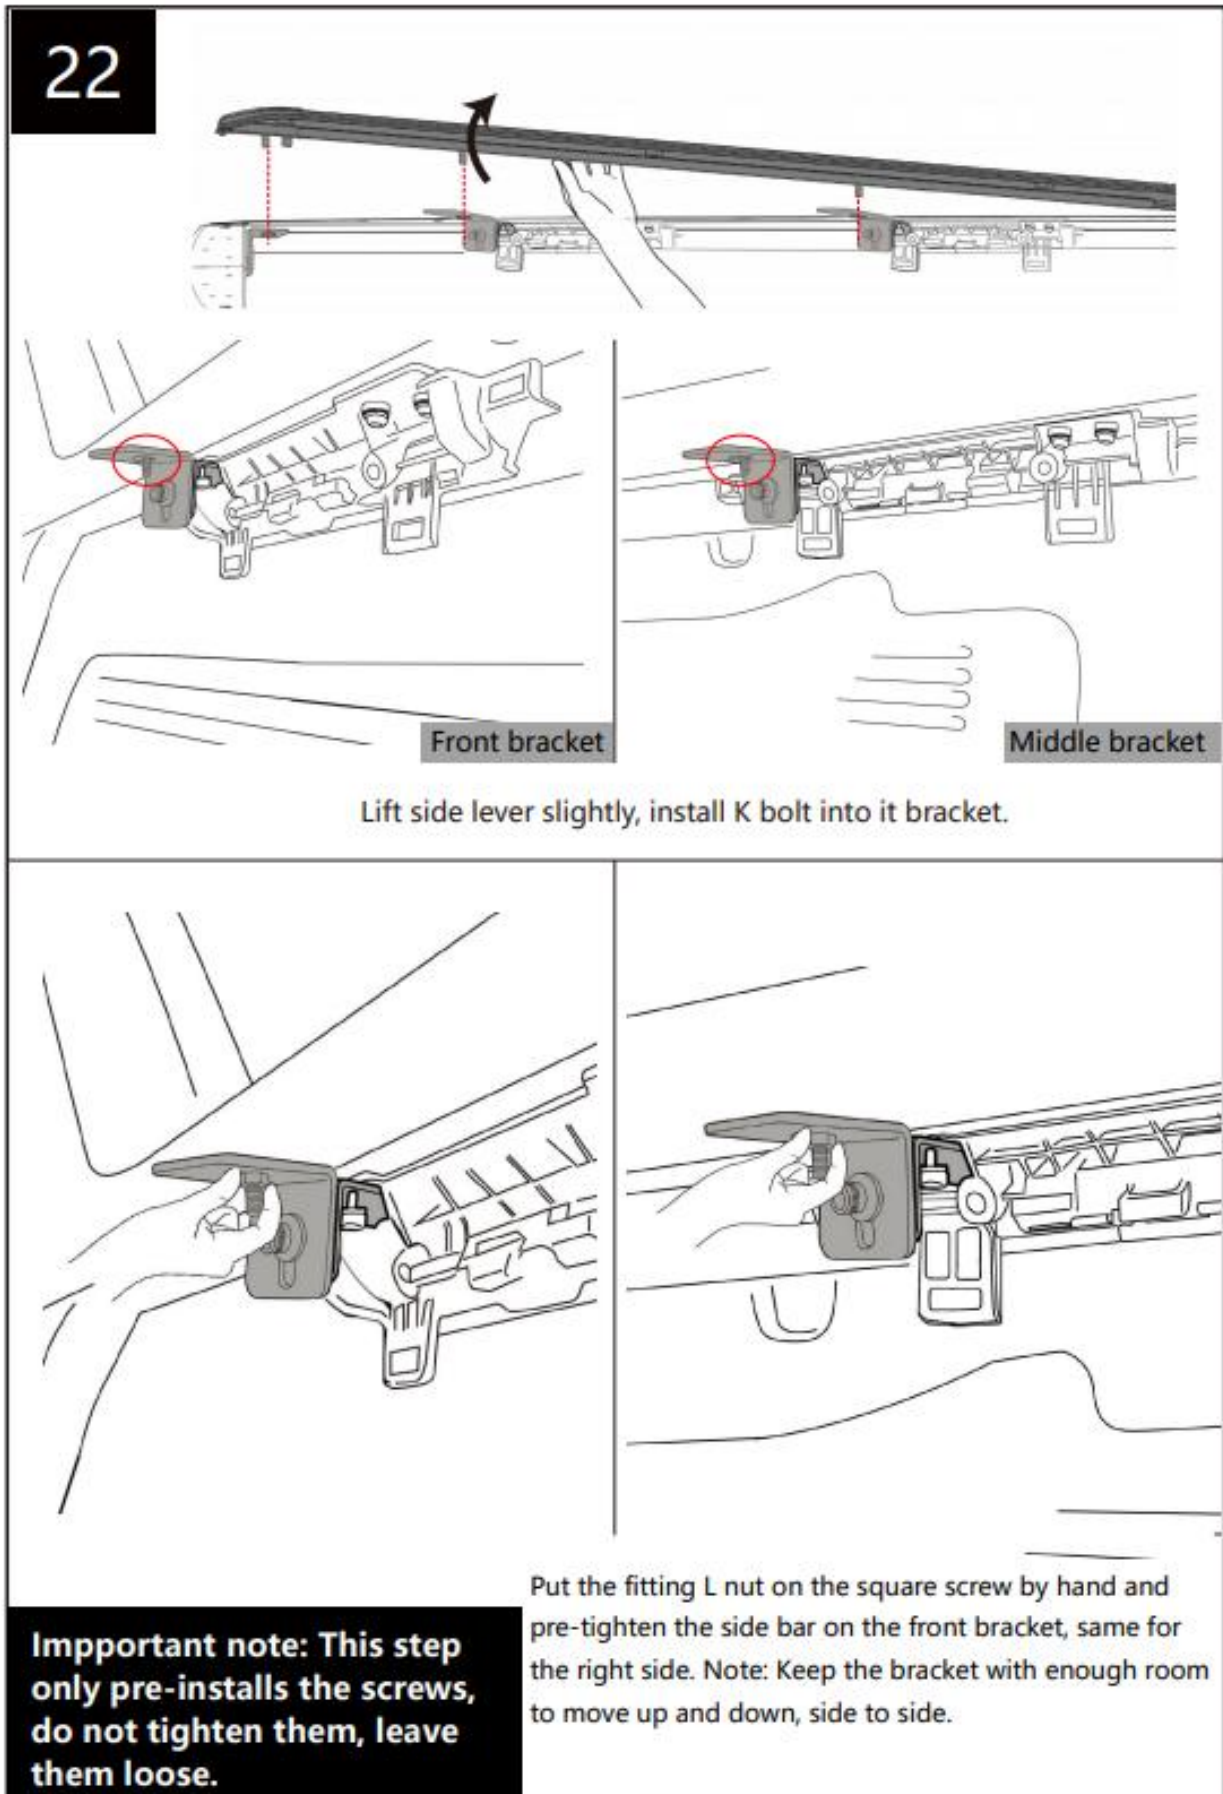

23


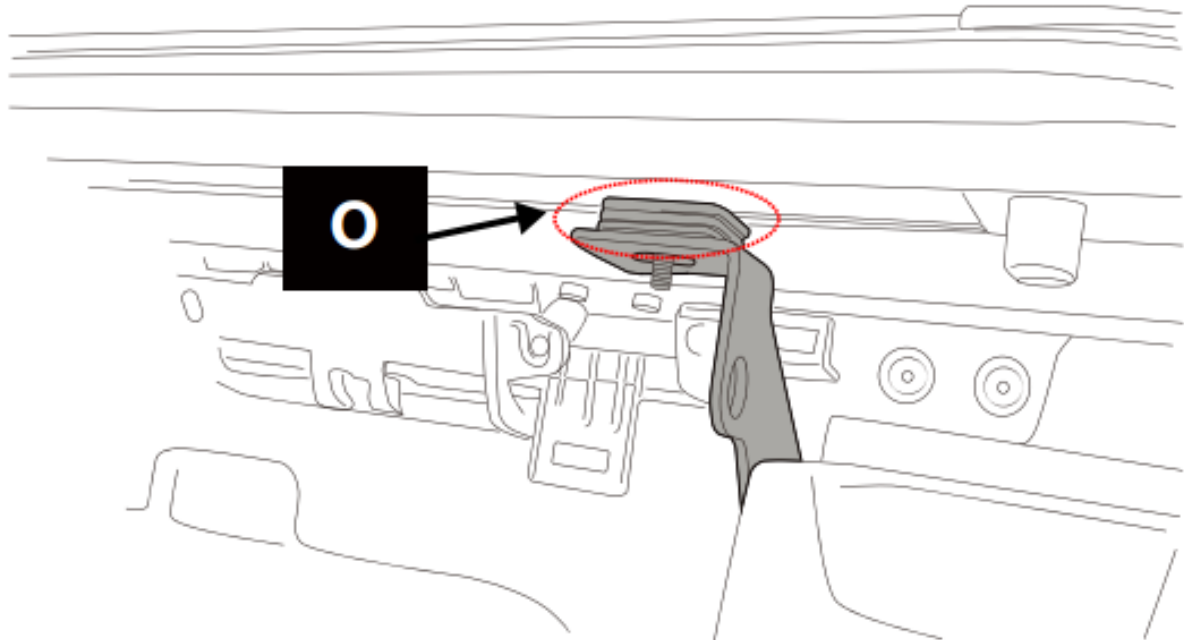


Place the three accessory O square spacers on the rear bracket, then place the square screws into the holes in the rear bracket.

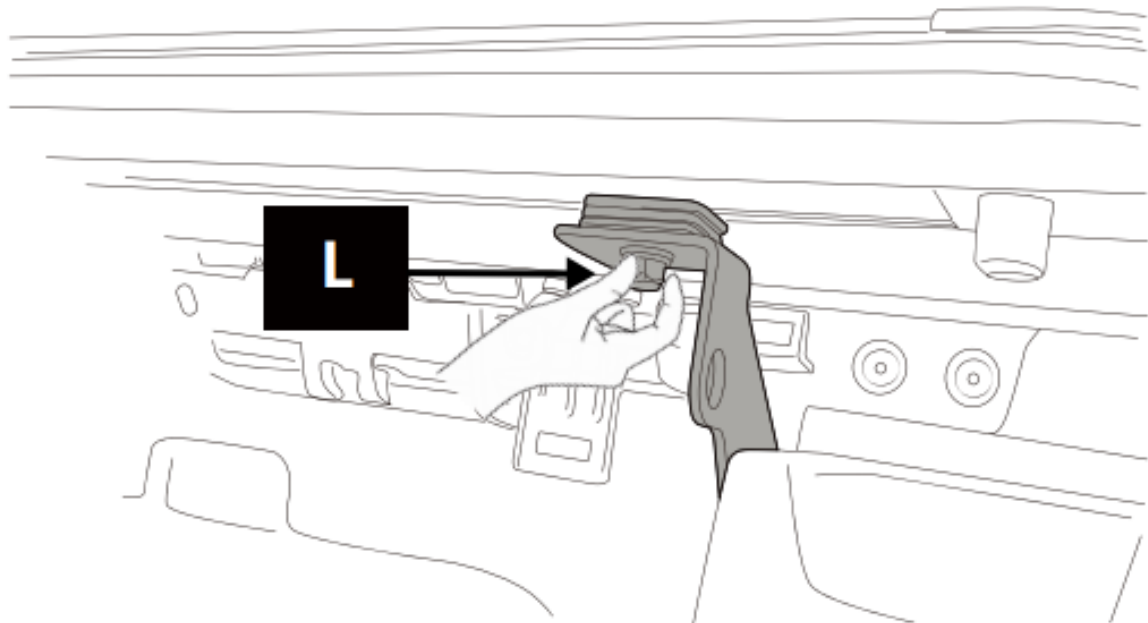


Put the fitting L nut on the square screw by hand and pre-tighten the side bar on the front bracket, same as the right side. Note: Keep the bracket with enough room to move up and down, left and right, same as the right side.

24

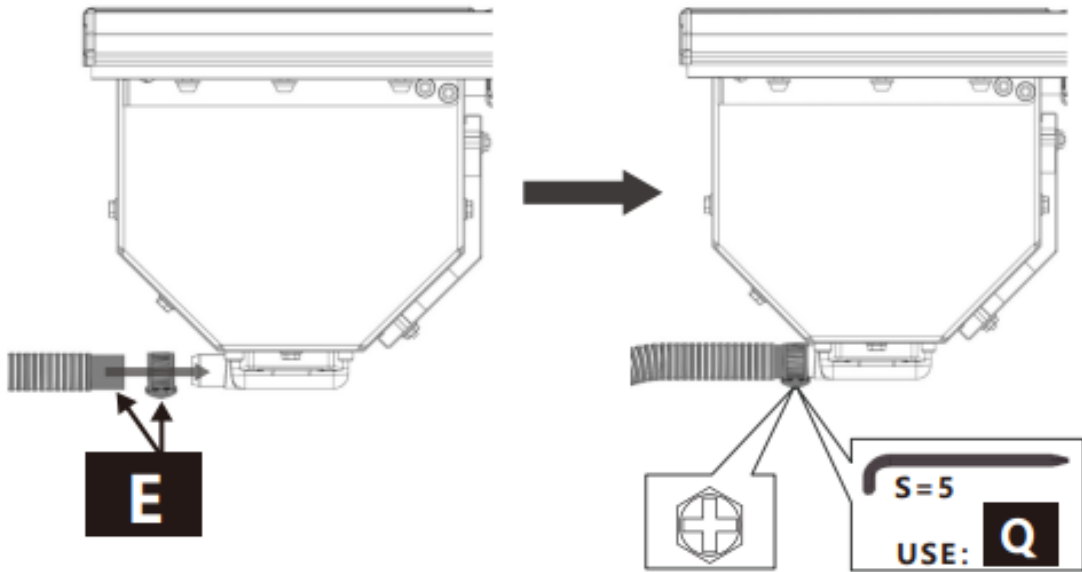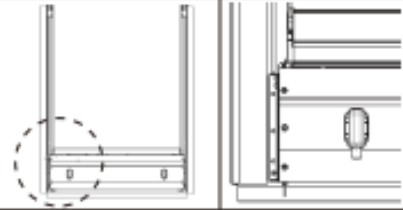


TIPS: Both sides of the side bar drain pipe installed in line.

Use accessory Q Wrench to tighten accessory E bolt.

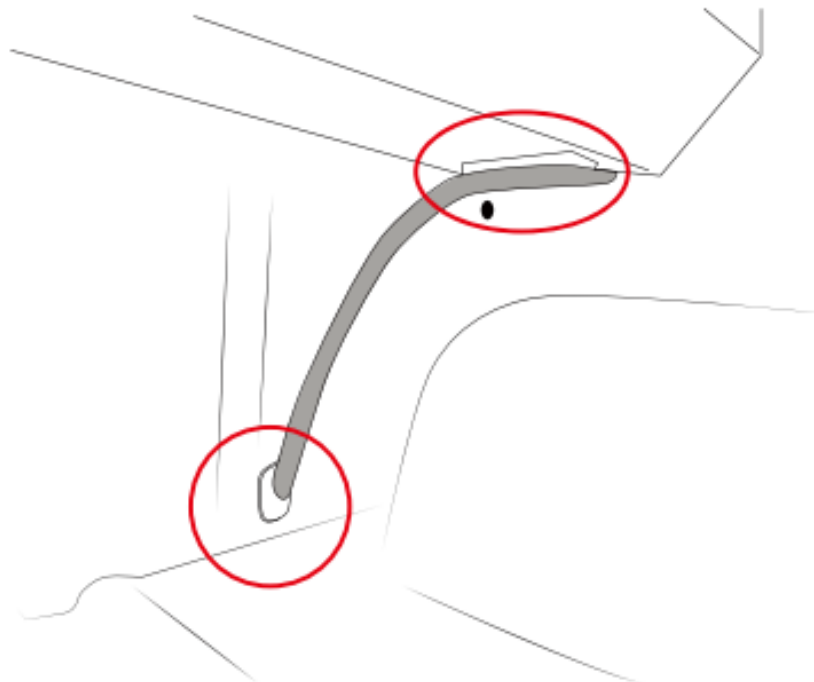


Plug the drainage pipe of the box body out of the car through the rubber plug, the right side is the same

25

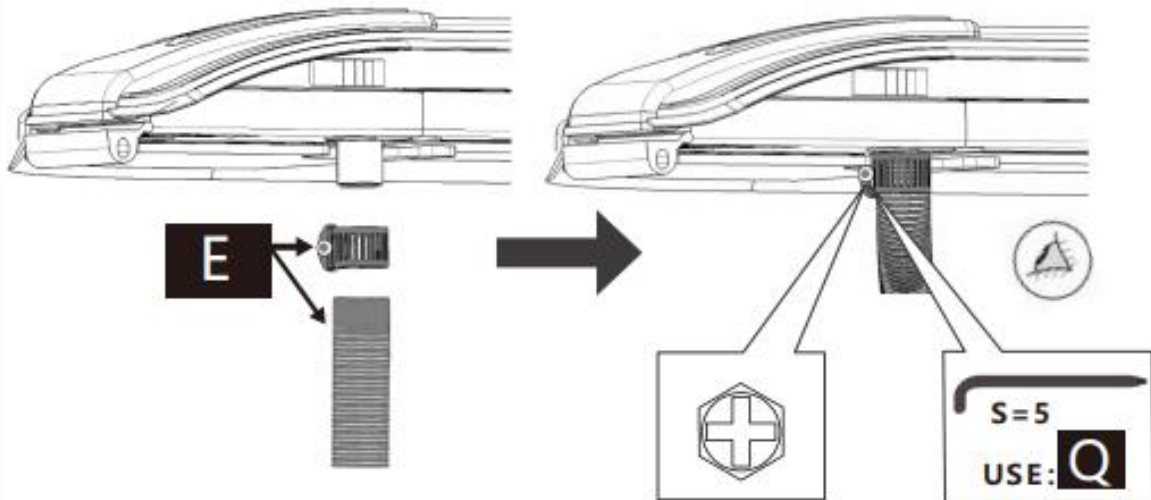




Use accessory Q Wrench to tighten accessory E bolt.

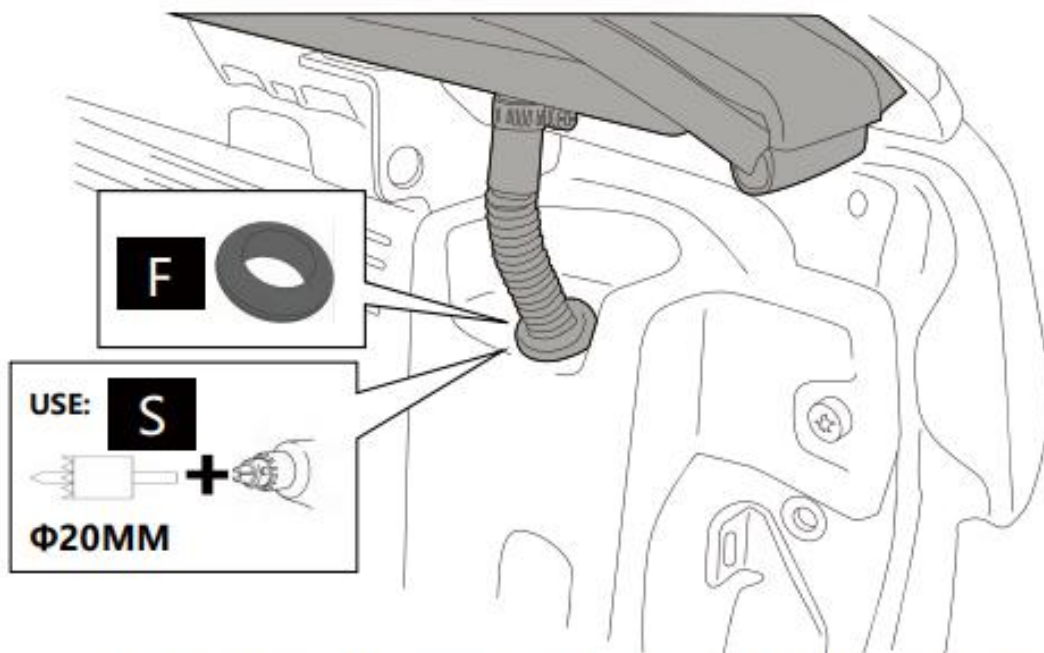TIPS: Both sides of the side bar drain pipe installed in line.




1. If the end of the side rod around the original hole, can be side rod drain through plug out of the car.
2. If there is no hole, you can use the drill $\Phi 20\text{mm}$ with hand drill to open, deburring Cape also need to install accessories F apron, the same as the right side.

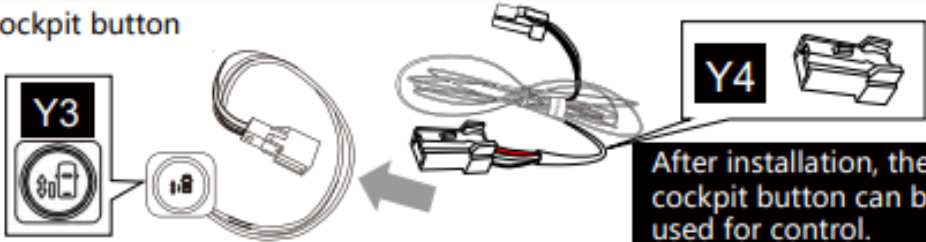
2.5. Wiring	
Necessary accessories for installation	<p>harness (in gray color)</p>  <p>Y1</p> <p>After installation, you can use the remote control key and app to control.</p>
Optional installation of accessories	<p>Original car remote control key signal line (yellow)</p>  <p>Y2</p> <p>After installation can use the original remote key control.</p>
	<p>The cockpit button</p>  <p>Y3</p> <p>Y4</p> <p>After installation, the cockpit button can be used for control.</p>

1. Disaggregation diagram of necessity installation


Points for attention in line arrangement

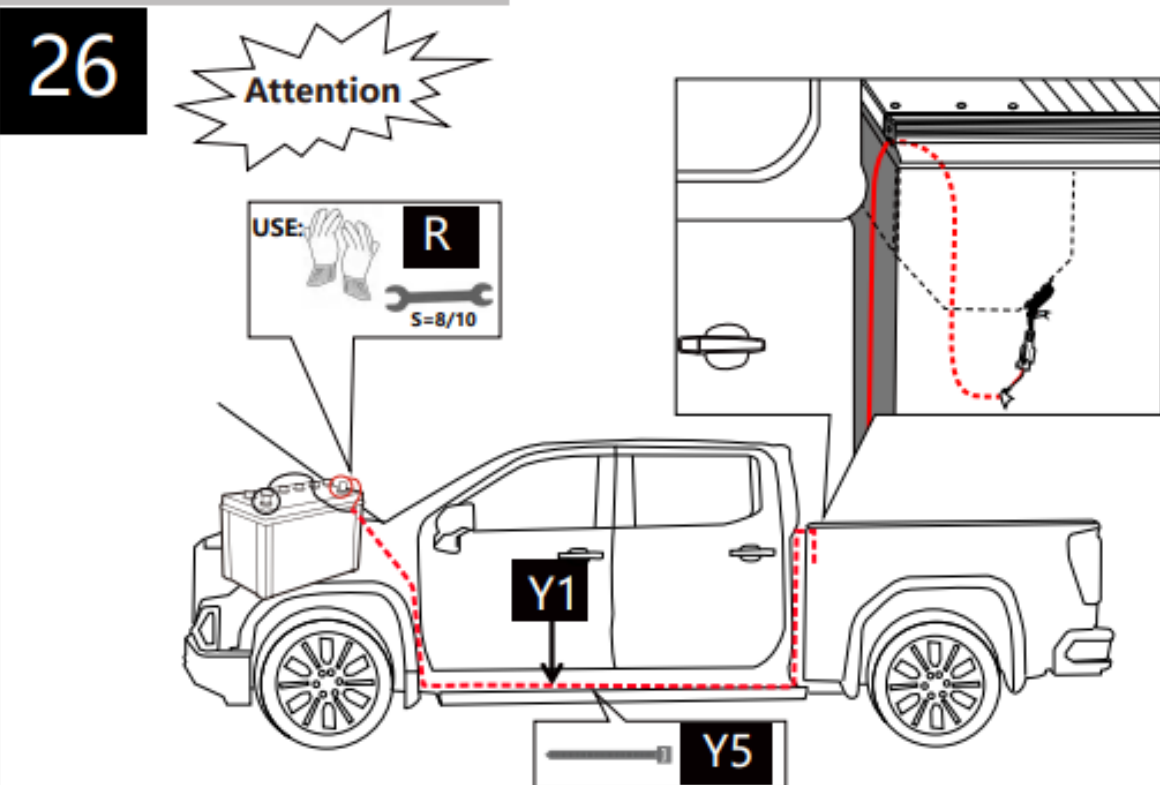

Wear the insulating gloves and open the hood. Loosen the bolts at the positive and negative pole of the original vehicle battery, and install the harness Y1 in the corresponding position of the battery; Tighten the bolts. Route the rest of the harness from the bottom of the car to the trunk bed (fix the harness with N cable ties) and pull it out through the hole of drain tube. Connect harness Y1 (in gray color) with roller gray interface M1A. Harness route need to avoid exhaust pipes, moving parts, vulnerable parts etc., thus to protect the vehicle as well as avoid harness damage.

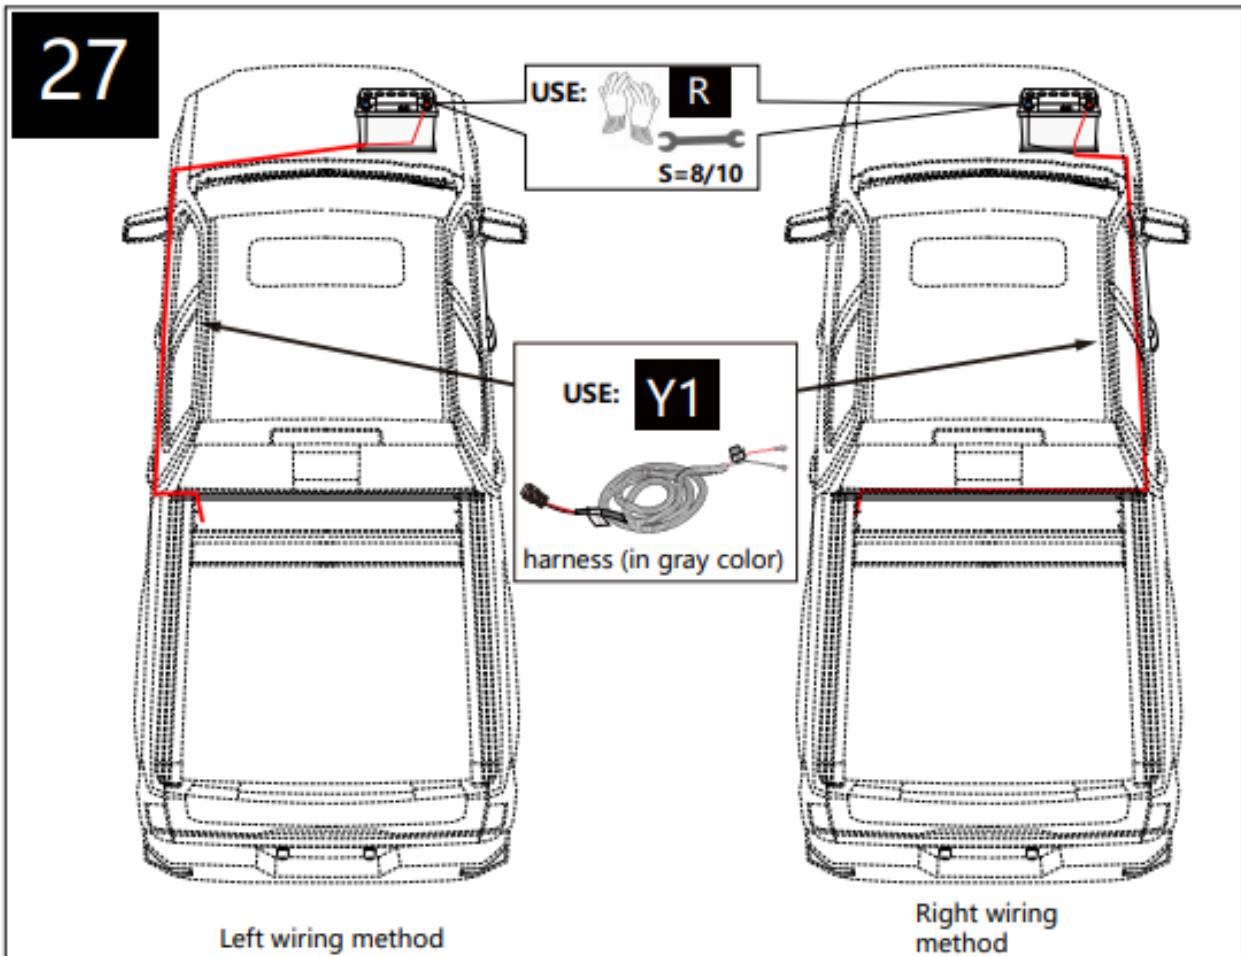

Choose either the left or right wiring method.

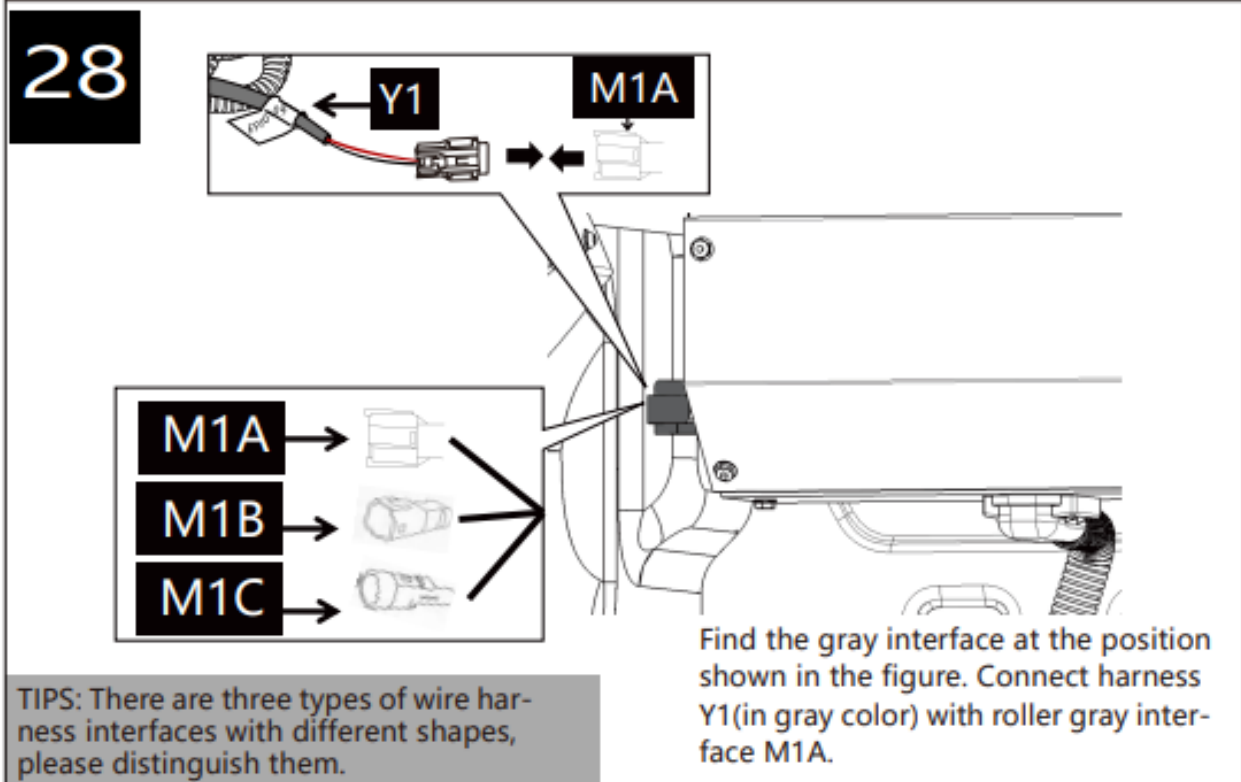

TIPS: There are three types of wire harness interfaces with different shapes, please distinguish them.

2. Exploded view of selective installation

① Installation of the yellow signal wire of the original remote key

29



B-pillar trim





Wire Harness Clip

Open the trim panel of the B-pillar on the driver's side containing the wiring harness clips as shown (fig. 1, fig. 2).



3


Locate the unlocking signal harness (green and brown wires) as shown in Figure 3 and connect the yellow wire to the key unlocking signal wire as shown in Figure 4: Wear insulated gloves, use scissors or a razor blade to trim to the bare metal part of the original wiring harness, accessory Y2, wrap the harness of accessory Y2 around the original wiring harness, and then wrap the bare metal part tightly with electrician's tape. Pull the wiring harness out of the hole in the drain panel as shown in Figure 30 (the harness can be secured with accessory Y5 cable ties). NOTE: Avoid high temperature, moving parts such as engine, steering, exhaust, moving parts, and wearing parts in the path of the wiring harness. It is easy to cause damage to the vehicle and the harness.

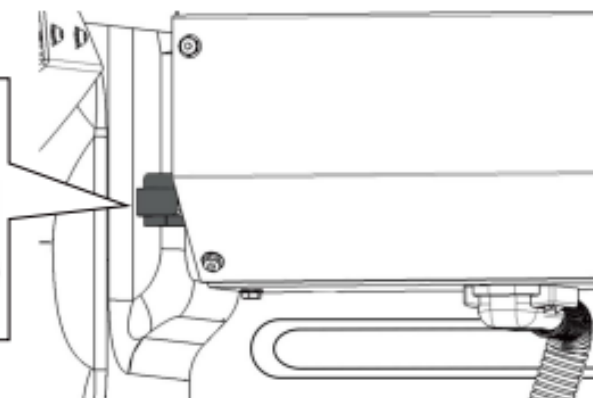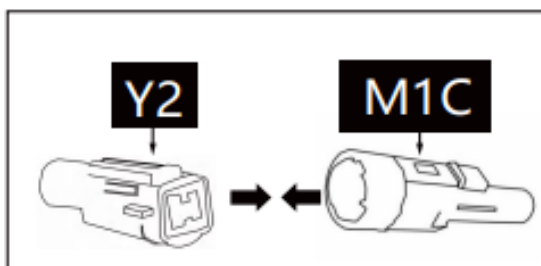

Locate the M1C black connector as shown in the diagram and connect the accessory Y2 original remote key signal cable (yellow) to the plug.

② Installation of the cockpit buttons

30

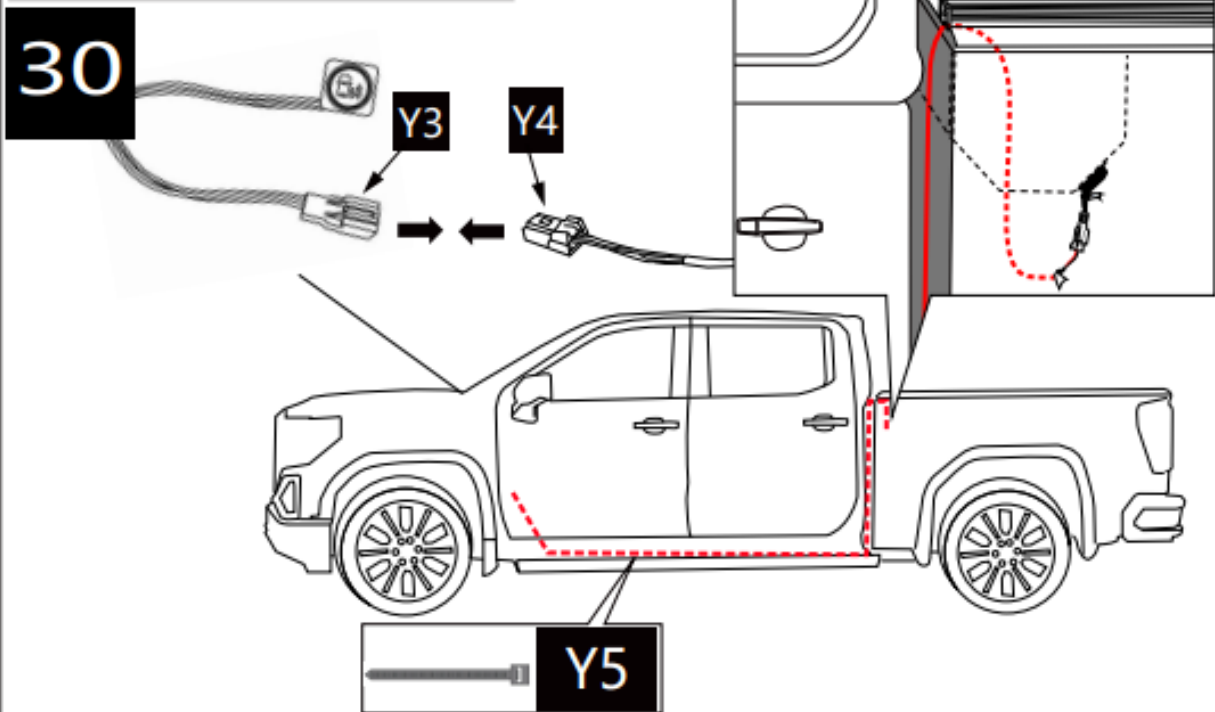


Connect the button wire (white) of accessory Y3 to the signal extension wire (white) of accessory Y4, and pull it to the driver's seat through the hole in the picture (fix the wire harness with accessory Y5 zip tie), Please note that the wiring harness route should avoid exhaust pipes, moving parts, vulnerable parts, etc., in order to protect the vehicle and prevent damage to the wiring harness.

31

Attention

Accessory Y3 button can be installed in the blank position of the multifunctional button in the driver's seat, and the wiring harness can be hidden inside the trim panel.



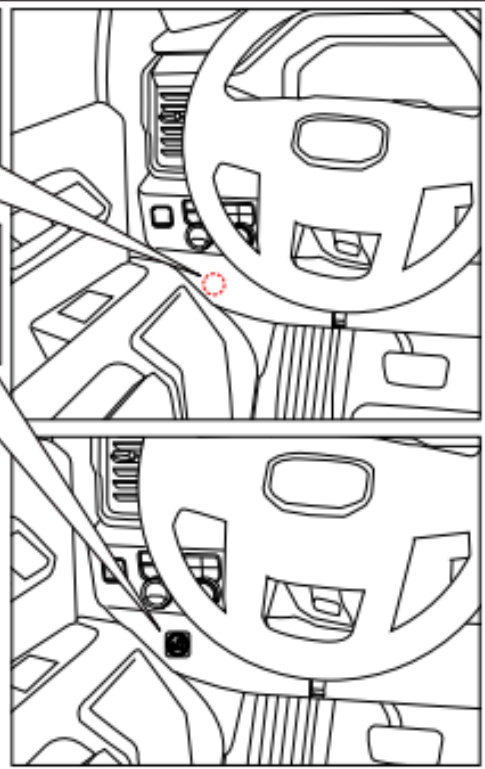


- 1: This is not a mandatory installation option. Without installing this button, you can still use app or remote key to control the roll cover,
- 2: The installation position of the Y3 button is shown in the figure, and it can also be placed in other positions. The installation position should not be placed directly in front of the driver's knee to avoid accidental operation of the button by the knee,
- 3: This button is located inside the cab and does not have waterproof function. Please do not come into contact with water as it may cause a short circuit.


Important reminder: You can use a 20mm drill bit to drill and install Y3 button.

2.6 Adjust/check (Gage M5 or M6)

32

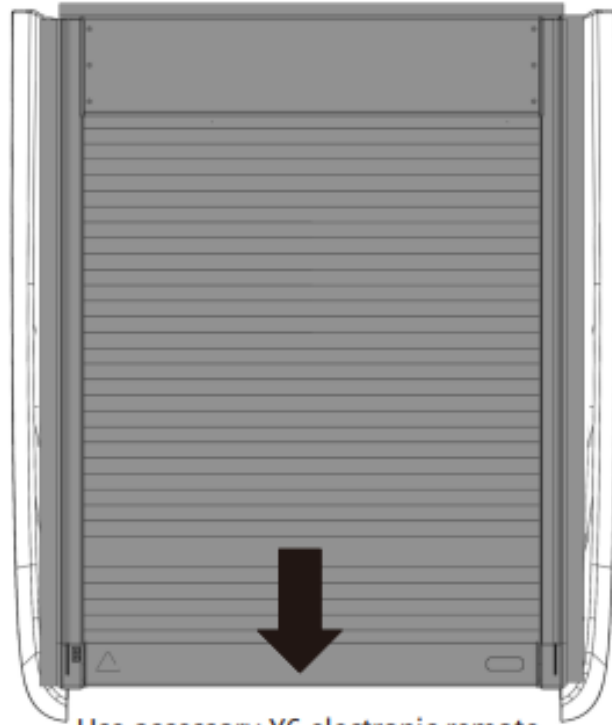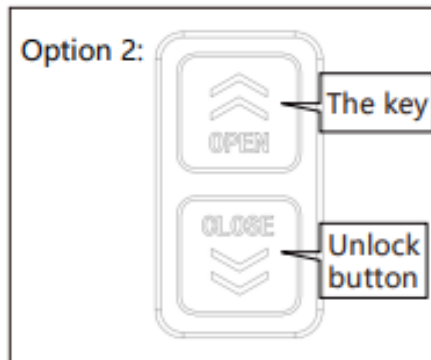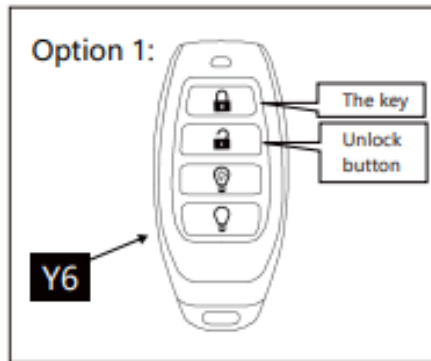

Use accessory Y6 electronic remote control to click the key/Open the lock button, test the normal operation of the shutter.


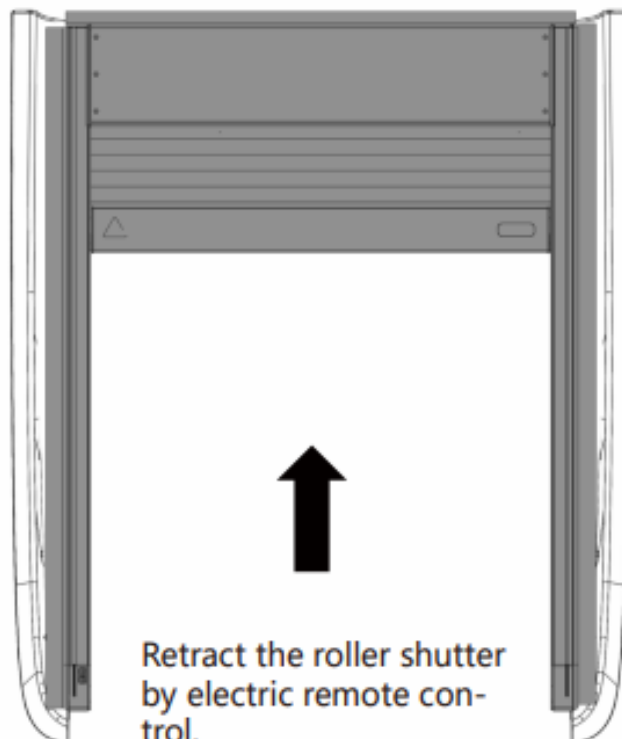



Retract the roller shutter by electric remote control.

Option 1: Accessory M5

33

Method 1: Adjust the opening distance at the rear ends of the left and right side levers. As shown in the figure below, insert both ends of the adjustment rod into the side lever sliding grooves. Ensure the lateral play does not exceed 2mm when wiggling. Test the roller shade installation by moving it back and forth parallelly inside the side levers several times to verify smooth operation, then finally push it against the end stop. Simultaneously push both side levers toward the center and make fine adjustments with minimal force.

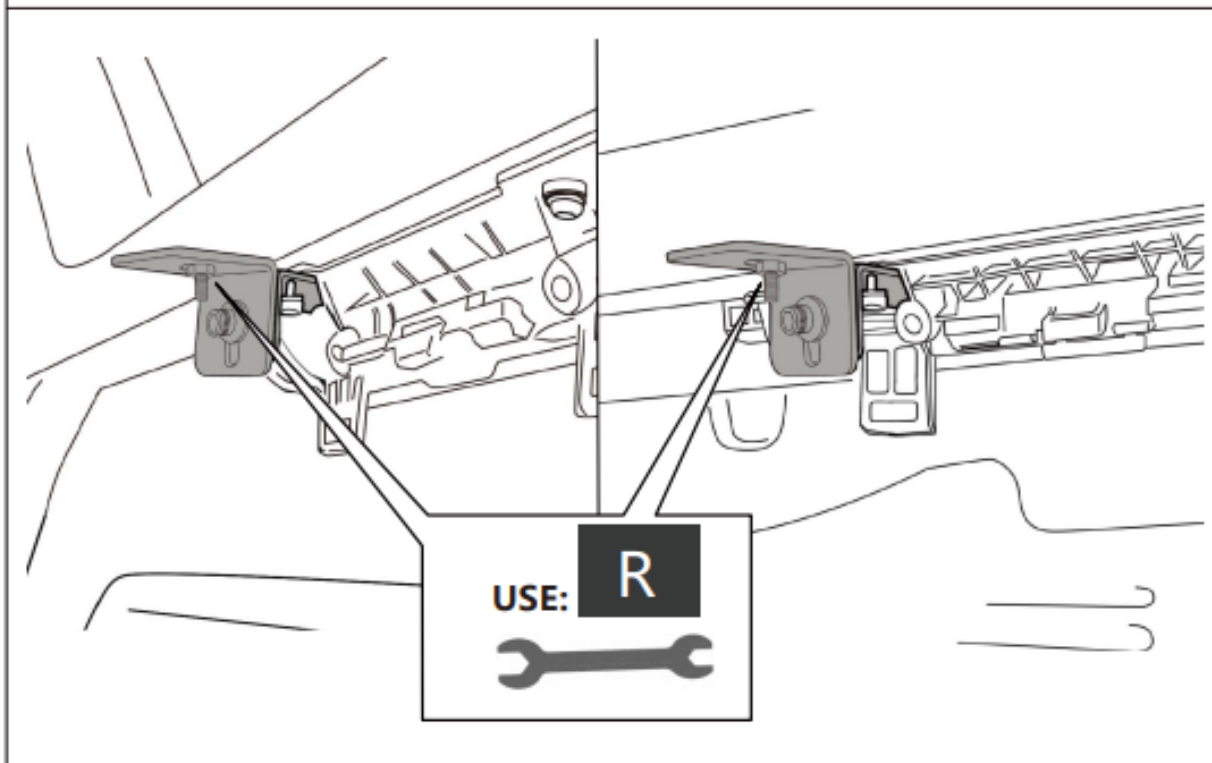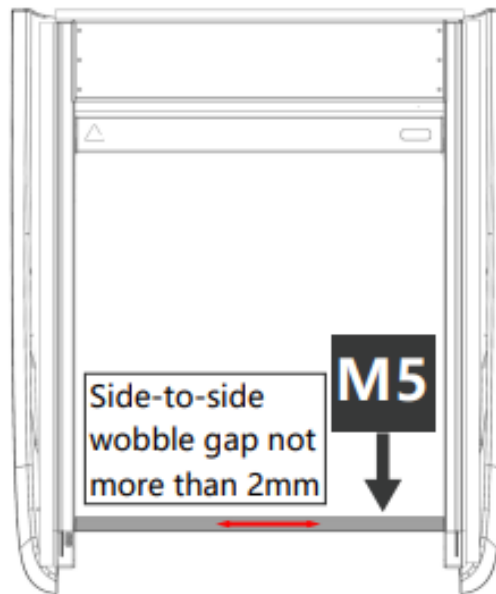


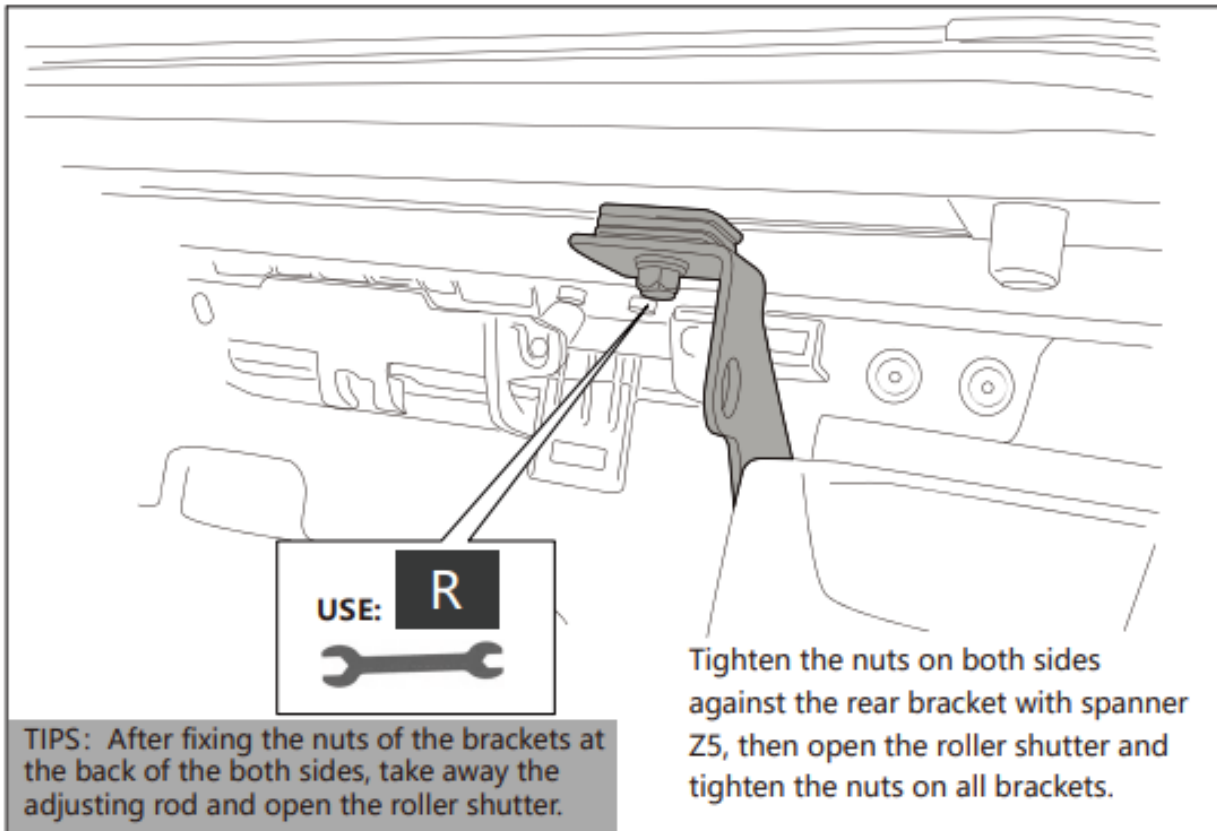



Option 2: Checker M6

34


M6

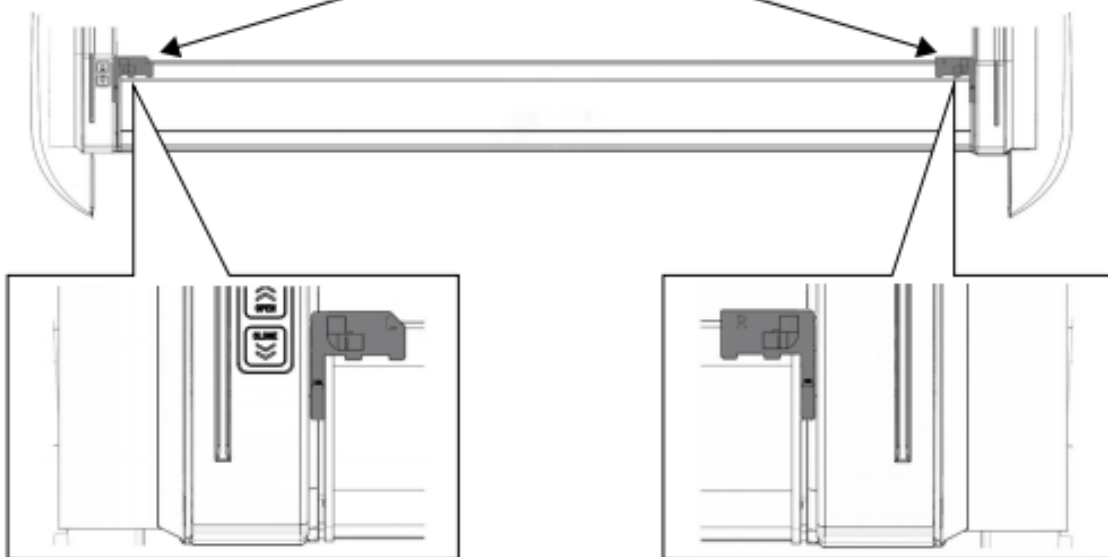

Method 2: Close the shutter and place the checker fitting R between the tailgate page and the end of the side bar as shown above, a gap between 7-9mm is optimal.

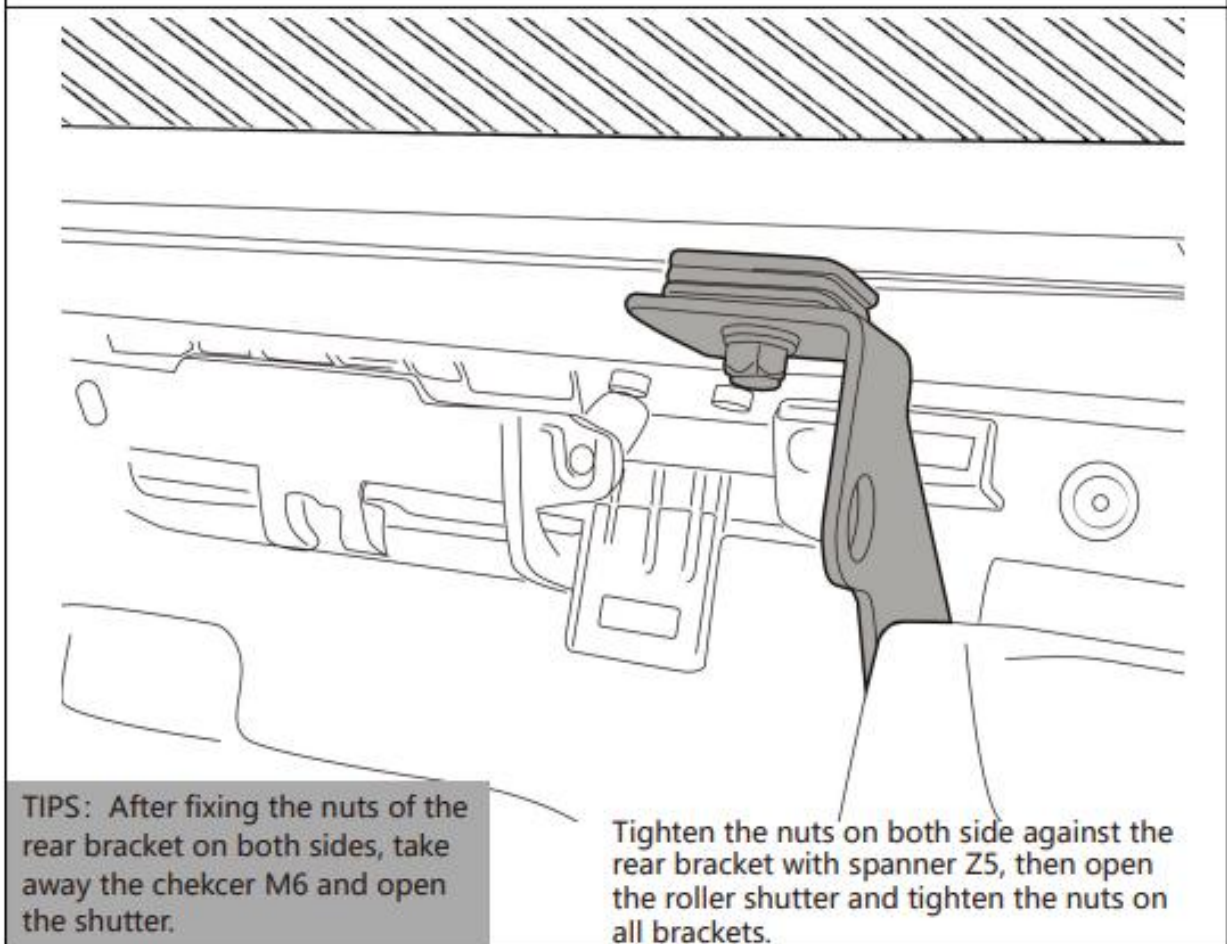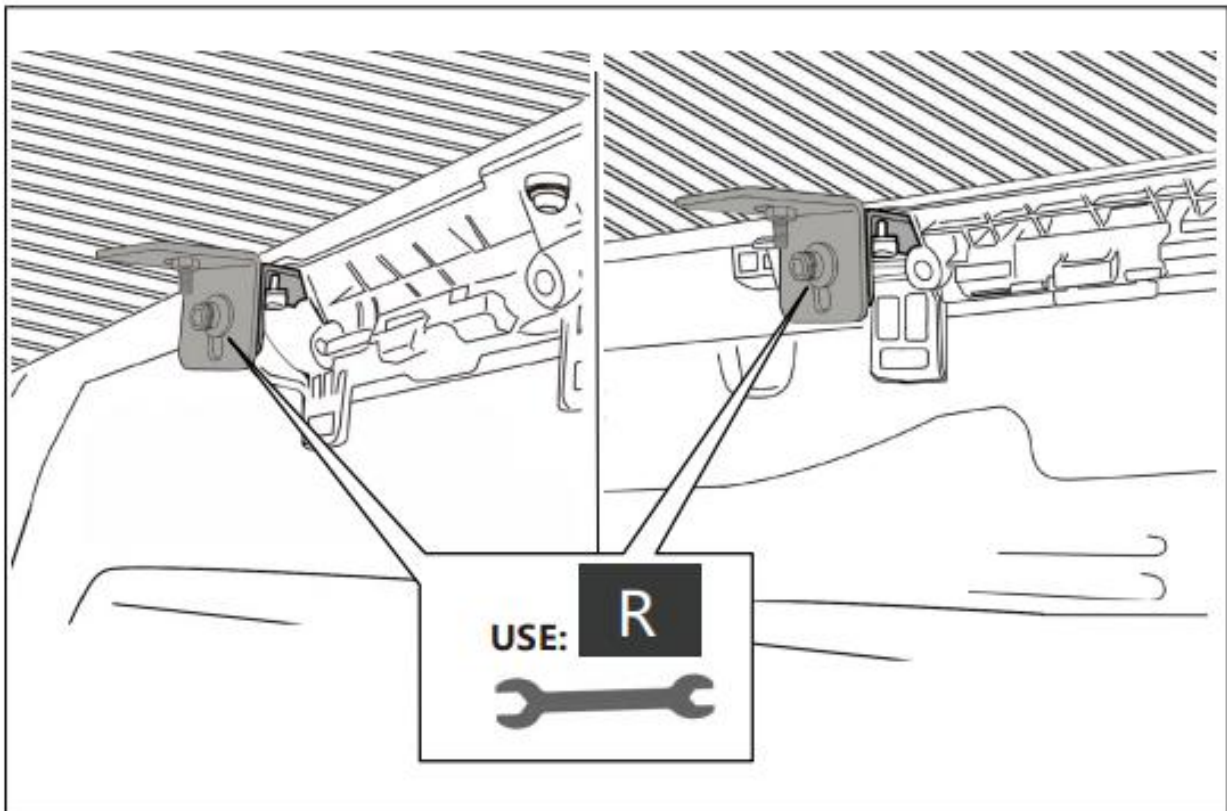


35

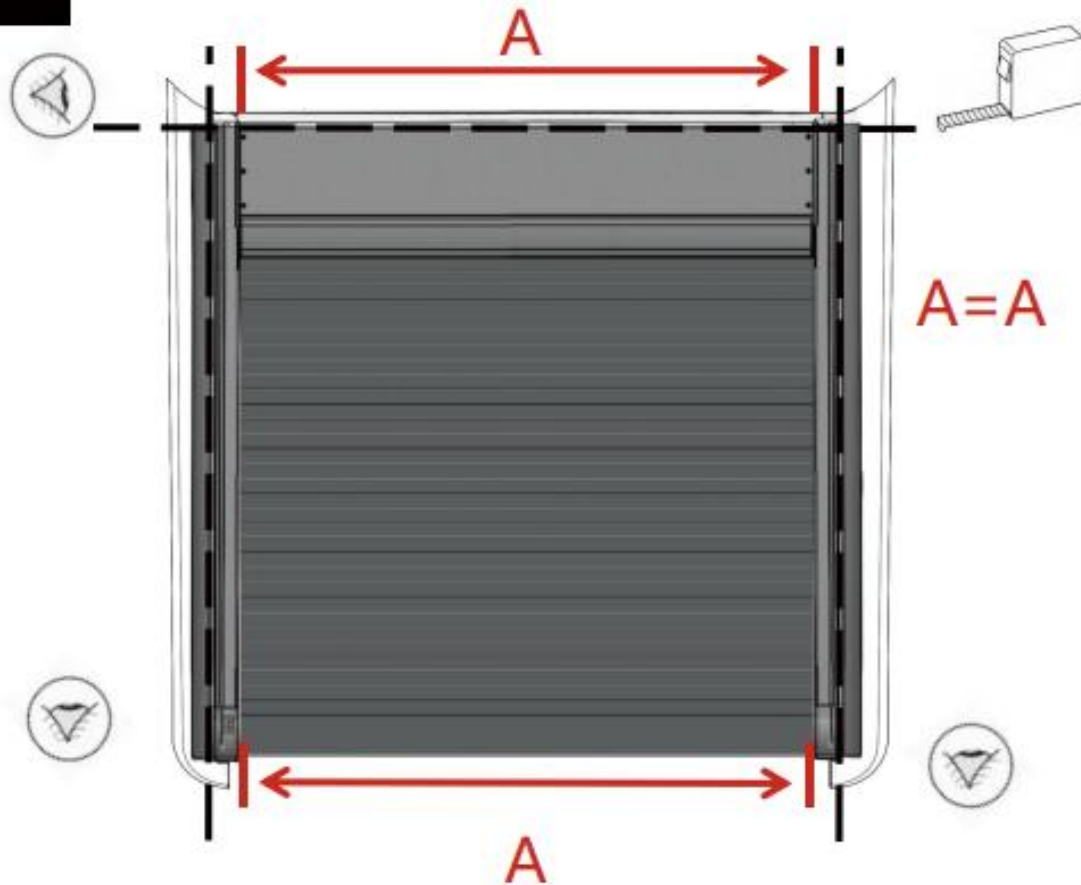

Make sure all the bolts are tightened, close the shutter, observe whether the product is parallel, can use a ruler to measure the gap between the front end and the back end of the product is consistent, the difference is within 2 mm is the best state.

Replace the battery with the remote control:

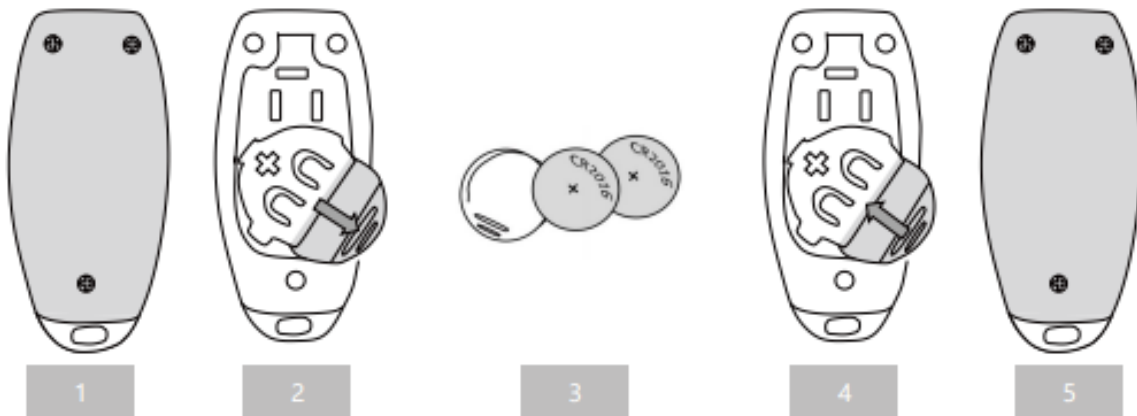


Remote Key Extras

Key combination function	Sound of successful operation	Operation	Remarks
Code Match	1 long and 1 short	Press both Open & Close button at the same time.	The operation is effective within 5s after power-on.
Open/close the cover in place	1 Long	Press Light Off button 3 times.	No time limits for this operation, but the 3 times press must be continuous.
Initialize the cover position	1 long 2 short	Press both Light On & Off button at the same time twice in 3S.	This operation if effective only when the cover is completely closed.
Adjust anti-pinch strength	1 long 3 short	Press both Close & Light Off button at the same time twice.	3 strength levels switch in circle (the default setting is medium strength).
Adjust the running speed	1 long 4 short	Press both Open & Light On button at the same time twice.	3 strength levels switch in circle (the default setting is medium strength).

3.2 Key Fob Control

	Operation	Cover State	Remarks
	Press Unlock 3-5 times continuous	Cover open	Press 3 to 5 times in 2 seconds to be effective, more than invalid.
	Then Press Unlock 1 time	Cover stop	This operation is only effective under cover moving status (press Unlock 1 time to stop the cover); If not under moving status, this operation is invalid.
Press Unlock twice	Light on	When the cover is under closed status, press Unlock twice in 2 seconds, then the light on (time-out invalid).	

3.3 Front Button Control

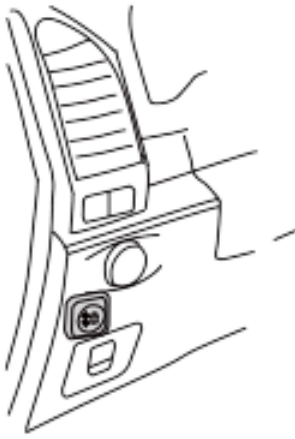	<p>In order to facilitate user' s operation, we offer an extra option with button control near driver' s seat, so the user can easily control roller.</p>		
	Operation	Function	Remarks
	Long press (about 1s)	Cover open	This operation is only effective when the cover is under closed status, after the operation of the cover to open, and in the open button light has been lit.
	Press again	Cover stop	<ol style="list-style-type: none"> 1. When the cover is under moving status, press again to stop. 2. When the cover is stopped and under an open state, press again to close. 3. When the cover is under closed status, the operation is invalid.
Short press	No react	To avoid mis-operation, if the cover is not activated by long press, short press is considered by the system as mis-operation, do not react.	




4. Maintenance and repair

4.1 Solutions to common problems.



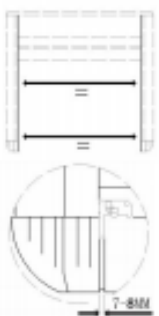


Alarm sound for abnormal operation of roller shutters

Abnormal sound	Reason	Remarks
2 short	Over current in motor operation	Operating resistance is too big. Mainly because run into obstacles, or not on time maintenance.
3 short	Time out for motor operation	Cover one-way running time for more than 15S.
4 short	No Hall signal detected	Motor or controller failure, or not well connected with the plug.

Rolling shutter failure analysis:

Number	Common fault phenomenon	Analysis	Pics	Solutions
1	Abnormal sound-2 short	1.Side bars are installed inward or outward and not placed parallel. 2.Big resistance leads to non-smooth operation. 3.Side bars deform due to heavy load for sport bar/ladder rack etc.		1. Use the installation gauges. 2. Adjust the side bar installation to make sure the front and rear distance are the same. 3. Pull the roller out completely and measure the gap between tailgate bar and side bar ends, gap between 7-8mm is the best. 4. Check if the side bar is deformed by the pressure of other heavy load parts. 5. Adjust the brackets of side bar installation, to make sure the side bars are parallel to the roller.
2	Abnormal sound-4 short	No Hall signal detected.		1.Unplug and replug the controller connector as well as the motor. 2.Replace the controller or motor.
3	The remote key can not control the cover	1.The cover not power on. 2.Low battery in the remote key. 3.Unmatched code with controller.		1.Check if the LED light on controller is flashing to confirm power supply is okay. If no power, check if the positive fuse of roller burnt out. 2.Check if the indicator on remote key is obviously dimmed or no light when you press the button, then replace battery. 3.Do code match for the remotes.

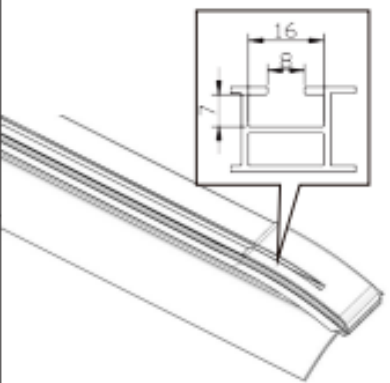4.2 Rolling shutter failure analysis.

 Keep the drainpipe free from blockage.	 Clean the litter before use.	 Compatibility:M8 bolt.
 Clean and lubricate the canister every 6months.	 Clean and lubricate the side bars every 3months.	

5. Helpful Maintenance Hints

1. To assure quiet and smooth operation of your roller, please regularly clean and lubricate the rail tracks and canister. It is recommended every 3 months or 6,000 km, or when you use it in muddy water, desert, Gobi desert, etc. Please focus on cleaning the side rails and the spiral track inside the container which may have sand, sludge, gravel and other sundry inside. Please use the lubricants we offered or other brand silicone oil-type lubricants after cleaning, and increase the frequency of using lubricants based on actual situation. Avoid using petroleum-based product on rubber seals. Lighter oil spray lubes with PTFE (Teflon) seem to work the best when regularly wiped out and reapplied.

2. Avoid the thicker grease type because they tend to get sticky and gather a lot of dust and debris and then later dry out. Also Avoid the silicone dry lubes as they tend to cause squealing noise between the sliding components.

3. Please make sure the roller is in a stop status before cleaning/lubricating, to avoid causing extrusion or collision injury.

4. To clean the rail tracks and the spiral track inside the container, please apply the lubricant to a rag and wipe it inside of the rail tracks, along the underside of the sweep seal and the top of the wear strip. Repeat until the dust has been removed. You can also use a high-pressure water gun if necessary and then make sure all components have been lubricated. Please do not direct aiming the high-pressure water gun to the motor/ECU/connector when cleaning, and do some necessary waterproof protection for connectors/plugs.

5. To clean the canister, remove the rail stops, or vertical rails as required, and run the cover out far enough that you can get into the canister. Apply the lubricant to a rag and wipe the inside of the canister, including all components inside the canister. Ensure the Drain Tubes are clear of any debris or blockage. Reassembly the cover .

6. If you find that the brightness of the remote control signal indicator light is obviously weakened, or the button indicator light does not on, please replace the battery in time (battery model: CR2450).

7. To keep the roller in tip-top condition, we recommend washing it the same as caring for your truck finish. A lack of proper cleaning and maintenance can affect the operation of the product and reduce its life.

8. Do not attempt to drive with the tail panel in the partially open position.

9. Tonneau cover must be free of foreign material including snow and ice before opening panels.

10. Do not tow your vehicle from the rear with the tonneau on your truck.

11. Do not operate vehicle with objects on top of cover.

Failure to follow these cautions may result in severe damage and will void your warranty!

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE SET UP

AIRPLEX ELECTRIC ROLLING LID **PHONE APP SET UP GUIDE**

FIT1259

Important Note: Please do not disclose your password for the Rolling lid app.

1. BRIEF INTRODUCTION

This paper introduces the detailed use and precautions of Electric Retractable Tonneau Cover Smartphone APP control.

2. OPERATION INSTRUCTION

2.1 Login the program

- 1) For IOS system Smartphone, please search 'Smartctr' in APP Store to download.
- 2) For Android system Smartphone. Please scan the following QR code with browser and download.



- 3) Enter the APP, click 'Start scan' to search device start with 'WTJL'.



- 4) Click the effective scanned device, input initial password 123456 to enter.
[Please change the password after login, do not disclose the password to anyone, so as not to cause vehicle security problems!]

2.2 Program Main Interface

Program Main Interface Introduction



- A: Click to open the "closed" or "not fully Open" Tonneau Cover; If the Tonneau Cover is already fully open, then it will keep still.
- B: Click to close the Tonneau Cover; If the Tonneau Cover is already closed, then it will keep still.
- C: Click to turn on the light with previous brightness level if it was "off" status; If it was already "on" status, then the light brightness shall cycle among 25%, 50%, 100% after every click.
- D: Turn off the LED light.
- E: Indicate the LED light status. Red color indicates light on, Grey color indicates light off.
- F: Click to enter the device info interface.
- G: Click to enter the device setting interface.
- H: Change Password

Note:

The following pictures will display the current position of Tonneau Cover in real time.



2.3 APP Program Info Interface

Program Info Interface Introduction

The interface mainly records and displays the basic information and usage records of the device.



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

Device Info	
Serial number	WTJL2033-03-03-001
Hardware version	WT1037K
Software version	V01.39.01
Operating voltage range(V)	9.0~16.0
Operating temperature range(°C)	-40~80
Running time(Day)	0
Motor running time(S)	81
LED running time(S)	29
Number of over current	0
Number of motor running overtime	0
Number of HALL signal ERR	0
Maximum route	900
Current route	0
Current running status	Stop
Automatic aging status	Stop
Number of open today	0
Number of close today	2
Number of light on today	1
Number of light off today	1
Number of foot sensor today	0
LED status	OFF
Left light bar status	Open


2.4 APP Program Setting Interface

Program Info Interface Introduction

After modifying the configuration, please click the bottom "Update Settings" to make the settings effective.

Note: Users can only modify contents in the following blue box, other items can't be modified

randomly, or may cause the abnormality of the device.

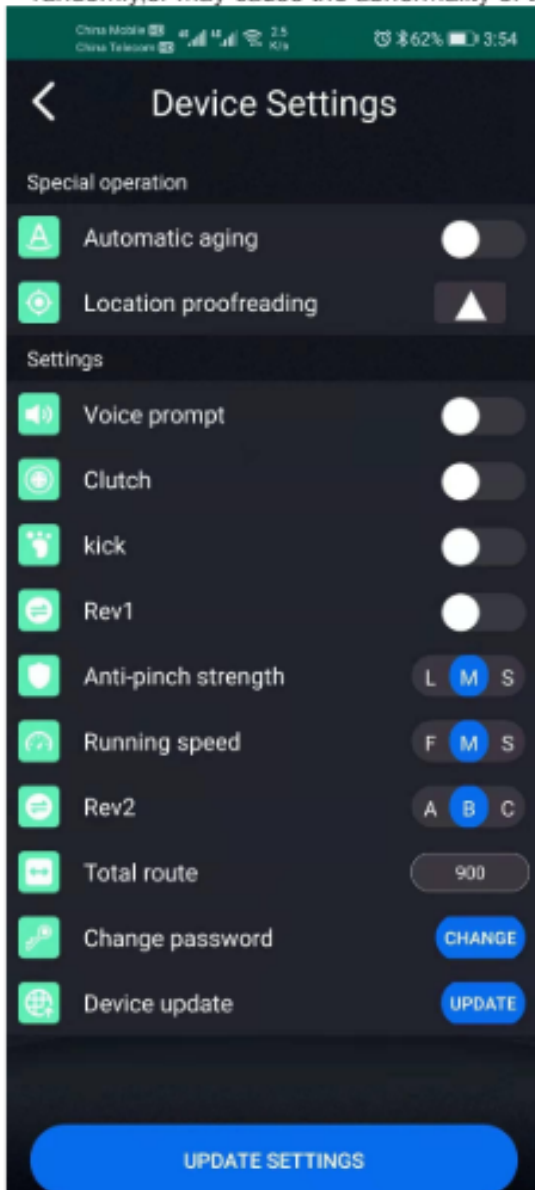

Anti-pinch strength: [S(small), M(medium), L(large)]. By setting this item to adjust the sensitivity of starting and stopping protection when touching obstacles during Tonneau Cover Operation.

Anti-pinch strength	Description	Remark
S(small)	High sensitivity	
M(medium)	Medium sensitivity	Factory Default Settings
L(large)	Low sensitivity	

If the Tonneau Cover has been used for a long time without regular maintenance in time, or with improperly installation, the operation resistance may increase and trigger the "Anti-pinch protection", so the Tonneau Cover may stop during operation. Then you can reduce the sensitivity of "Anti-pinch protection" by setting this "Anti-pinch strength" for a temporary solution to this problem.

Note: This is recommended only as a temporary solution to solve the problem. To ensure the Tonneau Cover works in good condition, it must be installed correctly and maintained timely. Do not long-term use it after reducing the sensitivity.



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

Running Speed: [H(high), M(medium), L(low)]. By setting this item to change the running speed of Tonneau Cover.

Running Speed	Description	Remark
L(low)	Low speed	Generally about 12 seconds to finish Open or Close operation
M(medium)	Medium speed	Factory Default Settings, 10 seconds to finish Open or Close operation
H(high)	High speed	8 seconds to finish Open or Close operation

In addition to affecting the completion time of Open or Close Tonneau Cover operation, the Running Speed is more slower, the smoother the Tonneau Cover runs, and also less noise during running. Thus we recommend customers choosing slower Running Speed.

Change password: Change the login password through this item.

Click "Change password", it will show the following interface.

The password is 6 Arabic digits.

Note: for the safety of your vehicle, avoid using same six numbers, or consecutive numbers.



After entering exactly the same 6 numbers in the "new password" and "confirm password", click "ok" to complete the password change.

airplex

AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz