

Parts Diagram for Bahco Ergo Secateurs – BAPX & BAPXR Series



- BAR900P Bahco Ergo Centre Bolt – All
- BAR901P Bahco Centre Bolt Lock System for Loppers & Ergo Secateurs
- BAR902P Bahco Ergo Handle Screws x 4
- BAR903P Bahco Ergo Spare Buffer x 2
- BAR904P Bahco Ergo Locking Device
- BAR905P Bahco Ergo Spring x 2 Low Strength
- BAR906P Bahco Ergo Spring x 2 Mid Strength
- BAR907P Bahco Ergo Spring x 2 Hi Strength

Small (N.1)

- BAR300P Bahco Ergo Spare Blade 1 Small
- BAR303P Bahco Ergo Counterblade 1 Small
- BAR801P Bahco Ergo Cutting Head 1 Small

Medium (N.2)


- BAR211P Bahco Ergo Blade 2 for Medium PXR M2 & PXM2
- BAR403P Bahco Ergo Counterblade 2 Medium (Replaces R203P)
- BAR802P Bahco Ergo Cutting Head 2 Medium

Medium Left Hand (N.2)

- BAR600P Bahco Ergo 2L Blade for BAPXRM2L & BAPXM2L L/H
- BAR603P Bahco Ergo Counterblade 2 L/H
- BAR804P Bahco Ergo Cutting Head 2 L/H

Large (N.3)

- BAR500P Bahco Ergo Spare Blade 3 Large
- BAR503P Bahco Ergo Counterblade 3 Large
- BAR803P Bahco Ergo Cutting Head 3 Large

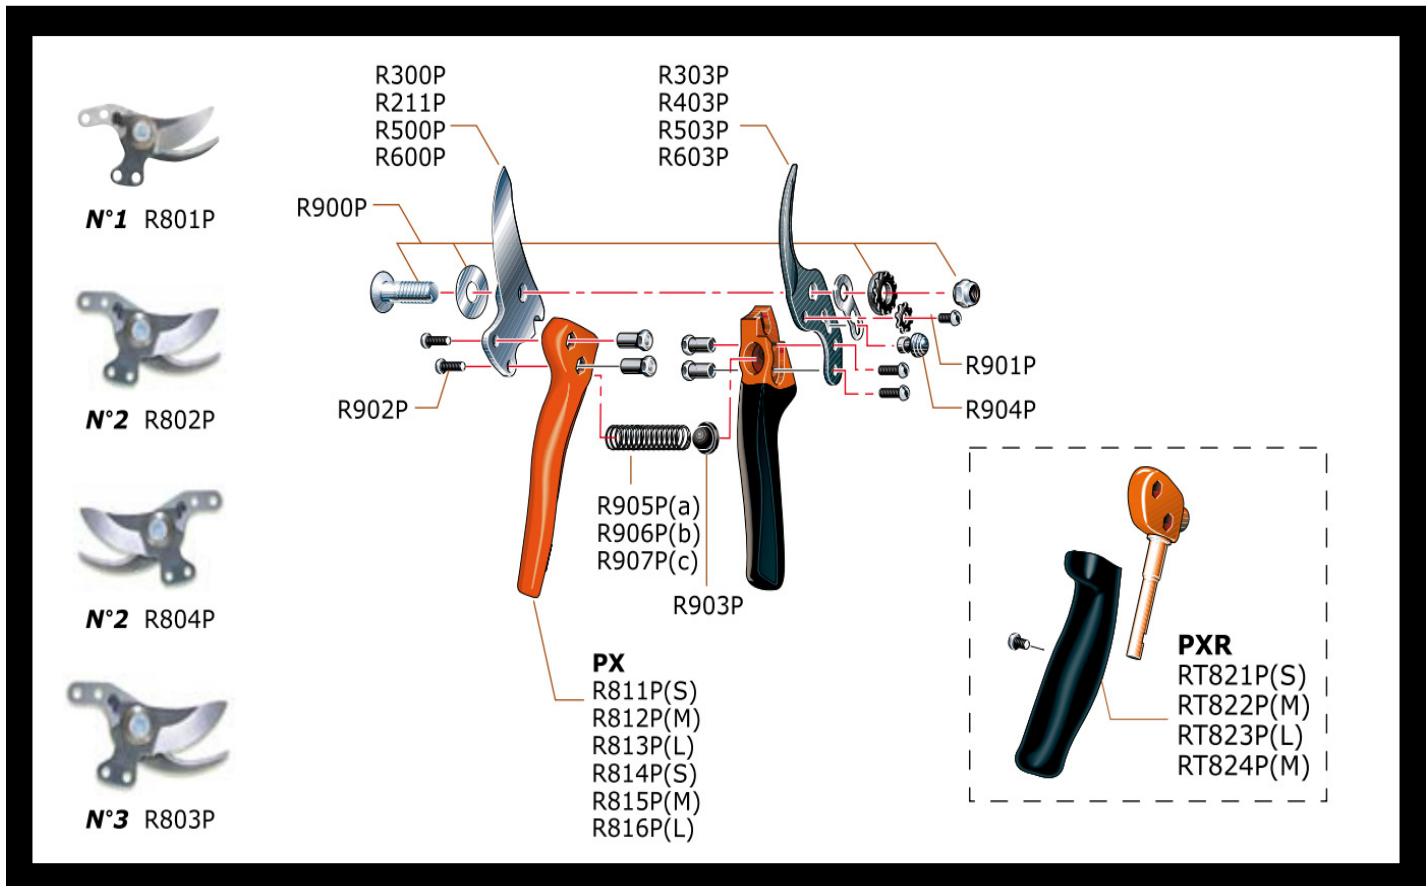

Handles (codes R811P-R816P & RT821P-RT824P) not stocked, available to order on request.