

Honda vehicles

Water in gas tank

Many carburetor failures for the above vehicles are caused by water contamination in the fuel bowl and the gas tank of these applications.

Our research has found the water may be entering through the fuel filler tube, which has rusted from road elements such as rocks and salt. To avoid drive-ability problems and carburetor failures, this part should be thoroughly inspected and replaced when necessary. In the event that water is found in the fuel tank the fuel must be drained and the tank cleaned.

Fuel Filler Tube



