

U Lock User Manual

Model: KTQ


⚠ WARNING!

- Please avoid proximity to ears. The extremely loud 120 decibel alarm may harm your hearing.
- Do not let children play with this alarm lock.
- Do not use near animals.

INSTALL BATTERY

1. Unlock the U Lock.
2. Take out the battery compartment by loosening the cross screw inside the locking hole.
3. Open the waterproof lid.
4. Install the CR2 lithium battery.
5. Reassemble the parts.

* Make sure the waterproof lid is firmly closed to ensure that waterproofing is not affected

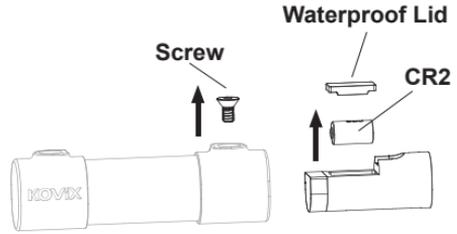

HOW TO LOCK & SET THE ALARM


1. To Activate the alarm function, insert the key into the key barrel and rotate anti-clockwise. You will hear One Beep. After 5 seconds, the siren will sound a single long beep to confirm the alarm is armed.
2. Close the shackle until it clicks into place.
3. If the lock is hit or shaken, the siren will emit five rapid beeps as a warning. If further movements are not detected within 15 seconds, the alarm will rearm automatically.

If the lock is continuously attacked, the siren will burst out a 120dB alarm for 10 seconds.


The above process will repeat until no movement is detected.

4. You may stop the alarm by unlocking it.
5. To Deactivate the alarm function, insert the key into the key barrel and rotate anti-clockwise twice to lock. The siren will sound TWO Beeps to confirm the alarm is disarmed.

ALARM ON Single beep

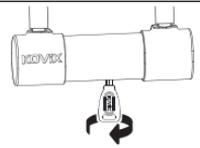

ALARM OFF Double beeps

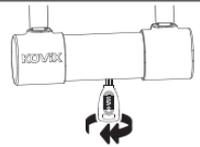

USING THE LOCK HOLDER

The U lock holder is designed to fit onto the bike frame, offering easy transportation of the U lock.

1. Choose where you want to attach the lock holder.
2. Release the strap and place the holder on the frame. Make sure you are not putting it upside down.




Top





Bottom

3. Tighten the strap to secure it to the bike frame.

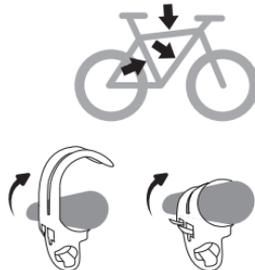

  
4. Insert the two supplied cross screws into the holes for a tighter attachment.
5. Insert the strap fastener to fix the position.



6. When transporting, insert the side with the shackle insert into the holder. Then, complete the lock-up procedure.



You may also adjust the holding direction of the U Lock by changing the direction of the shackle insert:

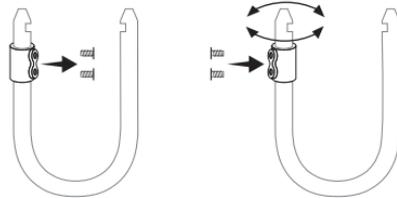

BATTERY LIFE

 
Battery(ies) has an average lifespan of 12 months under normal usage. However, frequent alarm triggering, or extreme weather can reduce battery life.

CR2 Lithium Battery 3V 900mah

- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

KEYS

You can find the key code on the key or tag. Use this code to order a replacement key. Please remember to store your code in a safe location.



TROUBLESHOOTING

1. Alarm not working - Check the battery and ensure your lock is in alarm mode.
2. Lock making a constant sound - Replace the battery.
3. Alarm ringing continuously, broke off, and gave a beep warning sound - Replace the battery.
4. Alarm module is damaged - The alarm module is replaceable. Please contact your local authorized dealers for details.

WARRANTY

We provide a two-year manufacturer's warranty from the date of purchase for all KOVIX products, if:

- The electronic module is destroyed by non-man-made damage.
- The mechanical part is destroyed by non-man-made damage.

We do not provide a warranty for damage to surface appearance.

CONTACT US

For more information, product news, technical problems and accessories, please visit www.kovix-products.com