
 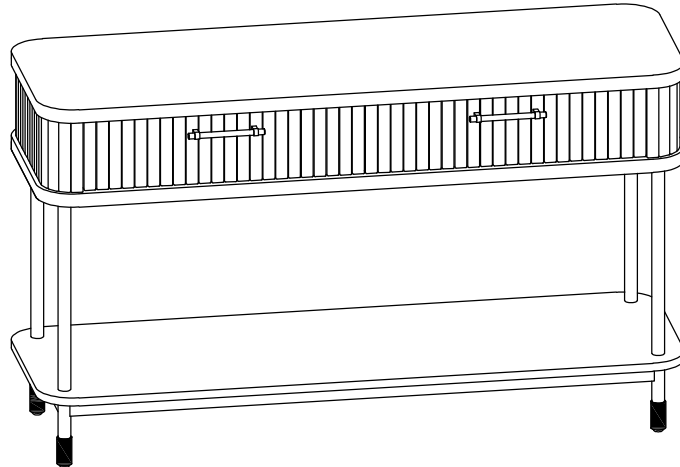


# Assembly Instructions

## SOPHIA-CONSOLE TABLE




### Component Checklist


| REF | PART                                                                                | NAME               | QTY |
|-----|-------------------------------------------------------------------------------------|--------------------|-----|
| A   |  | Table top          | 1   |
| B   |  | Shelf frames       | 1   |
| C   |  | Connecting bar     | 4   |
| D   |  | Leg frames         | 2   |
| E   |  | Handles            | 2   |
| F   |  | Bolt M4            | 4   |
| G   |  | Bolt M6            | 6   |
| H   |  | Flat Washers(M6)   | 6   |
| I   |  | Spring Washers(M6) | 6   |
| J   |  | Bolt M8x20         | 8   |
| K   |  | Bolt M8x40         | 4   |
| L   |  | Flat Washers (M8)  | 12  |
| M   |  | Spring Washers(M8) | 12  |
| N   |  | Allen key          | 1   |

## Putting Me Together


NOTE: You will need a minimum of 2 persons to assemble due to size and weight of console table.

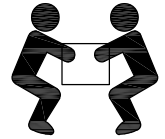

- 1 Carefully turn console table top (A) upside down on a soft level surface (use a rug or blanket underneath on hard surface flooring).

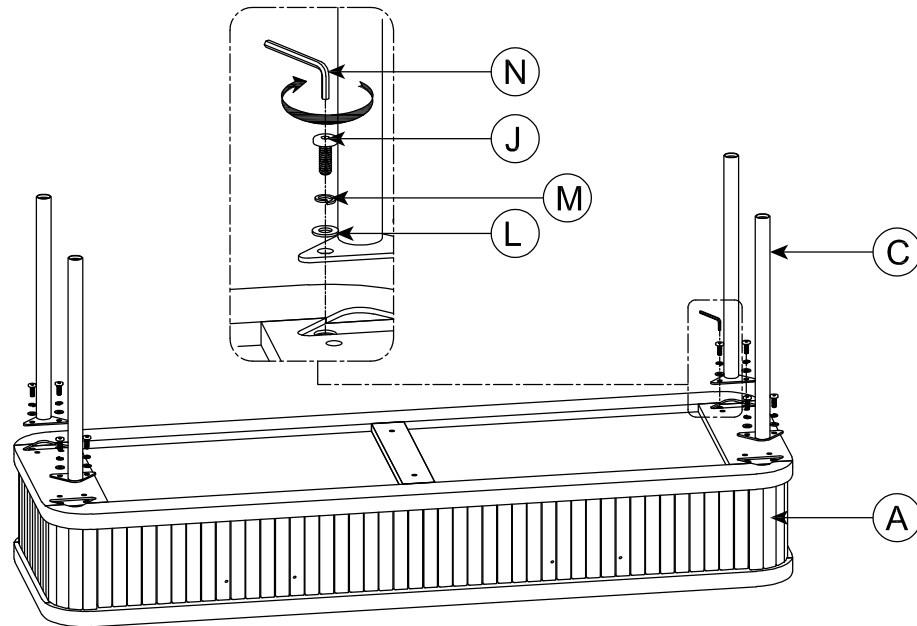


- 2 Place the connecting bar (C) (both four connecting bar) in the center of the hole on bottom of console table and Insert the bolt(J)+spring washers(M)+flat washer(L) into the holes and proceed to screw leg in a clockwise direction by allen key(N)  
Repeat for the rest connecting bars.

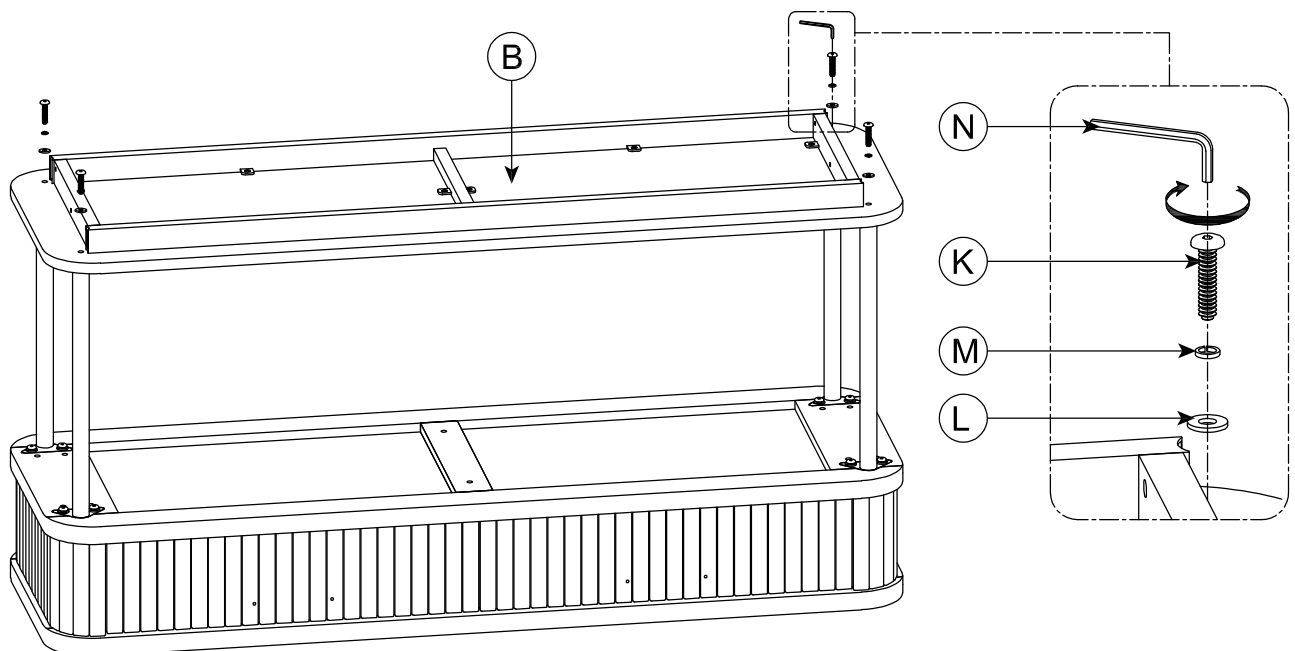


- 3 Place the shelf frame (B) in the center of the hole on connecting bar and Insert the bolt(K)+spring washers(M)+flat washer(L) into the holes and proceed to screw leg in a clockwise direction by allen key(N)  
Repeat for the rest holes.

## Putting Me Together


NOTE: You will need a minimum of 2 persons to assemble due to size and weight of console table.

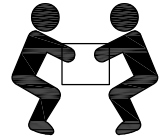

- 4 Place the leg frame(D) (both two leg frame) in the center of the hole on shelf frames and Insert the bolt(G)+spring washers(I)+flat washer(H) into the holes and proceed to screw leg in a clockwise direction by allen key(N)  
Repeat for the rest leg frames.

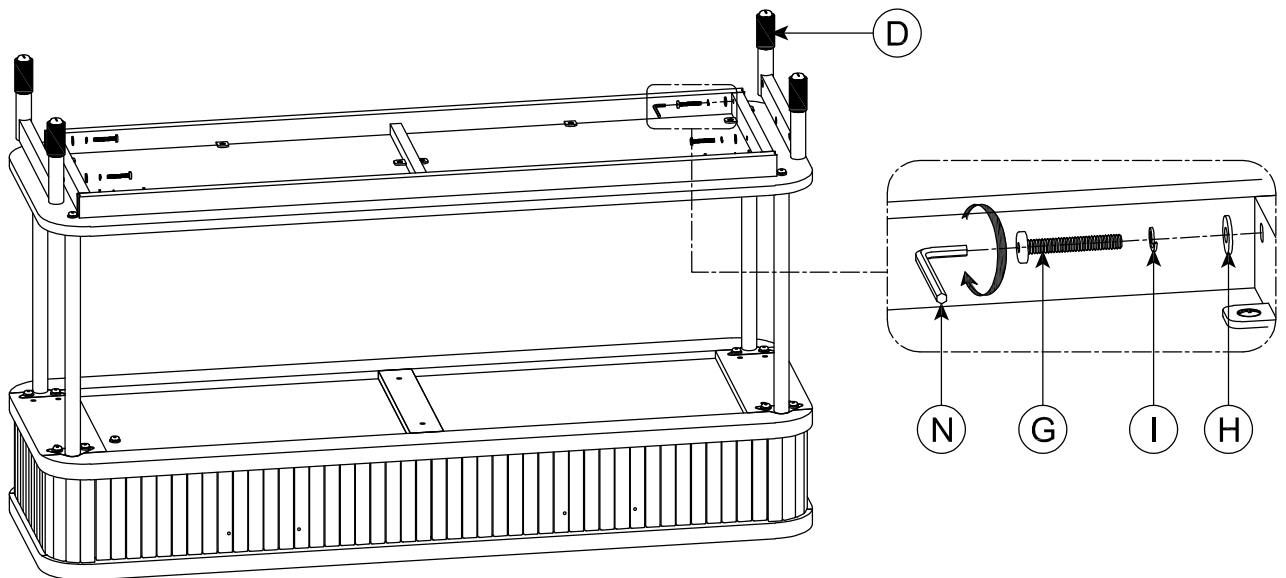


- 5 Once all two legs are securely tightened, carefully turn console table upright.
- 6
- Unscrew handles(E) that is inserted to inside of drawer fronts (screwdriver not included)
  - Insert bolt (F) and thread through drawer from back side of drawer s.
  - Screw on handles (E) making sure not to overtighten.

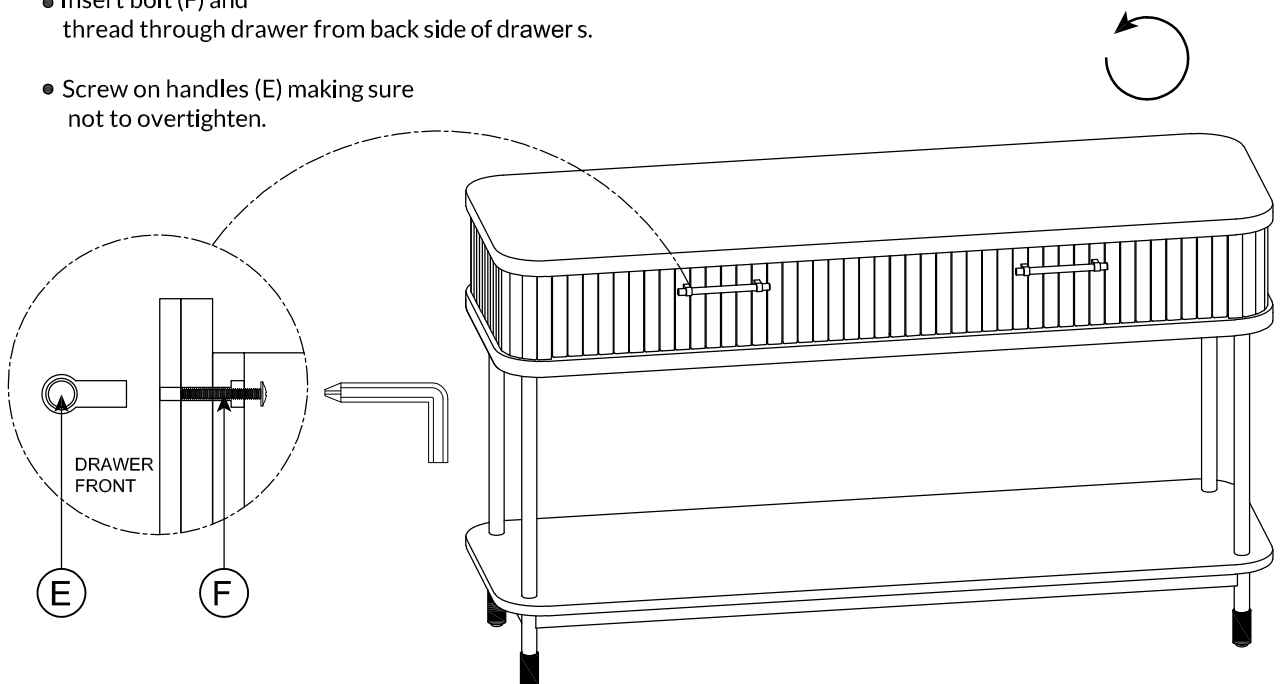

# Assembly Instructions

## SOPHIA-CONSOLE TABLE

- ① Attach each mounting bracket securely to the back top edge of the furniture or mirror using the shorter screw(M4x20).
- ② Determine where the furniture is to be placed and mark the location on the wall for the mounting bracket screw. Mark a hole approximately 3cm below the bracket mounted to the edge of furniture.
- ③ Drill a 8mm hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
- ④ Position the bracket over the anchor and use the longer screw(M4x35) to securely attach the bracket to the wall.
- ⑤ Place the furniture so the bracket on the back edge is in line with bracket on the wall.
- ⑥ Lace an end of the nylon restrain strap down through each bracket. Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot in the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- ⑦ To double lock, return the beaded end back through the keyhole as shown.
- ⑧ Check to make sure the strap is securely laced and locked to the bracket.

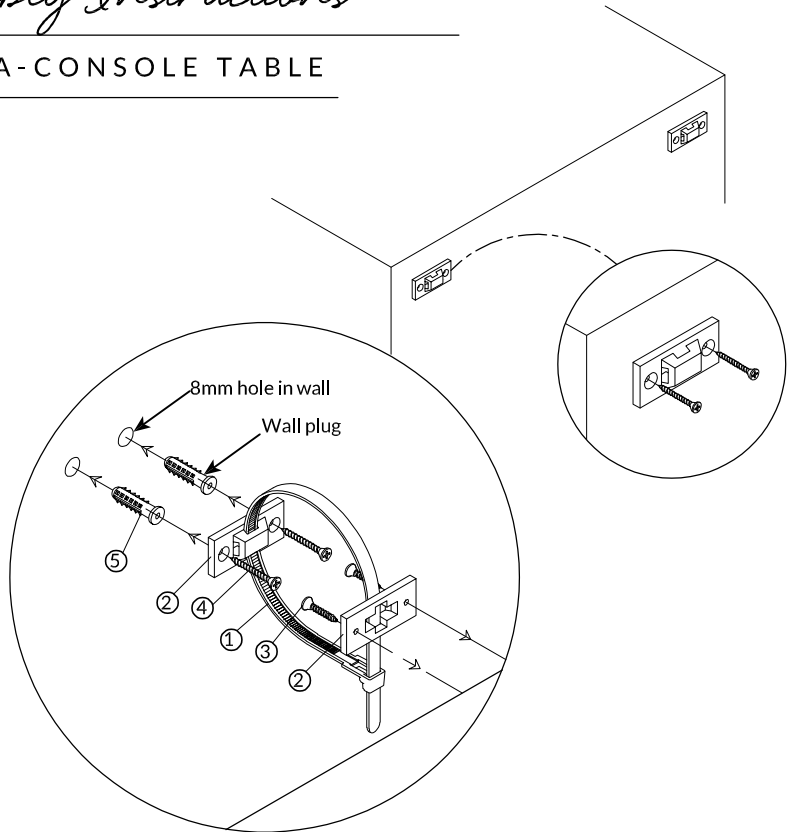

| REF | PART | NAME             | QTY |
|-----|------|------------------|-----|
| ①   |      | Strap            | 2   |
| ②   |      | Mounting bracket | 4   |
| ③   |      | Screw M4 x 20    | 4   |
| ④   |      | Screw M4 x 35    | 4   |
| ⑤   |      | Wall plug        | 4   |

### WARNING - Secure Furniture with Anchor Kit Provided



**NEVER put a TV on this furniture.**



#### Children have died from furniture tipover.

This furniture type is at high risk of toppling over:

- ALWAYS secure furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

**This is a permanent label. Do not remove!**