


Assembly Instructions

CASSIDY CONSOLE TABLE

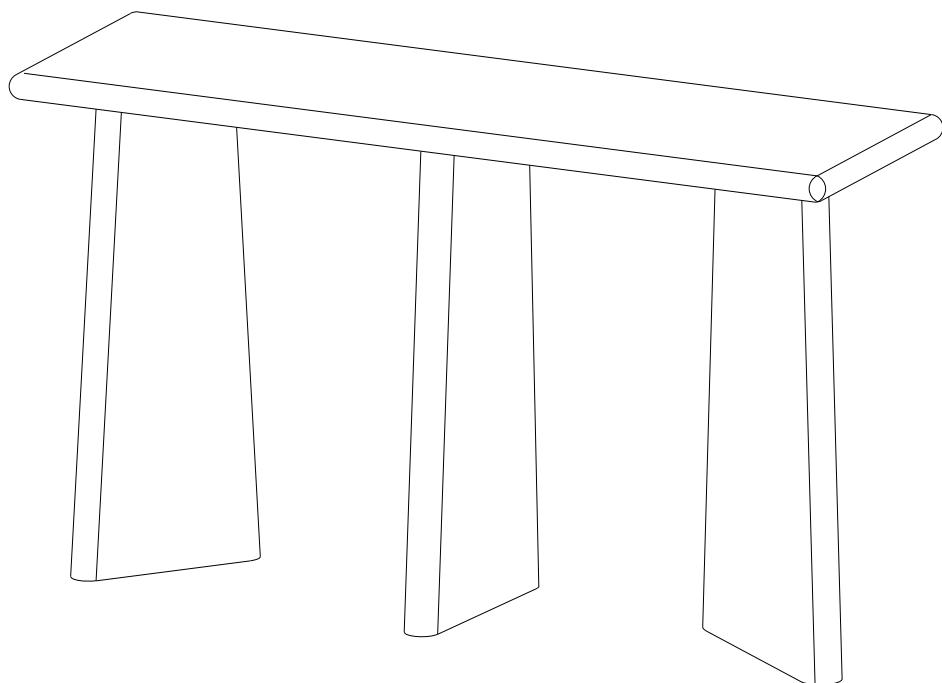

Component Checklist


REF	PART	NAME	QTY
A		Top	1
B		Legs	3
C		Iron plates	3
D		Allen bolts	21
E		Washer	12
F		Allen key	1

Putting Me Together

NOTE: You will need a minimum of 2 persons to assemble due to size and weight of wooden table top.




1

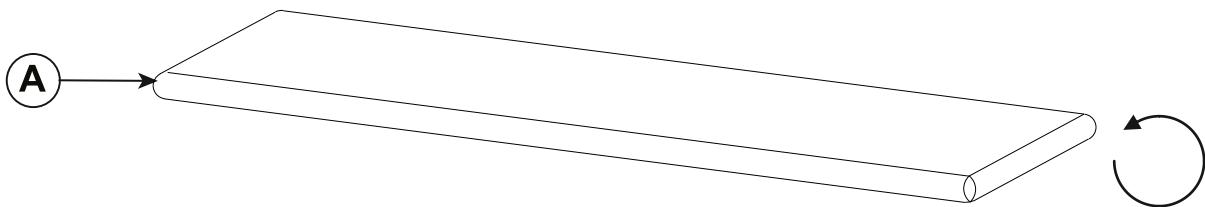


- Carefully turn wooden table top (A) upside down on a soft level surface (use a rug or blanket underneath on hard surface flooring)

2

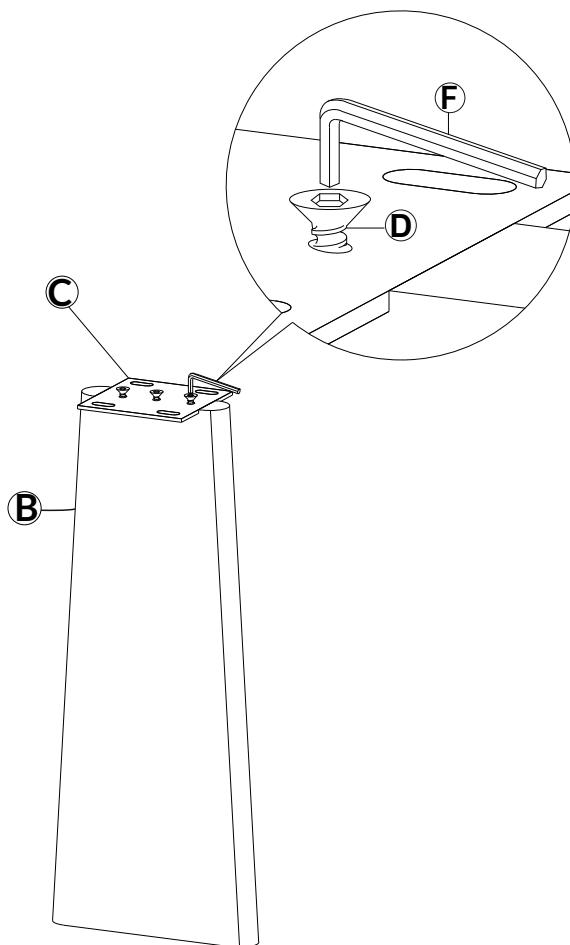

- Gently place iron plate (C) over the lip of wooden table legs (B) making sure to align the holes with predrilled holes in wooden table legs.
- Once aligned, screw the Allen bolts (D) into the holes using the provided Allen key (F)
TIP: Do not fully tighten allen bolts until legs are in place.

3

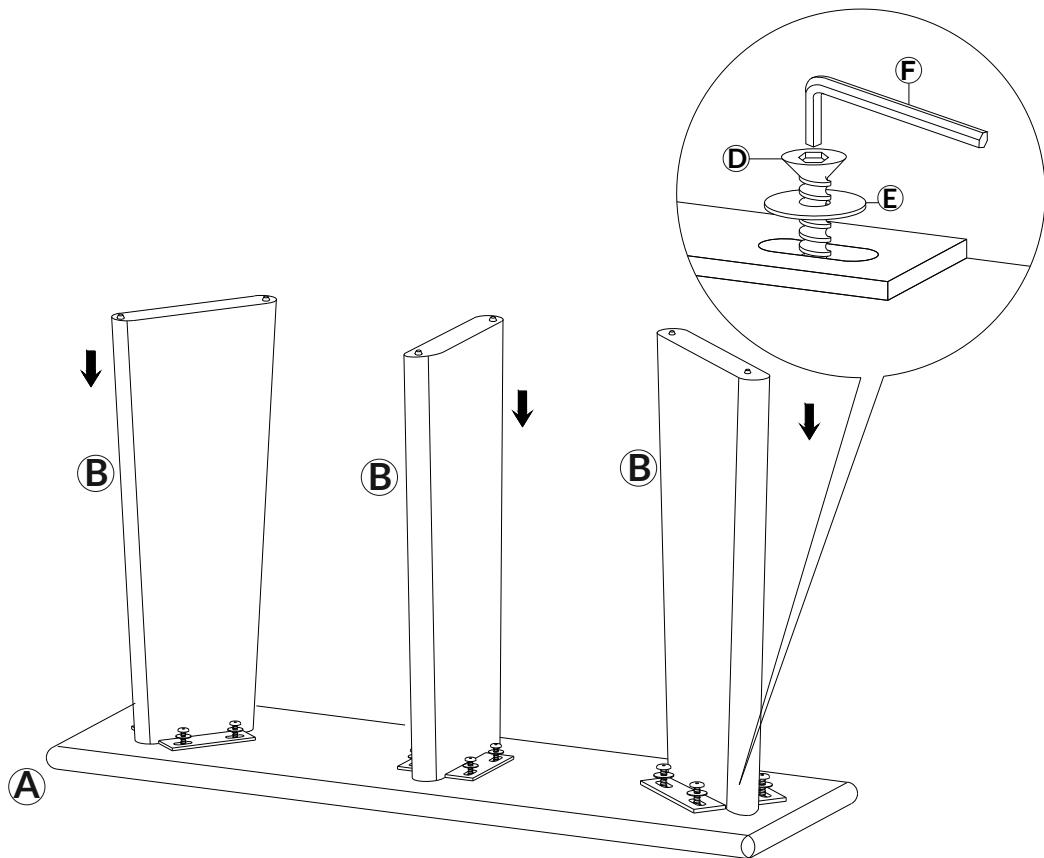


- Gently place wooden table legs (B) over the lip of wooden table top (A) making sure to align the holes with predrilled holes in wooden table top.
- Once aligned, place washer (E) over the hole and screw allen bolts in (D) using provided allen key (F)
TIP: Do not fully tighten allen bolts until legs are in place.

- Once all 21 allen bolts are securely tightened, carefully turn table upright and enjoy!

NOTE: A minimum of 2 persons will be needed to perform this step due to size and weight of item.


4

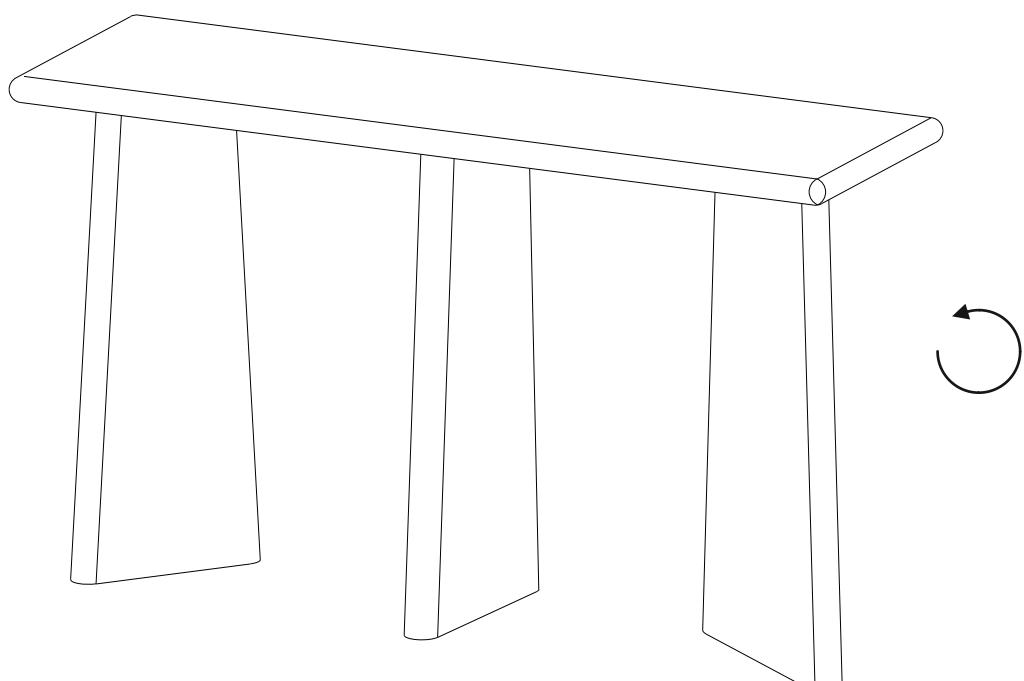

Assembly Instructions


SAFETY ANCHOR

- ① Attach each mounting bracket securely to the back top edge of the furniture or mirror using the shorter screw.
- ② Determine where the furniture is to be placed and mark the location on the wall for the mounting bracket screw. Mark a hole approximately 5cm below the bracket mounted to the edge of furniture.
- ③ Drill a 9mm hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
- ④ Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
- ⑤ Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
- ⑥ Lace an end of the nylon restraint strap down through each bracket. Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot in the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- ⑦ To double lock, return the beaded end back through the keyhole as shown.
- ⑧ Check to make sure the strap is securely laced and locked to the brackets.

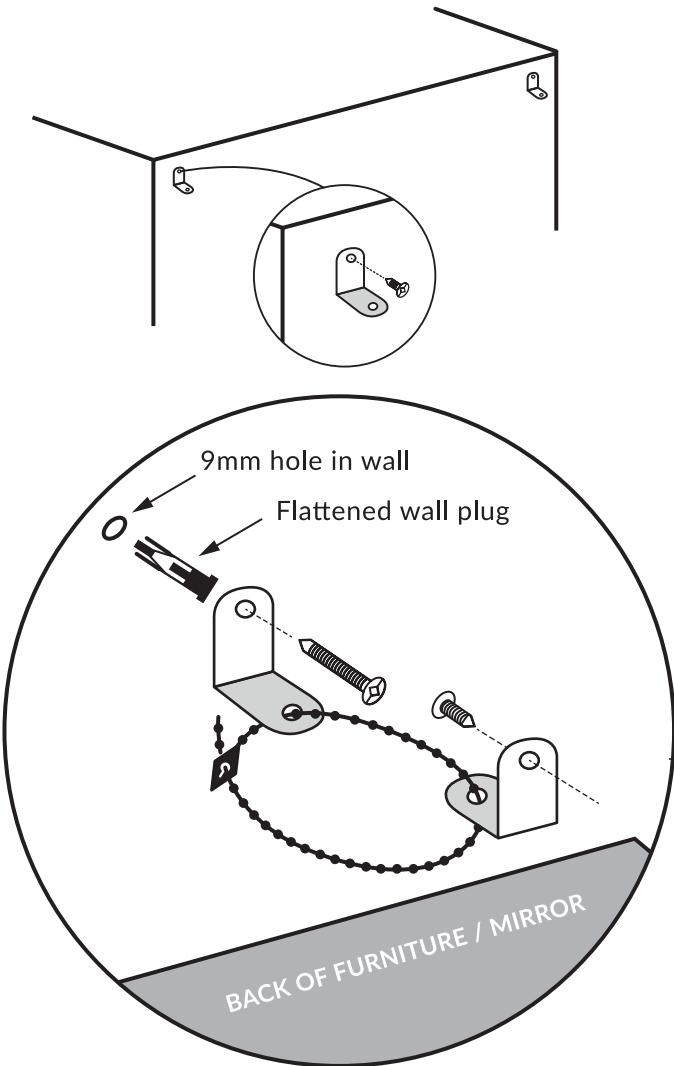

PART	NAME	QTY
	Wall Plug	2
	Metal Bracket	4
	Ties	2
	Long Screw	2
	Short Screw	2

WARNING Secure Furniture with Anchor Kit Provided

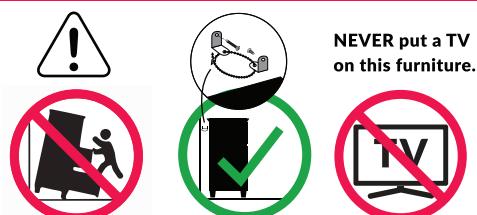

Children have died from furniture tipover.

This furniture type is at high risk of toppling over:

- ALWAYS secure furniture with anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Remember to place heavy items down low.