


Assembly Instructions


NOMAD CONSOLE

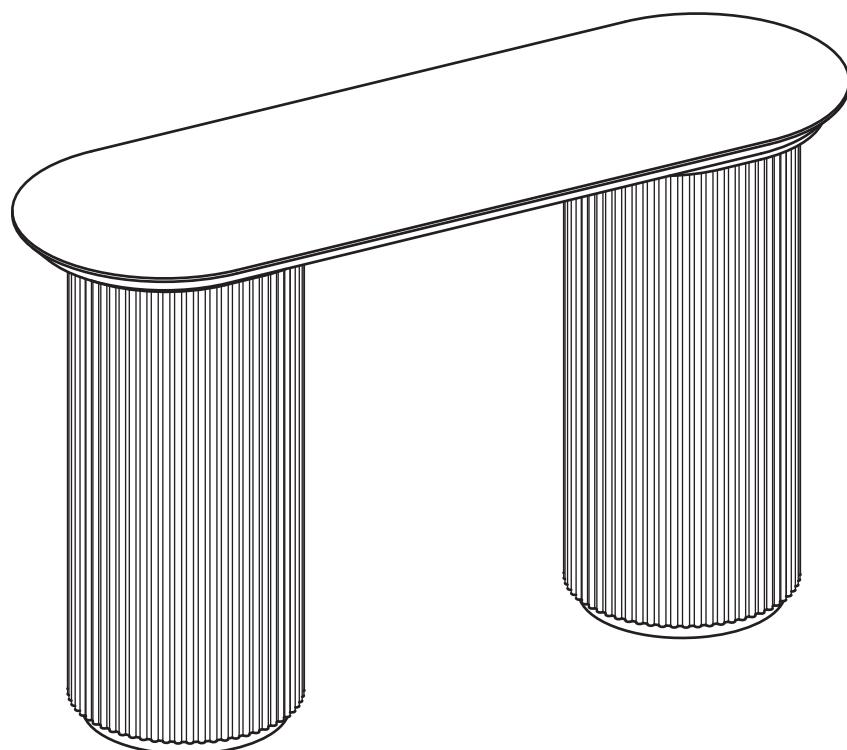


Component Checklist

REF	A	B	C	D	E	F
PART						
NAME	Table top	Base	Split Lock	Flat Washer	Bolt	Allen key
QTY	1	2	8	8	8	1

Putting Me Together

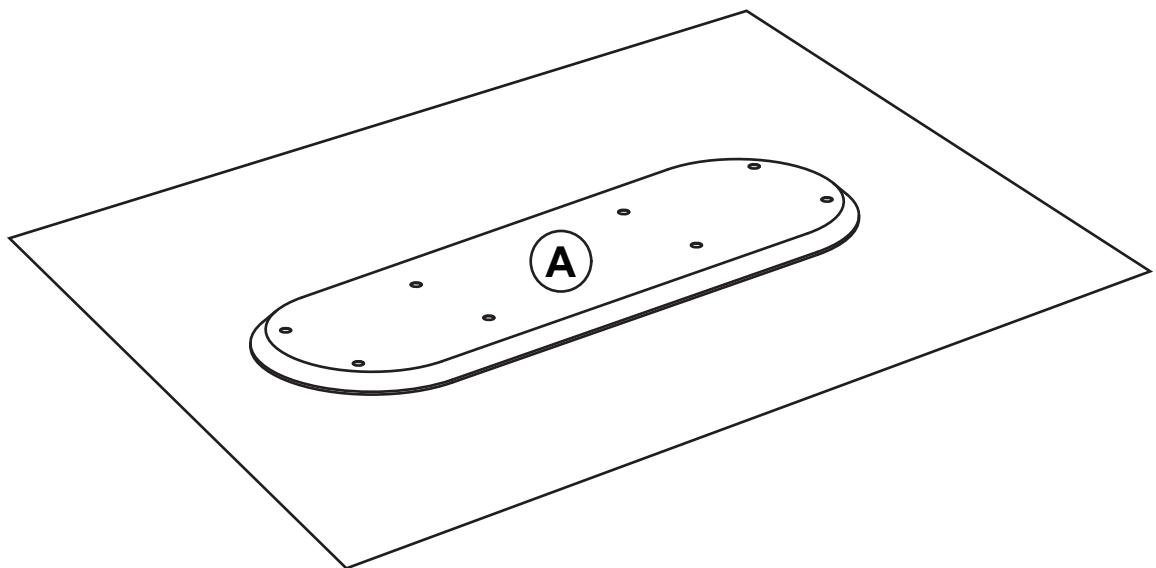


- 1 Flip the table top (A) over and position it on a soft mat, ensuring the screw holes face upward.

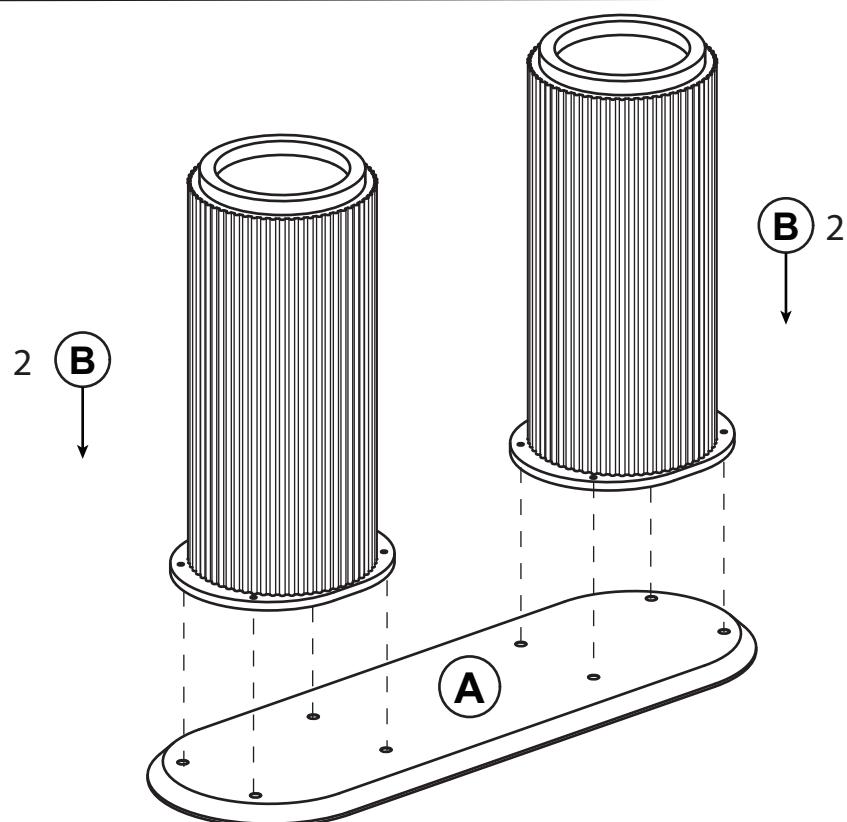


- 2 Flip over Base (B), place it on top of Tabletop (A), and align the screw holes, as shown.

Putting Me Together

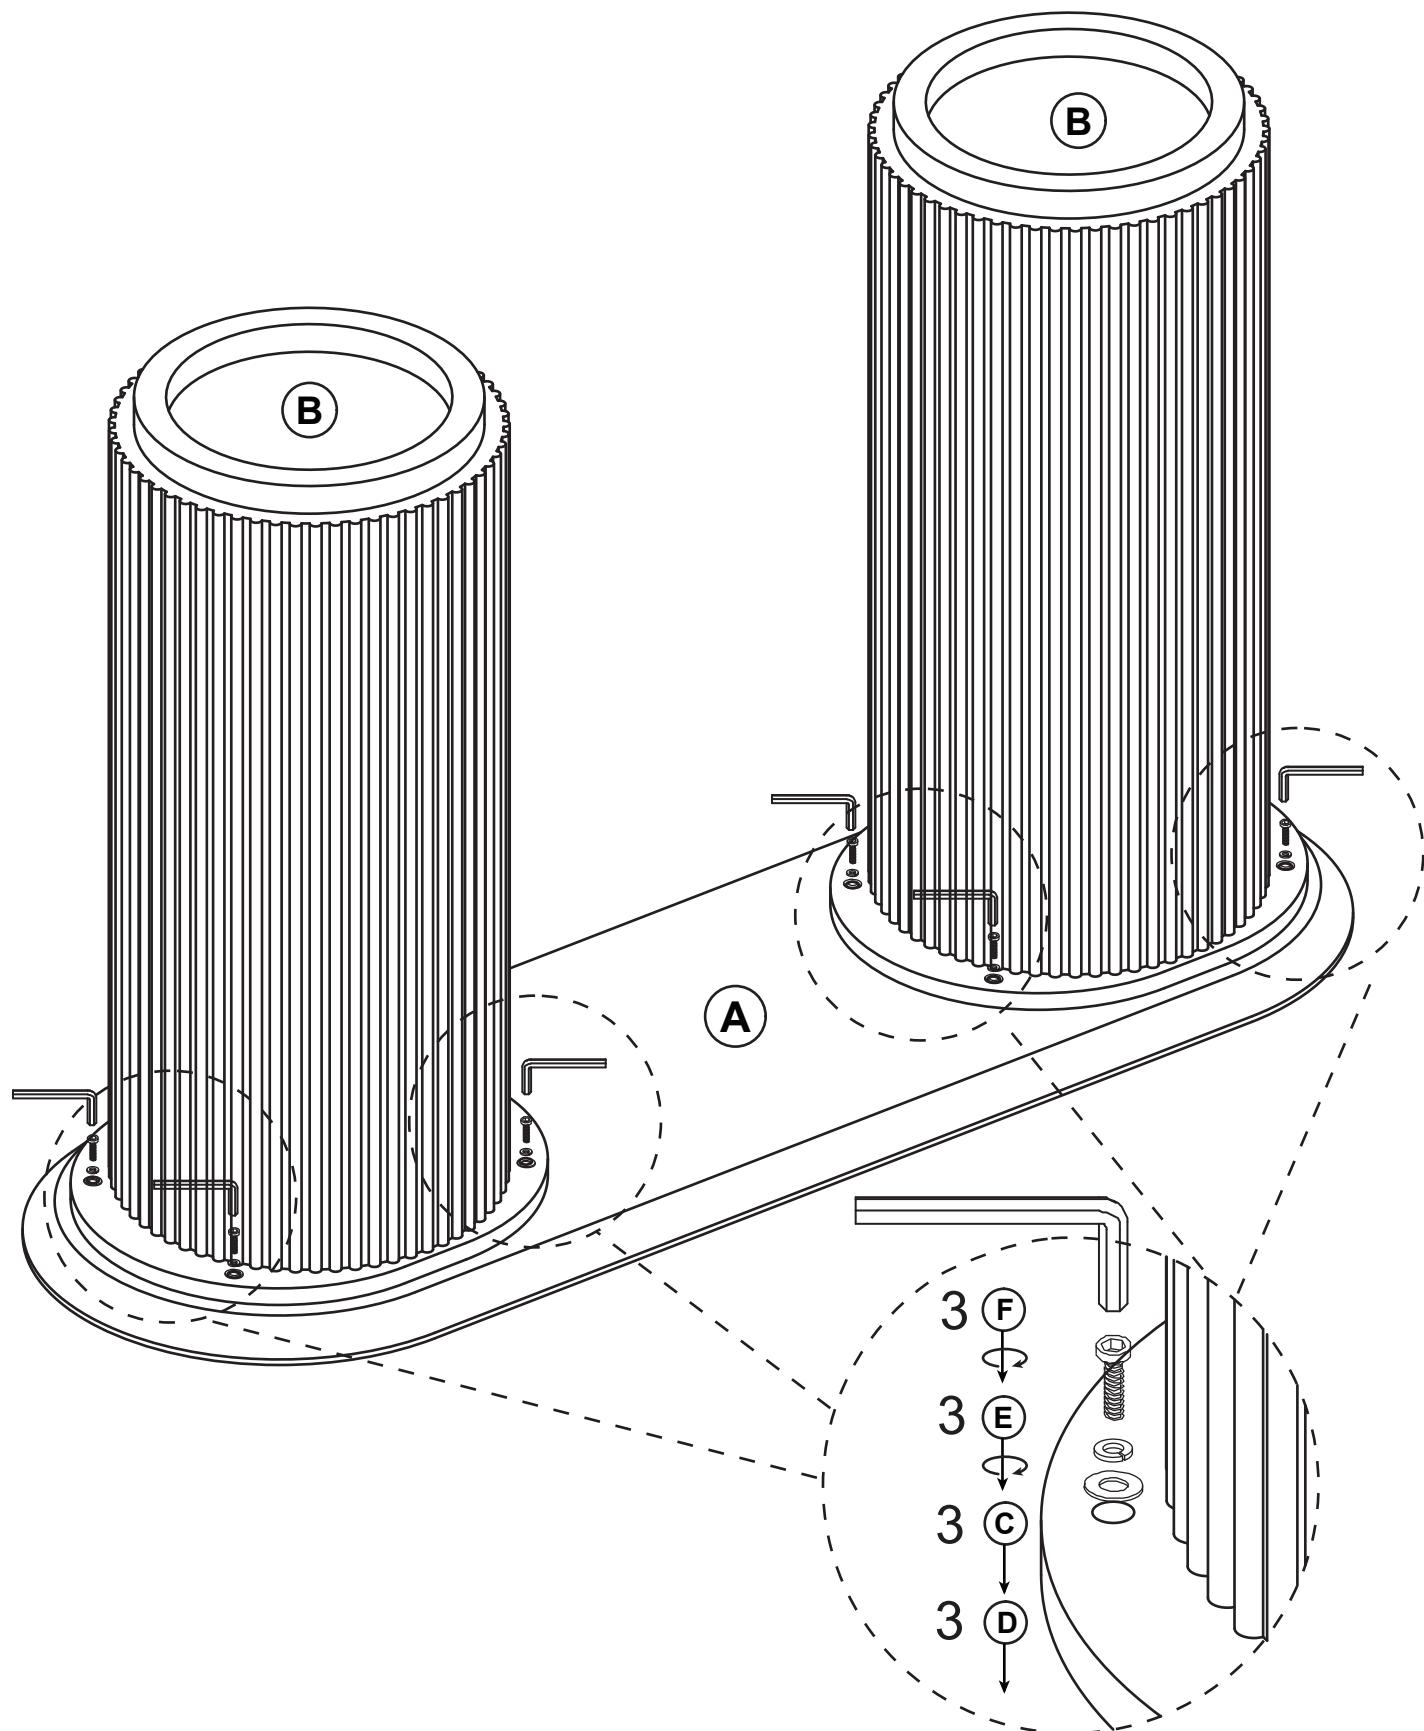

- 3 Use Split Lock (C),Flat Washer (D),Bolt (E),and the Allen Key (F) to fasten Tabletop (A) and Base (B) together, as shown.

Putting Me Together

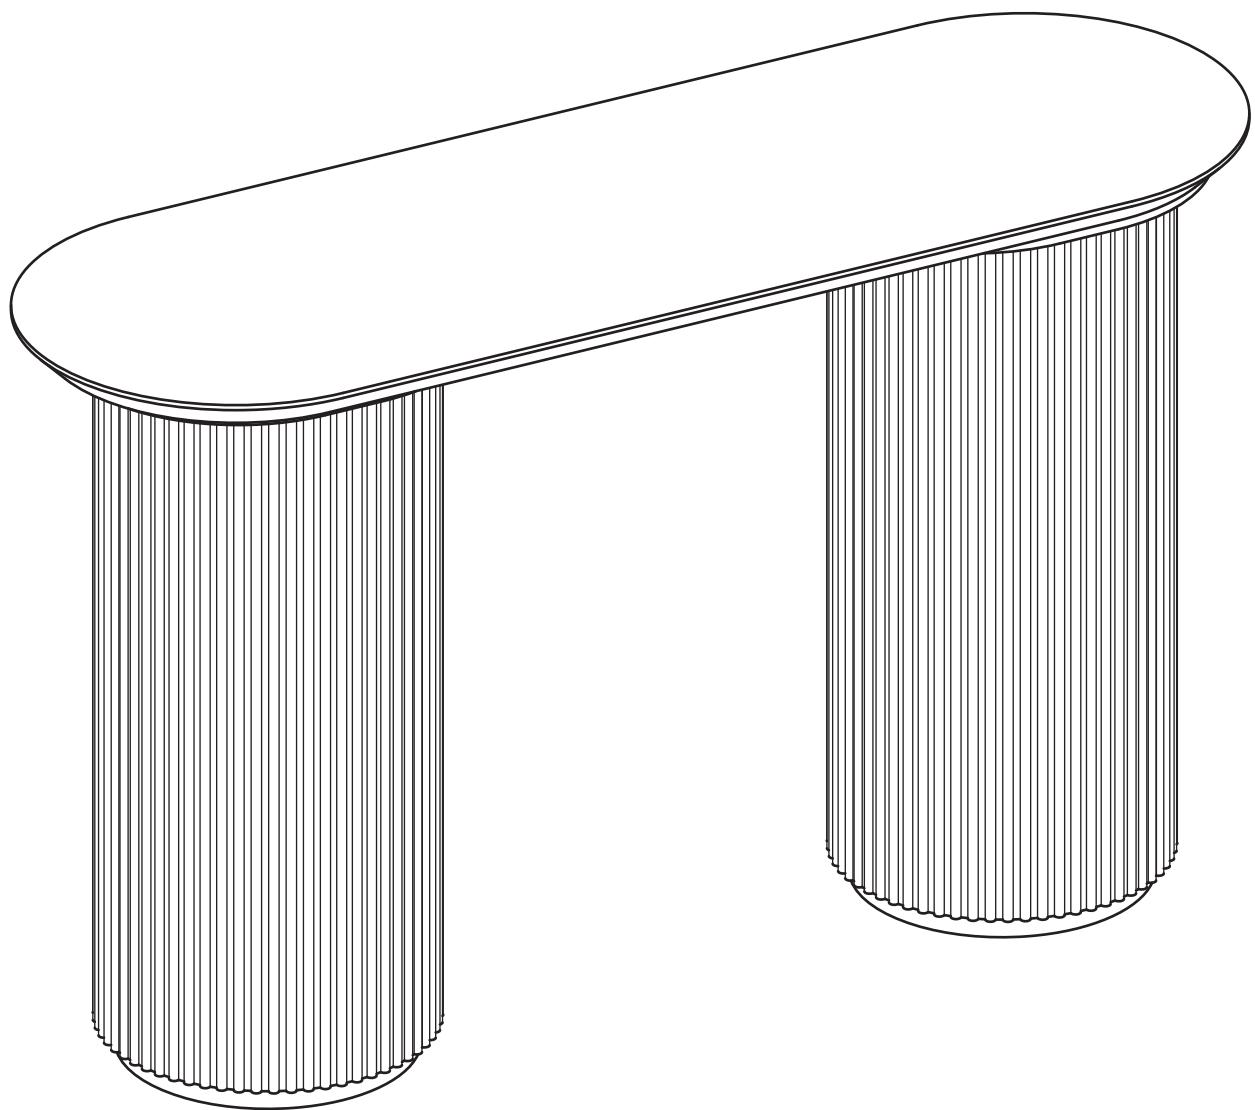


4

Securely tighten all bolts but ensure not to overtighten as it can damage the product. Once all bolts are secured you can now use your NOMAD CONSOLE and enjoy!

Assembly Instructions


SAFETY ANCHOR

- ① Attach each mounting bracket securely to the back top edge of the furniture or mirror using the shorter screw.
- ② Determine where the furniture is to be placed and mark the location on the wall for the mounting bracket screw. Mark a hole approximately 5cm below the bracket mounted to the edge of furniture.
- ③ Drill a 9mm hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
- ④ Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
- ⑤ Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
- ⑥ Lace an end of the nylon restraint strap down through each bracket. Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot in the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- ⑦ To double lock, return the beaded end back through the keyhole as shown.
- ⑧ Check to make sure the strap is securely laced and locked to the brackets.

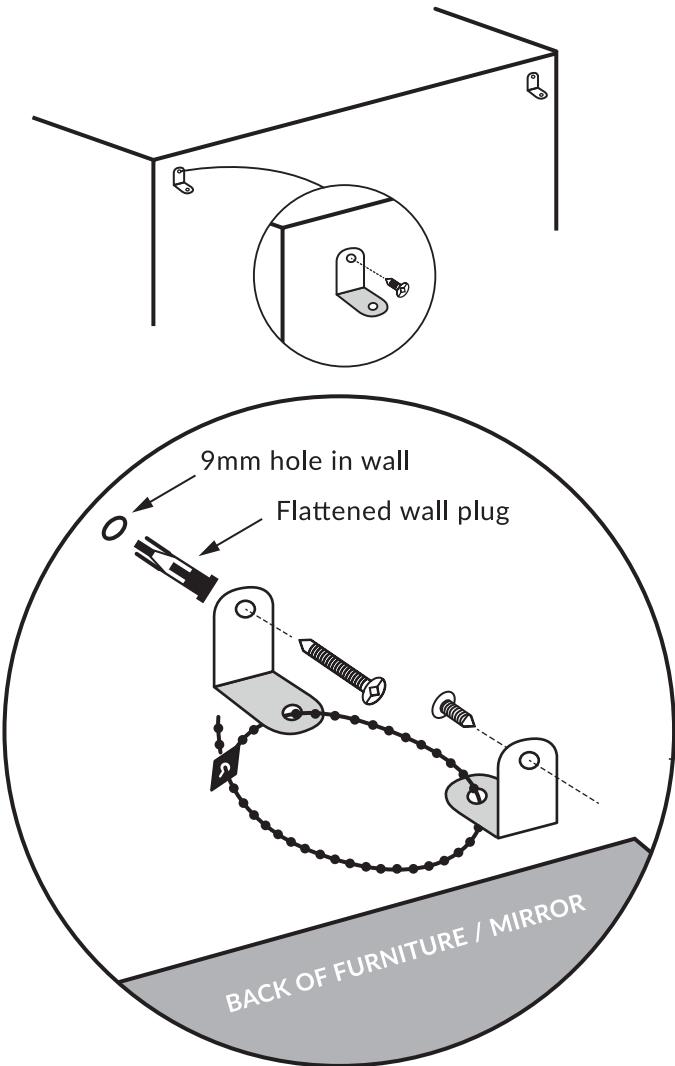

PART	NAME	QTY
	Wall Plug	2
	Metal Bracket	4
	Ties	2
	Long Screw	2
	Short Screw	2

WARNING Secure Furniture with Anchor Kit Provided

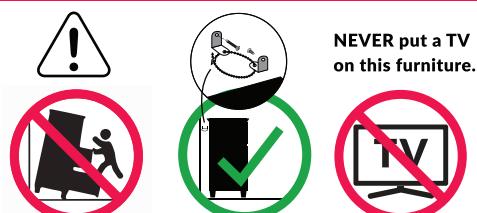

Children have died from furniture tipover.

This furniture type is at high risk of toppling over:

- ALWAYS secure furniture with anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Remember to place heavy items down low.