


Clock Movement Importers UTS Time Only Specifications

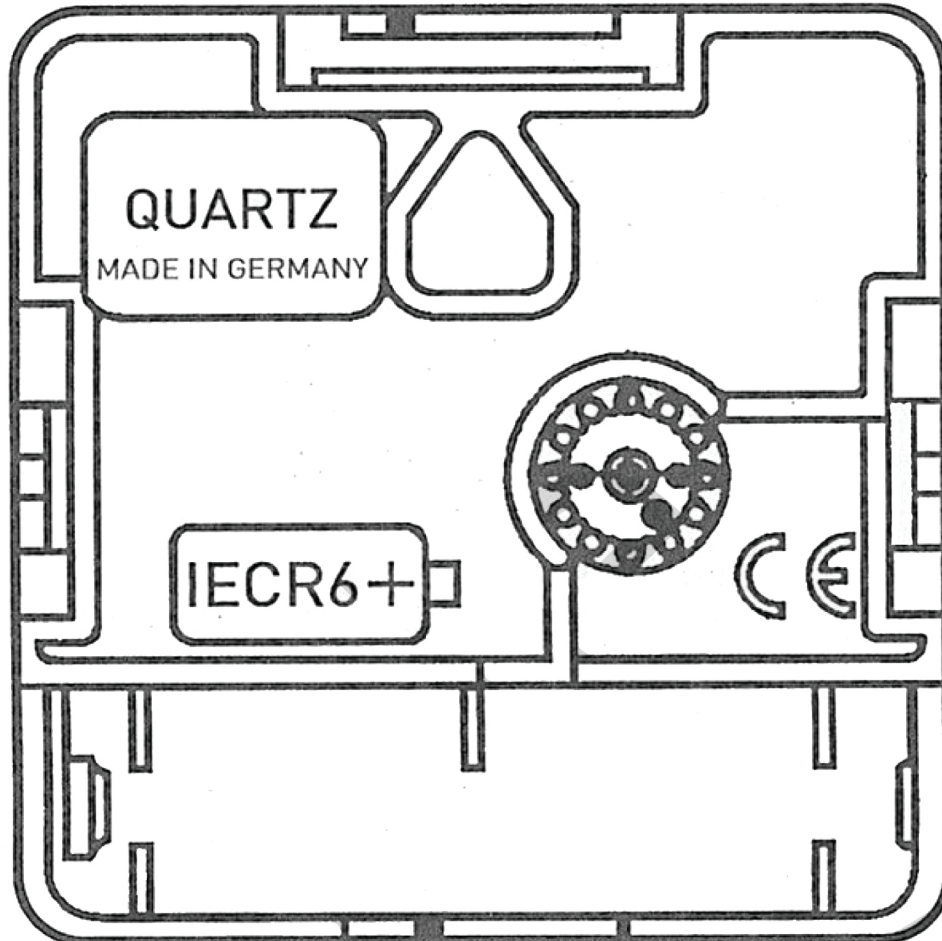

Instructions for use

The movement starts to operate when the battery is inserted. (We recommend a 1.5 Volt alkaline-manganese battery of the type LR 6). The time is set by turning the setting knob on the rear of the movement clockwise or anticlockwise. This quartz clock is maintenance free. Replace the battery after 12 months or when the clock begins to lose time.