


Clock Movement Importers UTS Pendulum Instructions

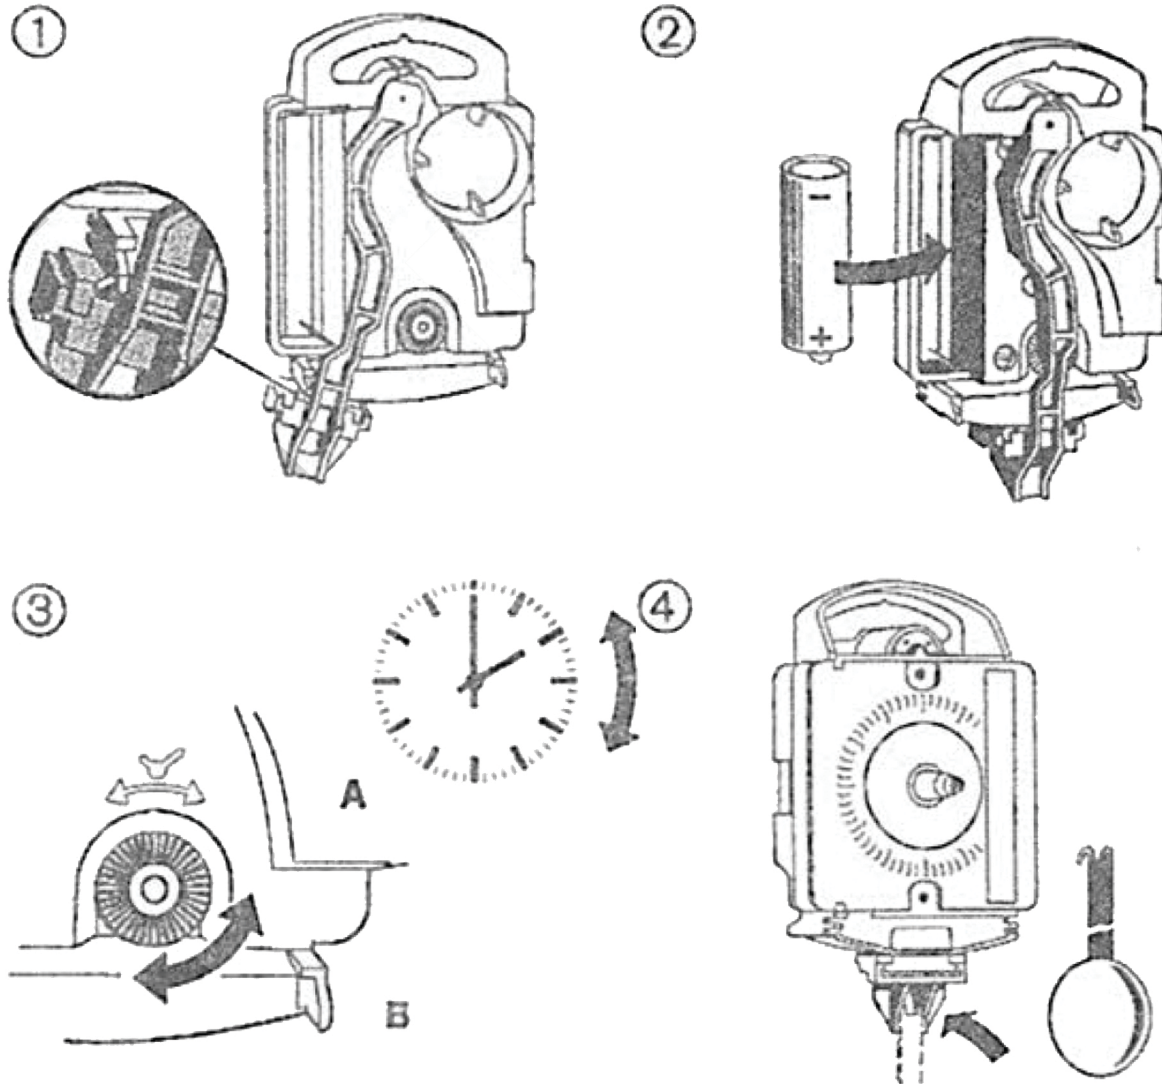

1. Release the Pendulum Catch by gently pressing the pendulum to the side
2. Install the Battery with the correct polarity
3. Set the Time by the Adjusting Knob (Clockwise or Anti Clockwise)
4. Attach the Pendulum by inserting the Hook into the hole.

Replace the Battery after 12 months or when the clock begins to lose time
or pendulum swing stops