

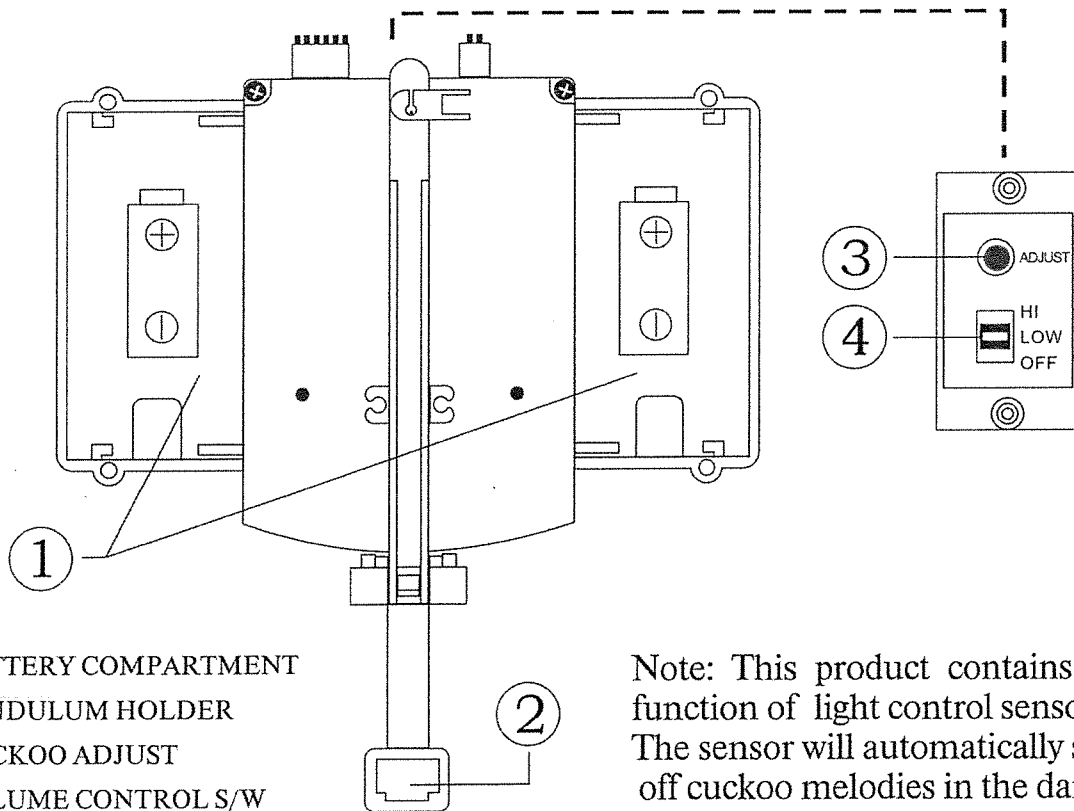


OPERATING MANUAL

- (A) Remove the back cover and insert two "D" batteries(not includes)into compartment ①, then the timekeeping will begin.
- (B) Hanging the pendulum in this holder ②, place chain hooks on the weight rings and hang the carved faux weights on chains attached to the bottom of case.
- (C) Gently push pendulum to one side to start swinging motion.
- (D) Move the minute hands to the correct time by hand.
- (E) Push the cuckoo adjust button ③ to check the current cuckoo hour.
- (F) Adjust the cuckoo hour by pushing the button ③ until matches the correct time.
- (G) Switch the volume control ④ (high-low)to meet your need.
- (H) Please change new battery in time in case of abnormal cuckoo sound and cuckoo's not coming out when alarms.
- (I) We recommend that the batteries should be changed twice a year at least for optimum performance and enjoyment.

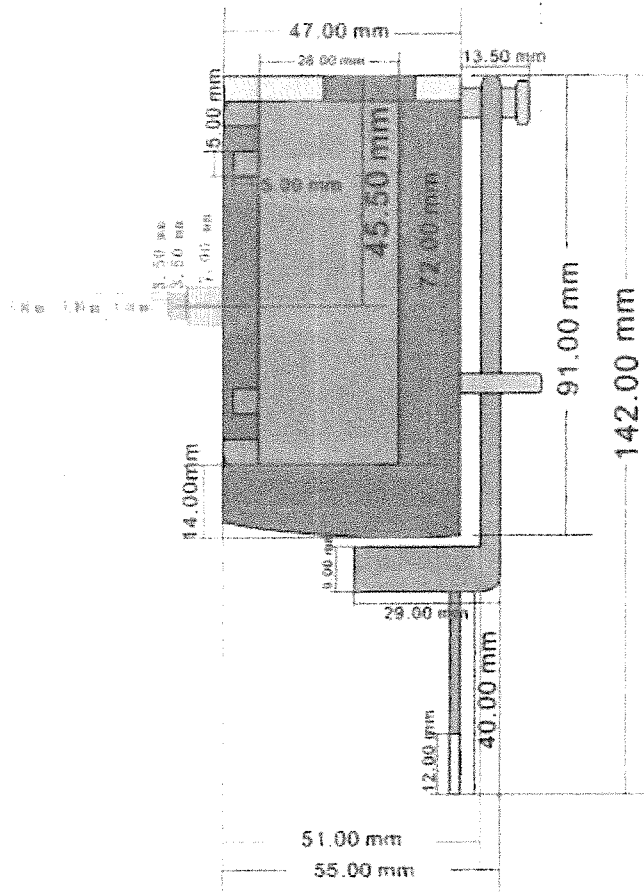




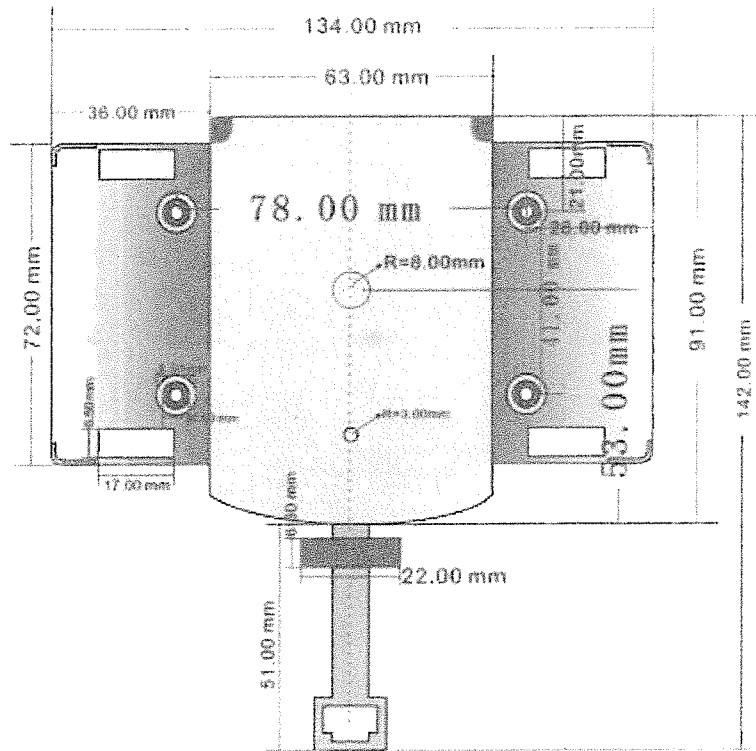


INSTRUCTION

Control box(Battery box) and Pendulum hanger:


Battery boxes use two D batteries

There are four sockets as below:

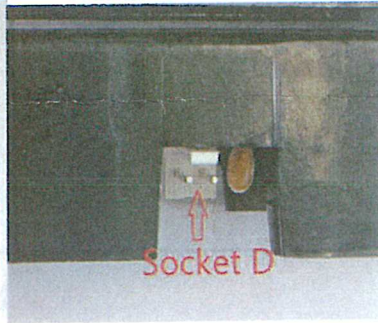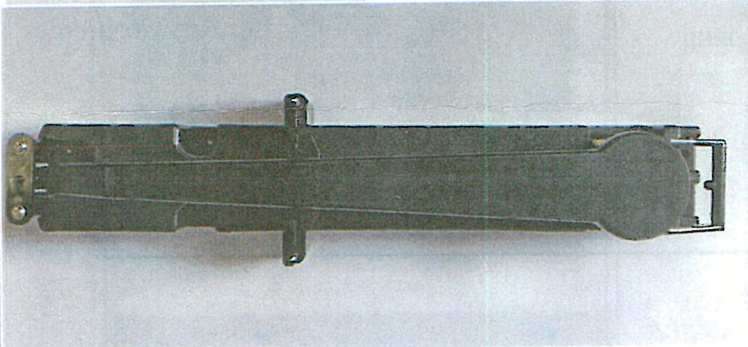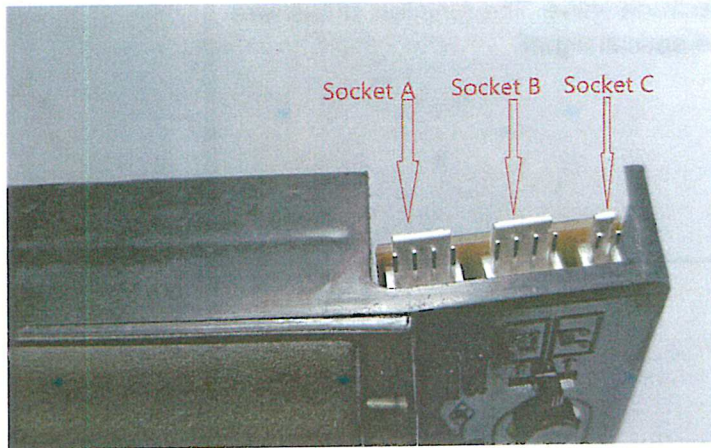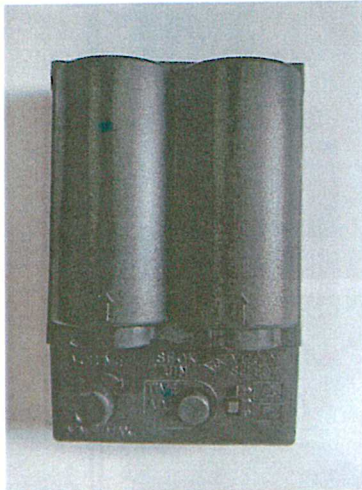


Time setting: "TIME ADJ" button, every time you press it, the sound of Ping-pang will increase once.

Music Switch: The music can be switched to Westminster or Ping-pang.

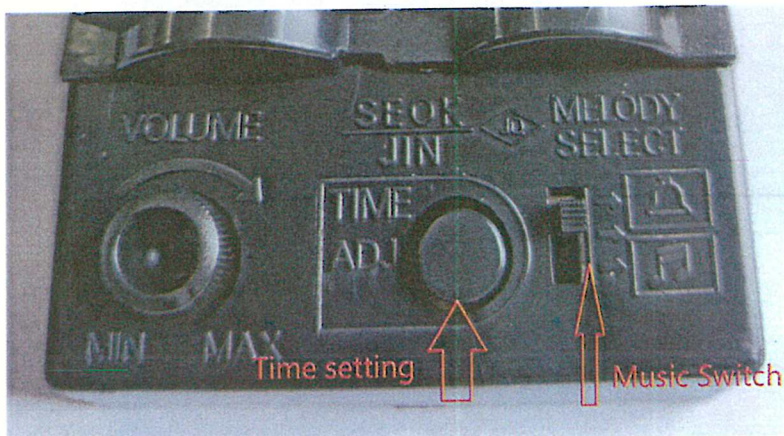


Wire connection 1:

There are one plug(Connecting socket C) and one two-electrode valve. The function of this wire is to receive optical signal.

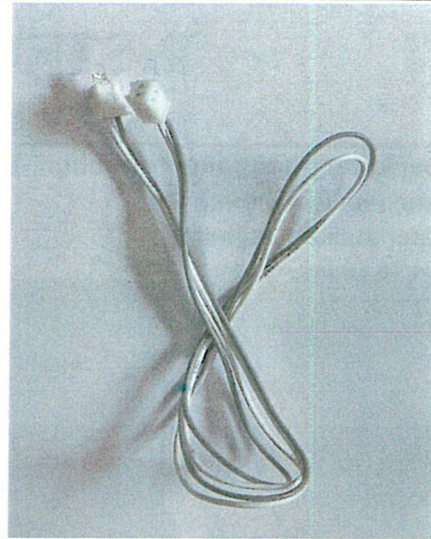

Wire connection 2:

There are two plugs include four-hole plug(connecting socket B) and two-hole plug (connecting socket D).

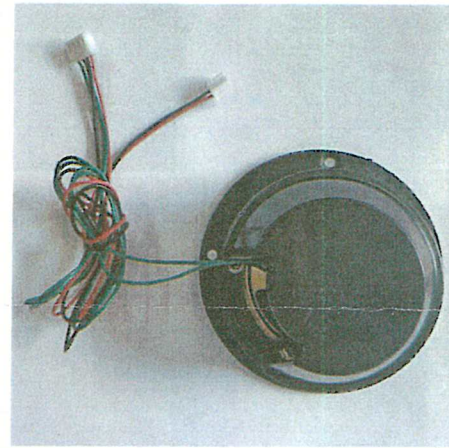

Wire connection 3:

There is one four-hole plug(connecting socket A)

