



Clock Movement Importers Quartz Cuckoo Instructions



Installation Instructions: Quartz Movement **QTP** with Cuckoo

Please Read the Instructions Carefully.-

DO NOT INSTALL BATTERIES UNTIL INSTRUCTED
DO NOT ADJUST THE HAND SHAFT UNTIL INSTRUCTED

1. Shipment.

Carefully Unpack the Movement
Set the Chime Select to the Top Position (On)

2. Installing the Movement

Insert the Hand Shaft through the Back of the Dial
Align the Top of the Movement with the Rear of the 12 O'Clock Position
Place the Fixing Nut Over the Hand Shaft and Tighten the Nut.

3. Mounting the Hands.

Align the HOUR hand with the 12 O'Clock Position
Then Press it onto the Hand Shaft
Align the MINUTE Hand with the 12 O'Clock Position
Then Place it LIGHTLY onto the Hand Shaft. DO NOT PRESS IT DOWN FIRM

4. Aligning the Hands with the Sound

Wind the Movement BACKWARDS from 12 O'clock to 11:30
Then Wind the Movement SLOWLY FORWARDS until a "CLICK" Sound
The Movement CLICK is only heard on the HOUR
The Hands Should both be Pointing to 12 O'Clock Position.



Clock Movement Importers Quartz Cuckoo Instructions

5. Correcting the Minute Hand Position

If the Hands do not Align with 12 O'Clock when the "CLICK" is Heard
Correct the Position of the MINUTE Hand by removing it
Align the Position of the MINUTE Hand with the 12 O'Clock Position.
Press the Minute Hand down into Position

REPEAT Step 4 and Step 5 until Both Hands Align with the "CLICK" at 12 O'Clock
Then Place the Hand Nut on top of the Hand Shaft

6. Setting Up.

Insert the Batteries according to the Markings (+ and -)
Let the Movement run for a few Minutes. Check that the Minute Hand has Moved
The Hour Chime WILL Play Every Time the Hand Passes the Hour.
Wind the Minute Hand Forward to 1 O'Clock
The Hands, The "CLICK" and The Chime should all Align.
Count the Number of Hour Strikes and Rotate the Hour Hand to the Correct Position
Then Wind the Minute Hand Forward to the Correct Time of Day

7. Chime Adjust, Night Time Reduction and Volume

This Movement has Cuckoo volume Selection (High / Low)
You can Adjust the Number of Hours to be Struck by Pressing a Button
It has a Daylight sensor that Automatically Stops Chiming at Night
This Movement has a Volume Selection (On / Low / Off)

Chime Selection :

Cuckoo (1)
Silent (2)

7. Battery Replacement

When do the Batteries Need to be Replaced?
If the Time or Pendulum Action Slows or Stops
If the Chime Quality is Poor or Irratic
Remove the Old Batteries
Turn the Minute Hand until Both Hands Reach 12 O'Clock
Follow Instructions 4. 5. and 6. to Ensure the Hands, the "CLICK" and 12 O'Clock Position are Correct BEFORE INSTALLING REPLACEMENT BATTERIES.

Replace the Batteries every 12 Months or When Required.

**Replace the Battery after 12 months or when the clock begins to lose time
or pendulum swing stops**