


## HANDING OF DOOR - BRITISH STANDARDS


### RIGHT-HAND DOOR

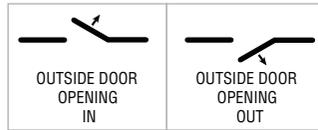

### LEFT-HAND DOOR



### SLIDING DOOR

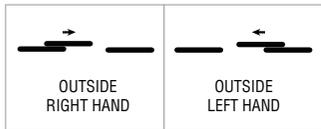

**NOTE:**


Case does not need to be opened at any time to change function or handing of this lock.

## MORTICE INSTRUCTIONS

1. Determine center line and height of installation on door.
2. Place template on door and align with center line, mark out cylinder holes and mortice cavity. Drill mortice cavity and cylinder holes to desired depth.
3. Clean out mortice and insert lock case to check desired cavity size.
4. Mark around front plate for face plate recess. Remove lock case from cavity and cut recess for face plate. Face plate must be flush with the door.
5. Clean out cavity and install lock case and cylinders.


**NOTE:**

REMOVE LOCK FROM DOOR BEFORE DRILLING

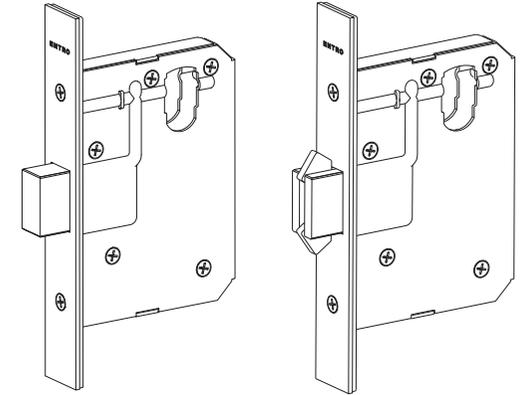

## STRIKE INSTALLATION

1. Mark out frame for strike and strike box if applicable.
2. Cut out recess in door frame for flush installation.
3. Install strike with screws provided.

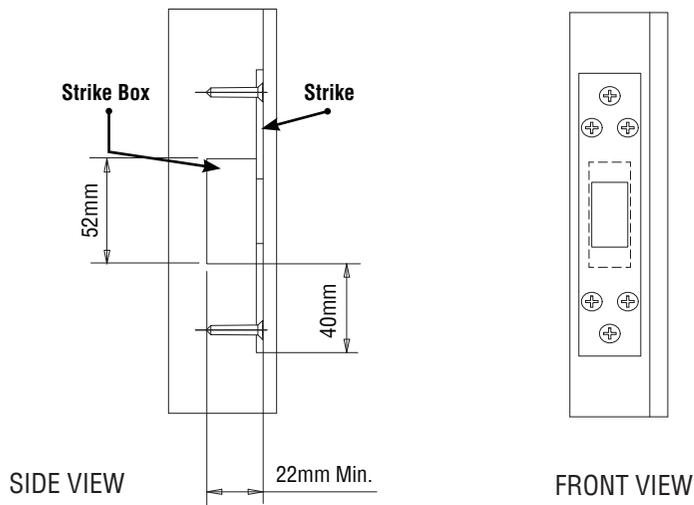

## INSTALLATION OF LOCK AND CYLINDER

1. Remove plastic cylinder cover cap with small flat blade screwdriver.
2. Install lock in mortice and insert cylinder.
3. Insert retaining pin to secure cylinder-ensure pin is flush with front plate.
4. Install face plate with two metal thread screws provided.

## GUARANTEE

This product is guaranteed against defects in workmanship and materials subject to fair wear and tear for a minimum period of two years from date of installation and assumes no liability for any of the following:

- Improper installation or failure to follow installation instructions.
- Failure due to improper maintenance.
- Indirect or inconsequential loss or damage.
- Cost of removal and/or replacement.
- Cost of freight and/or traveling time.

