



Open range of this hold open arm is 70° to 150° subject to door closer design

MOUNTING INSTRUCTIONS

Door closers with hold open arm are mounted in the same way as door closers with standard arm.

- This hold open arm is only for standard door mount on pull side application.

SETTING THE HOLD OPEN ANGLE

After door closer and hold open arm are mounted, open door and keep it in the hold open position desired. Tighten screw (with wrench).

READJUSTING THE HOLD OPEN ANGLE

Bring door leaf in adjusted hold open position. Loosen screw and move door leaf to new hold open position. Fix screw again and make it tighten.

ADJUSTING THE HOLD OPEN FUNCTION

1. Take off the nut, and separate arm B from link arm.
2. Find adjusting screw inside link arm, use a screwdriver to turn the adjusting screw to right or left hand side so that the strength of the hold open will be adjusted.
3. After the adjustment, assemble the arm again, and make sure that all the parts are in the right position.

IT IS NOT ALLOWED TO USE THE HOLD OPEN ARM ON TESTED SMOKE AND FIRE CONTROL DOORS.