


STEP 1

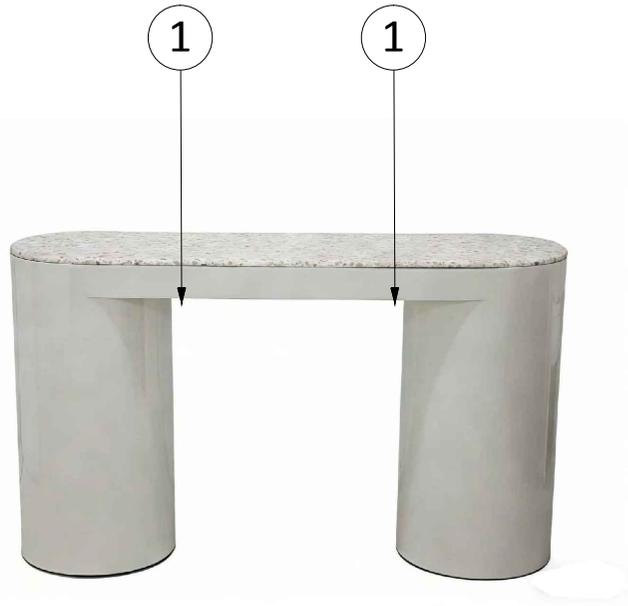


COMPONENT			
NO.	DRAW	NAME	QTY
1	A		2PCS
	B		4PCS
	C		2PCS
	D		2PCS
	E		4PCS
	F		4PCS
COMPONENT ANTI TIP			

STEP 2

ANTI-TIPPING HARDWARE INSTRUCTIONS


STEP 1

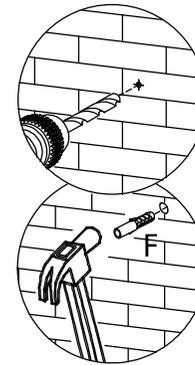

Position the bracket on your wall and mark the holes to be drilled. We recommend the bracket (D) is fitted just below the top of your unit so that it is not visible when the unit is in place.

1. When drilling into walls, always check there are no hidden wires or pipes etc...
2. Insert wall plugs (F) into the drilled hole


STEP 2

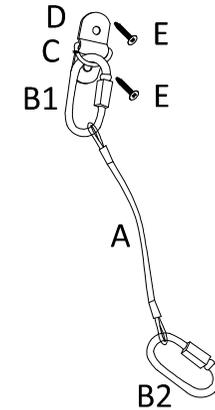

1. Put pull ring (C) into wall bracket (D).
2. Use screws (E) to attach bracket (D), with pull ring (C) in place.
3. Attach the strap (A) to pull ring (C) on the wall, using hoop (B1) and lock it.

*THIS IS THE PACKAGING FOR 1 SET. THE ANTI-TIP REQUIRED FOR EACH PIECE OF FURNITURE IS 2 SETS.

STEP 3

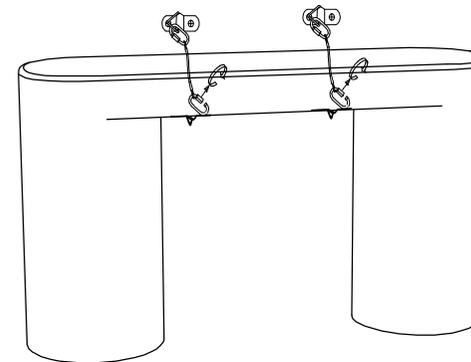

1. Carefully lift the unit into place and attach the strap (A) to the back of the unit using hoop (B2). Ensure the hoop (B) is locked.

⚠ WARNING

Children have died from furniture tip-over.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, or shelves.
- ALWAYS secure your television with an anchor device.

This is a permanent label. Do not remove!

⚠ WARNING
Serious injury or death can be caused by toppling furniture

- Help prevent tip-over:
- Anchor this product to a wall or other suitable surface
 - Use drawer locks to prevent children climbing
 - Aououe osie slul eul sseun dol uo sul buioeid pior
 - Check anchors regularly

ASSEMBLY INSTRUCTION

ANTI TIP - SABLE CONSOLE - TERRAZZO STONE/HIGH GLOSS