



ASSEMBLY INSTRUCTIONS

SORRENTO - FV0026




PARTS :

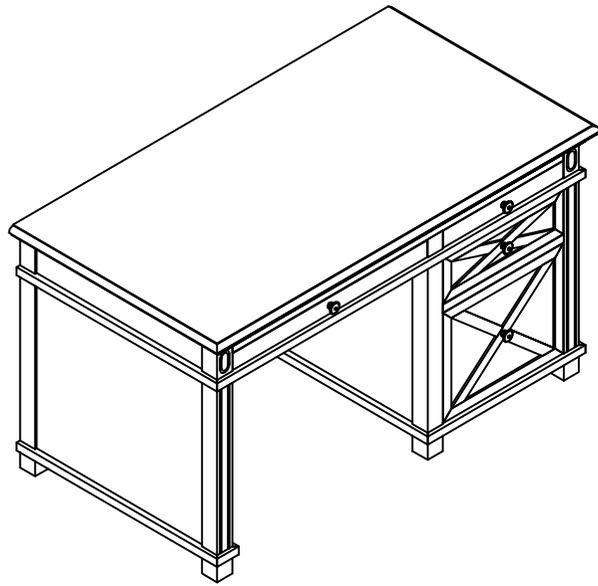


PRODUCT SIZE : 1400W x 760D x 775H

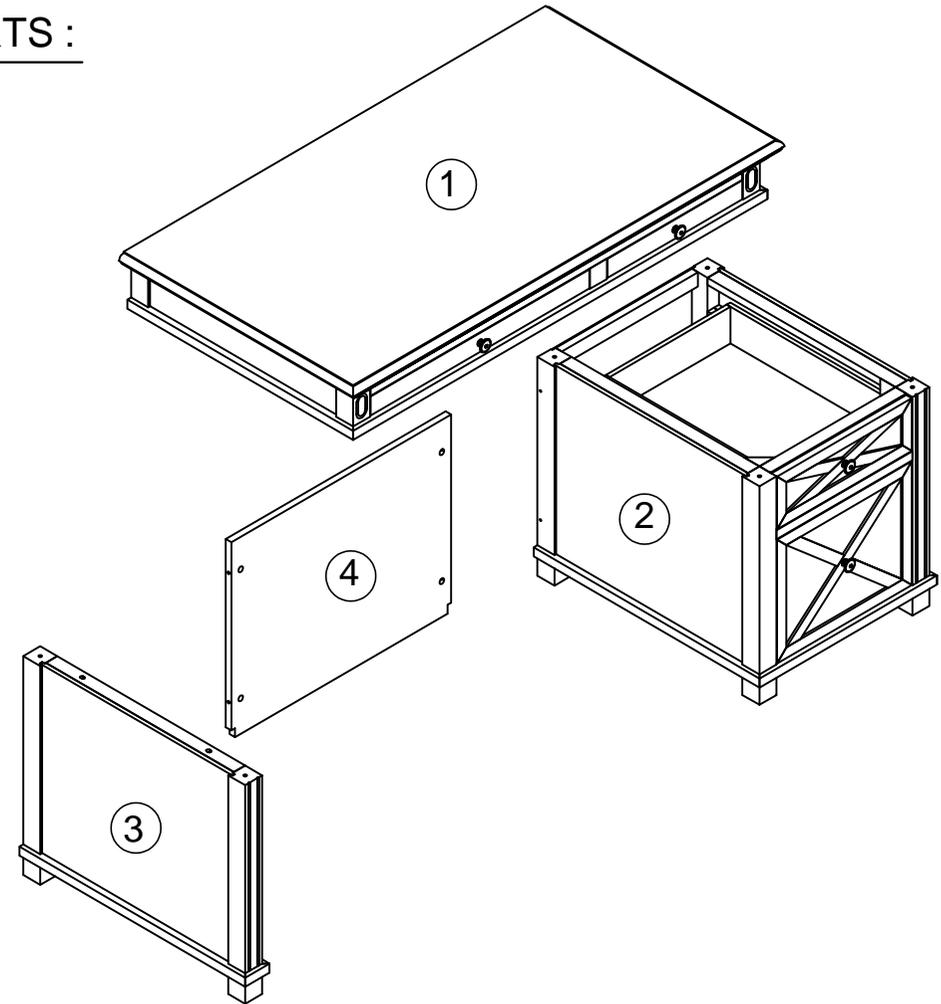


HARDWARE LIST

 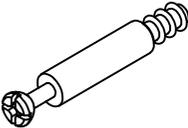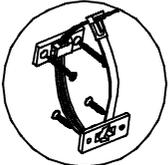A	B	C	D	E	F
<p>Cam Bolt M6 x 35 mm</p> 	<p>Cam Bolt Ø15 x 13 mm</p> 	<p>Wood Dowel Ø10 x 30 mm</p> 	<p>Bolt M6 x 30 mm</p> 	<p>Allen Key M4</p> 	
<p>4 pcs</p>	<p>4 pcs</p>	<p>6 pcs</p>	<p>2 pcs</p>	<p>1 pc</p>	<p>1 pc</p>

Step 1 :

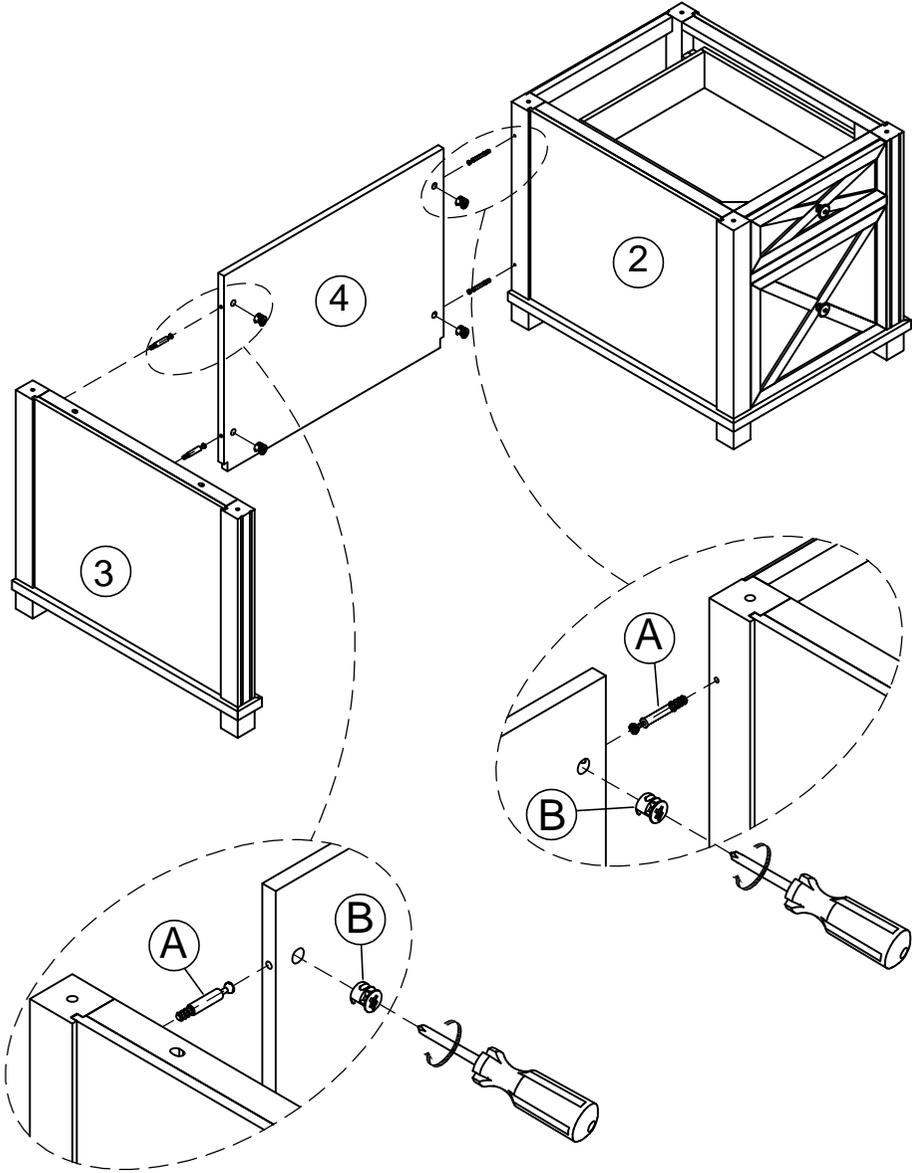

Step 2 :

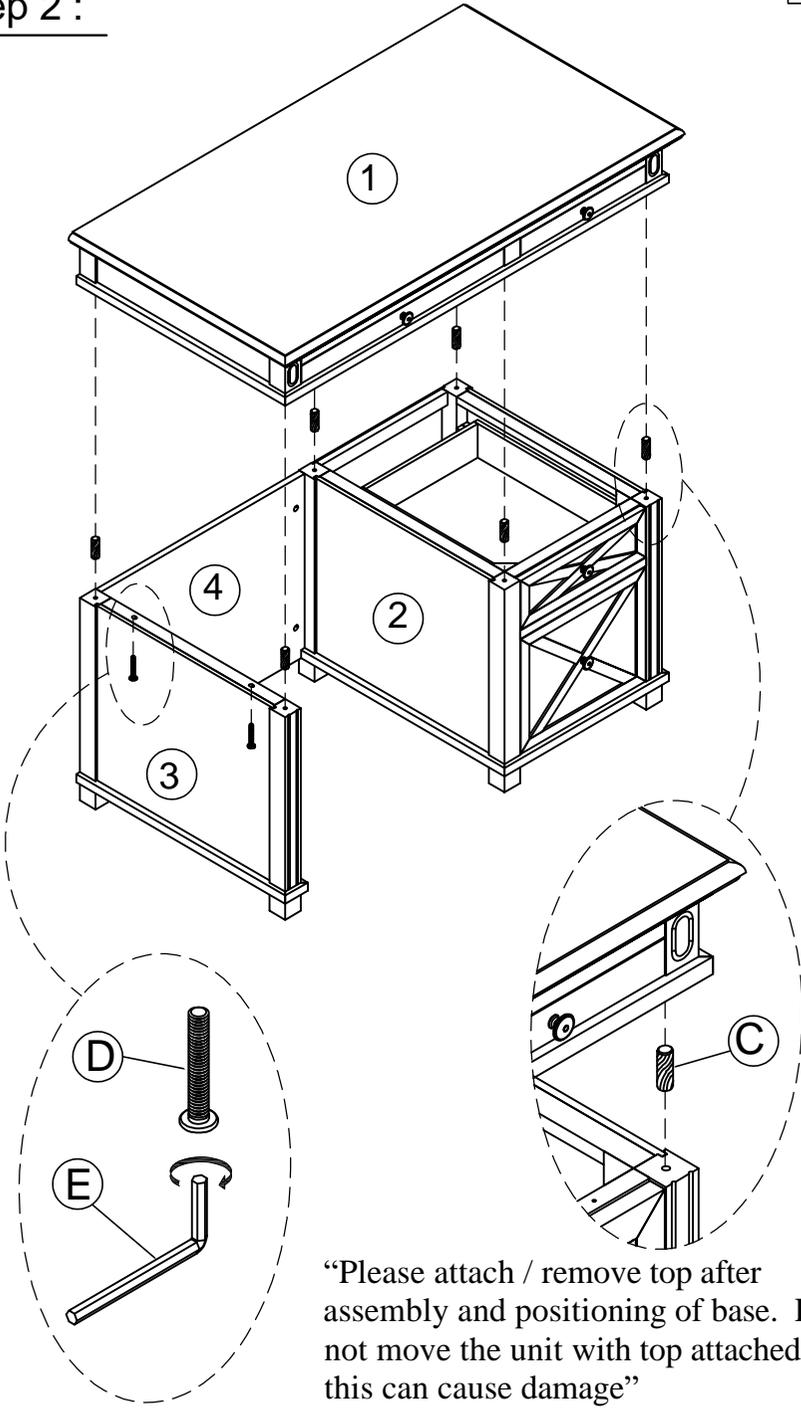

“Please attach / remove top after assembly and positioning of base. Do not move the unit with top attached as this can cause damage”

Step 3 :

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, or shelves.
- ALWAYS secure your television with an anchor device.

This is a permanent label. Do not remove!

