



# ASSEMBLY INSTRUCTIONS

WEST BEACH - WB1026



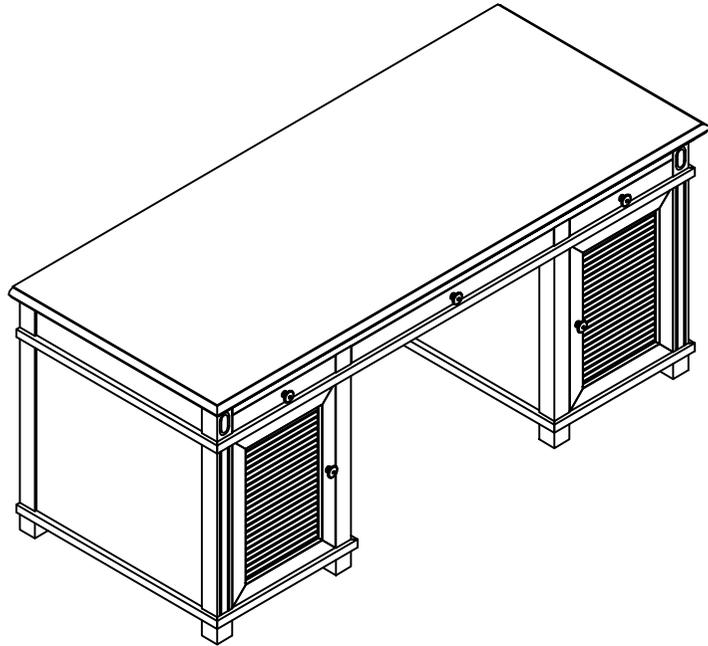


PRODUCT SIZE : 1800W x 760D x 775H


## PARTS :

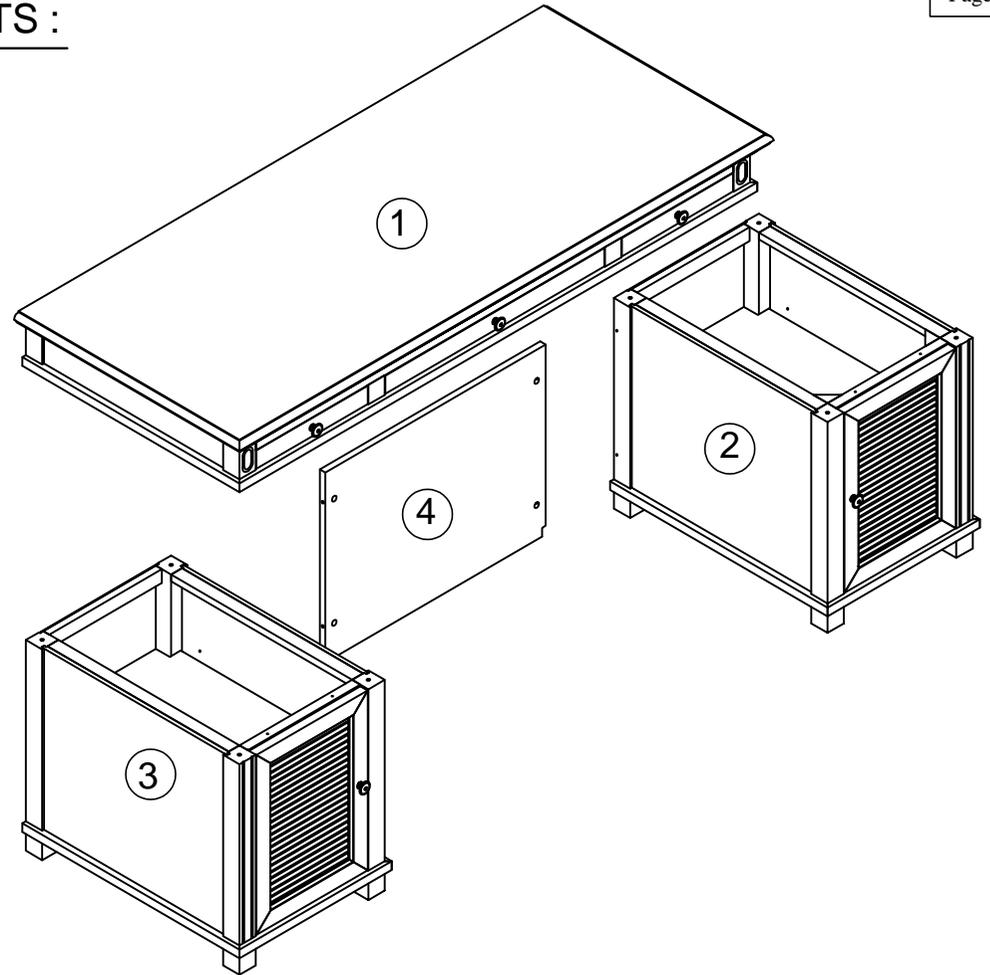


## HARDWARE LIST

 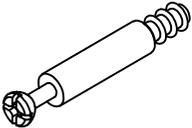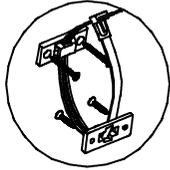A	B	C	D	E
<p>Cam Bolt M6 x 35 mm</p> 	<p>Cam Bolt Ø15 x 13 mm</p> 	<p>Wood Dowel Ø10 x 30 mm</p> 	<p>Svrew M4 x 35 mm</p> 	
<p>4 pcs</p>	<p>4 pcs</p>	<p>8 pcs</p>	<p>4 pcs</p>	<p>1 pc</p>

Step 1 :

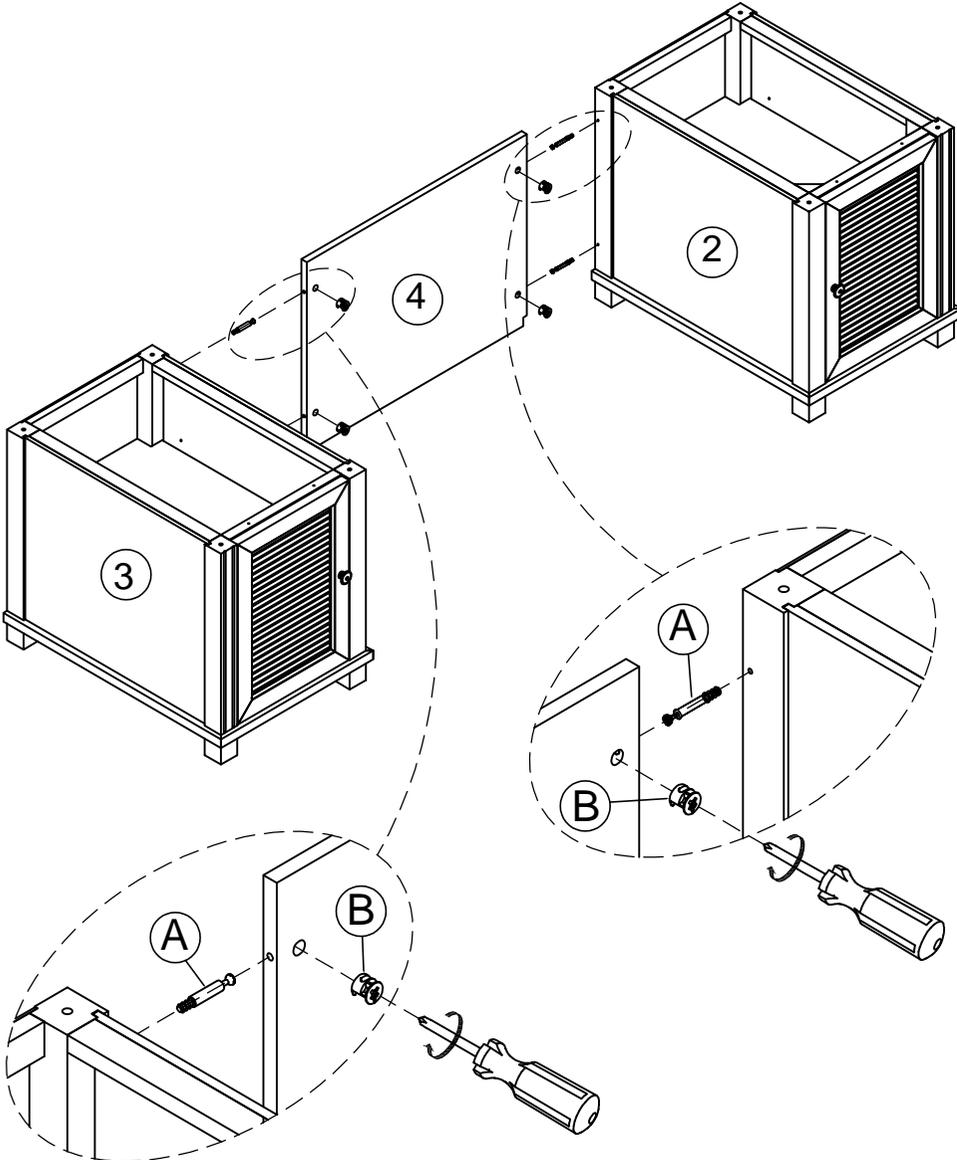

Step 2 :

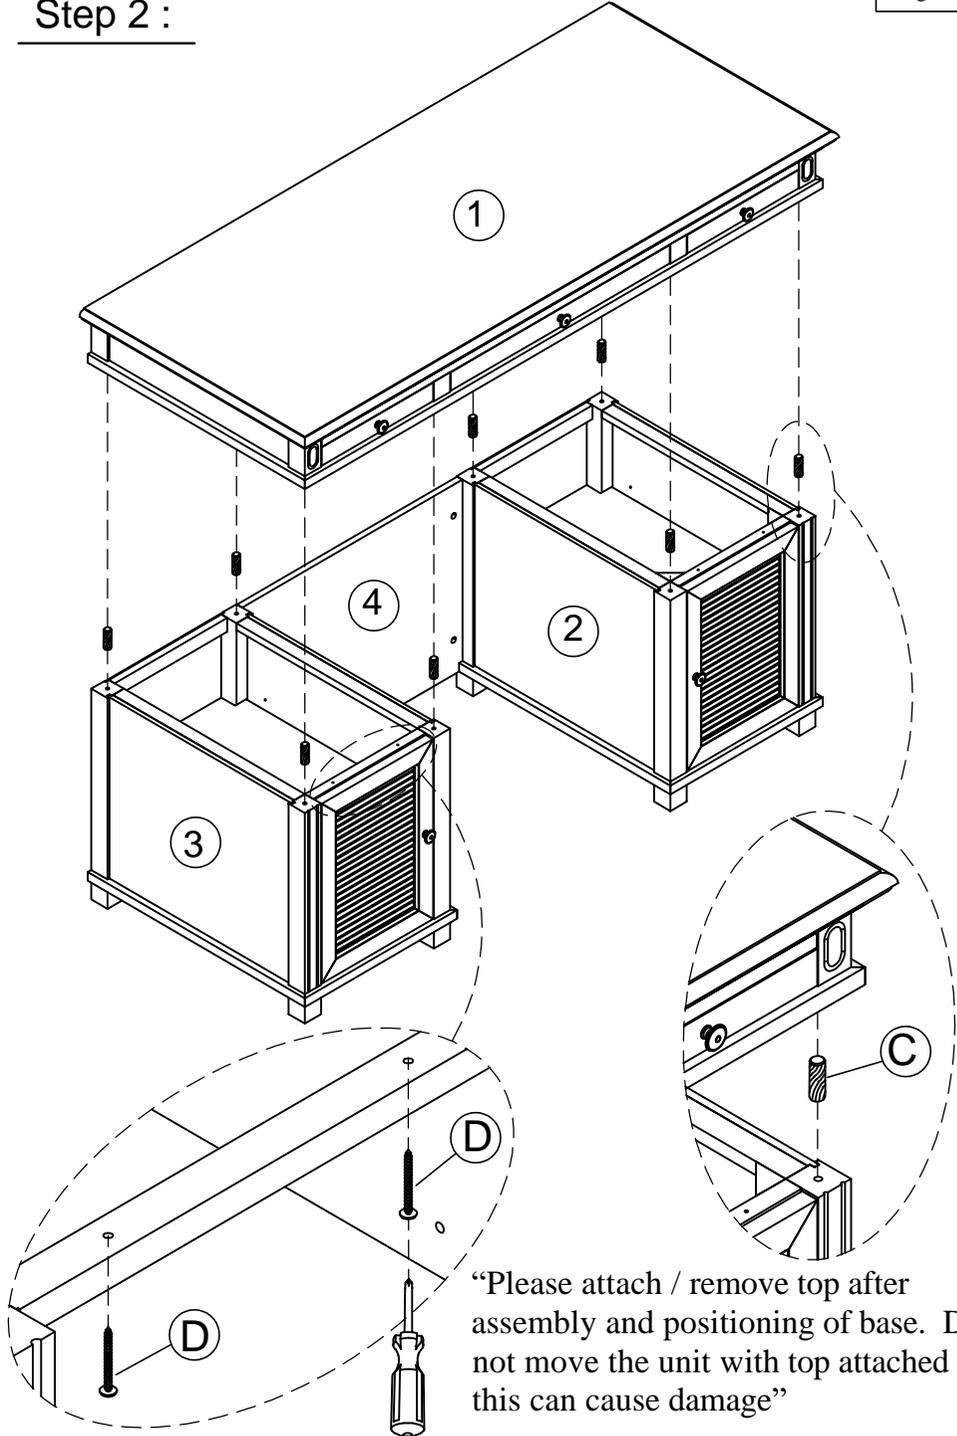

“Please attach / remove top after assembly and positioning of base. Do not move the unit with top attached as this can cause damage”

Step 3 :

**⚠ WARNING**



**Children have died from furniture tipover.**

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, or shelves.
- ALWAYS secure your television with an anchor device.

**This is a permanent label. Do not remove!**

