



Best

Oven and Grill Cleaner

PRODUCT DATA SHEET

HD BEST OVEN AND GRILL CLEANER

(NZFSA APPROVED C32)

OVEN, COMBI OVEN, GRILL CLEANER PLUS HEAVY DUTY DEGREASER

HD BEST OVEN AND GRILL CLEANER is an oven cleaner, heavy duty kitchen degreaser and cleaner provides quick, easy removal of even the worst greasy kitchen soils. This versatile cleaner provides the best grease cutting action for ovens, grills.

HD BEST OVEN AND GRILL CLEANER when used in conjunction with the unique FOAMING APPLICATOR enables **HD BEST OVEN AND GRILL CLEANER** to be applied as a thick foam that effectively cleans greasy and carbonised soils. **HD BEST OVEN AND GRILL CLEANER**'s foaming properties eliminates the fumes associated with harsh oven cleaners, providing sustained cleaning for the entire "soak" period. This sustained cleaning is due to the process of small bubbles bursting in the foam after application, providing a fresh solution that continually rinses away spent product.

HD BEST OVEN AND GRILL CLEANER contains non-toxic solvents to cut through grease and carefully formulated surfactants to prevent soil re-depositing on the surface.

PROPERTIES

Appearance	Clear, red, non viscous liquid
Biodegradability	Yes, all surfactants
Caustic	Present as potassium hydroxide at 69g/L
Foam	When used via the FOAMING APPLICATOR copious & stable
Wetting Ability	Rapid and penetrating
Odour	Slight characteristic "solvent"
pH (neat product)	Typically 13.5
Rinsability	Easily achieved and complete
Solubility	Instant and complete in all proportions

PRODUCT DATA SHEET

RECOMMENDED USE DIRECTIONS

Apply **HD BEST OVEN AND GRILL CLEANER** undiluted to oven surface using the unique FOAM-FREE APPLICATOR. Adjust the sprayer by rotating the foamer tip to the point that produces the thickest foam and if needed, adjust the tip to a fine stream.

Important Note:

For best results use on a “warm” surface of 50°C - 60°C. Higher temperatures will result in premature foam collapse and possible fuming.

Cover the entire surface to be cleaned with **HD BEST OVEN AND GRILL CLEANER** and allow to dwell for 5-10 minutes. For heavily soiled surfaces, use a scouring pad or stiff brush in addition to **HD BEST OVEN AND GRILL CLEANER**. Regular cleaning should eliminate this requirement, if needed, on the initial “shock” clean.

GRIDDLE PLATE CLEANING

NOTE: Grill tops often become pitted and scratched and develop low spots if grill blocks or abrasives are used for cleaning.

Procedure for cleaning with HD BEST OVEN AND GRILL CLEANER:

1. Allow grill to cool and scrape down with a spatula. Surface should be cool enough to permit placing hand on surface to prevent warping when cleaning process is started. Empty drip pan.
2. Pour or spray **HD BEST OVEN AND GRILL CLEANER** over grill surface.
3. Add an equal amount of water.
4. Turn on grill. Adding warm water as necessary to keep surface covered with wet solution.
5. Turn off grill. Agitate with spatula until dark deposit loosens. Scrape into grease trough.
6. Mix 1/2 cup Lime Scale Remover with 1/2 cup water. Pour on grill.
7. Stir gently with spatula until acid solution has covered entire grill surface.
8. Scrape solution into trough. Mop grill plate with rags and discard after use.
9. Dry with clean cloth and rub down grill surface with cooking oil.

Due to the fast acting formulation of **HD BEST OVEN AND GRILL CLEANER**, it takes less time to get those tough cleaning jobs done. Continued use of **HD BEST OVEN AND GRILL CLEANER** keeps kitchen surfaces cleaner, reducing daily maintenance time.