

DISH DIRECT
AUTOMATIC DISHWASHING MACHINE POWDER

To obtain sparkling cleanliness and effective bacterial control in machine dishwashing operations, it is necessary to use a specially formulated quality product. **Dish Direct** has been designed to meet these stringent requirements.

Dish Direct is a concentrated, carefully blended powdered detergent that will clean and sanitise dishes, crockery, plastic ware, glasses, and cutlery in commercial or domestic dishwashing machines.

In addition to the powerful detergent action that quickly removes lipstick, grease, oil and food residues, **Dish Direct** contains a special organic chlorine compound to kill bacteria and bleach tea, coffee and other difficult stains.

Because the type of chlorine employed is heat stable, it remains effective for long periods, even in very hot water and therefore the amount required for topping up is much less than with conventional chlorinated products.

The concentration of water softeners in the formulation ensures that even very hard water is effectively softened - consequently, the spray bars and machine interiors are kept clean and free from hard water scale.

Dish Direct offers the user genuine economy, as the high active content allows a low level of usage for both the initial charge and subsequent topping up. The strength required varies from less than 10 grams per 5 litres for automatically controlled continuous type machines to a maximum of only 15 grams per 5 litres on batch type machines with short wash cycles.

Because **Dish Direct** is low foaming and extremely free rinsing in nature, the load can be effectively rinsed with a very small quantity of water. In “Eswood” and similar machines where the rinse water runs into the detergent tank, additional savings are obtained by minimising dilution of the detergent solution.

DIRECTIONS FOR USE:

Eswood and Hobart square sliding door type dishwashing machines:

1. Charge detergent tank with a cupful of **Dish Direct**. Wash each load for 2 to 3 minutes.
2. Rinse for 2 seconds.
3. After every five loads, add one tablespoon of **Dish Direct** to replace detergent lost during rinsing.
4. If badly stained articles are to be processed, double the initial charge and wash for 5 minutes. In extremely stubborn cases, a quick wipe with a cloth may be needed. Once clean, regular use of **Dish Direct** at normal rates will prevent future staining.

Hobart Dome type:

1. Charge tank initially with four tablespoons of **Dish Direct**. Wash each load for 2 to 3 minutes.
2. Rinse.
3. Recharge detergent tank with one tablespoon of **Dish Direct** after every fifth load or alternatively, charge detergent tank with one teaspoon of **Dish Direct** for every load.
4. If badly stained articles are to be processed, double the initial charge and wash for 5 minutes. In extremely stubborn cases, a quick wipe with a cloth may be needed. Once clean, regular use of **Dish Direct** at normal rates will prevent future staining.