




# Air Reversible Drill Item No : QE-441 QE-443

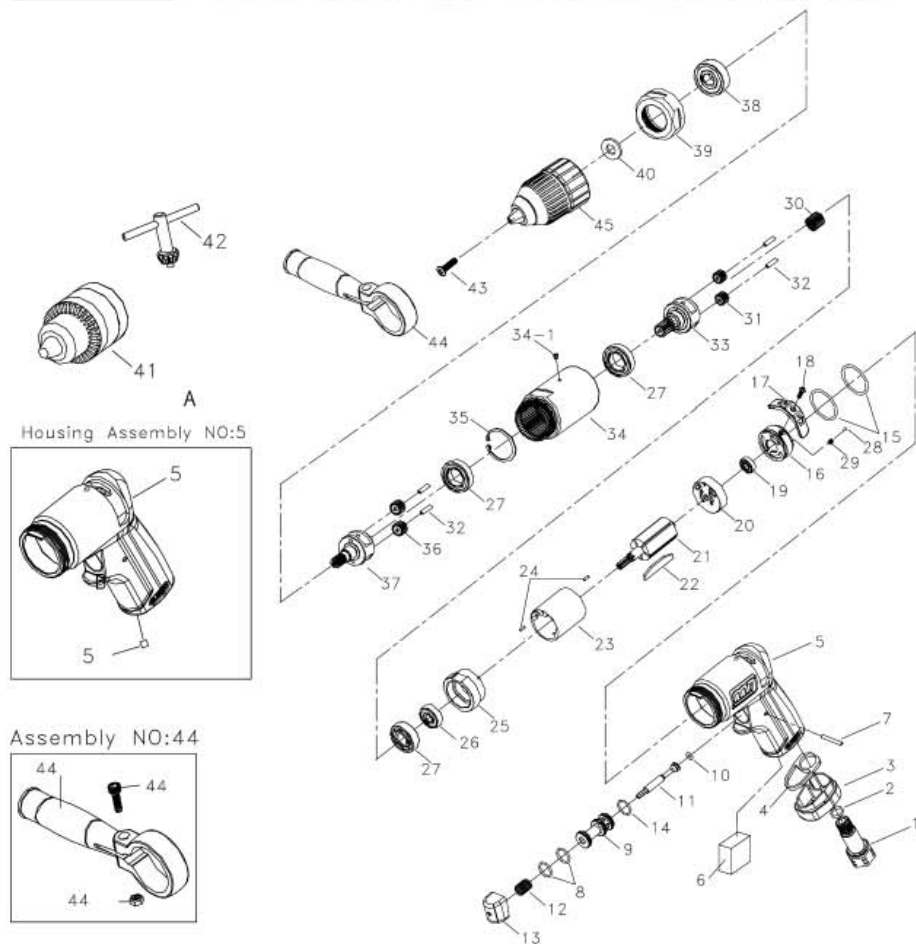

● The consumable parts ▲ The replacement parts ★ The non-replacement parts



## Part List QE-441 QE-443

|   | NO. | INDEX NO. | DESCRIPTION                | Q'TY |
|---|-----|-----------|----------------------------|------|
| ★ | 01  | QE-441P01 | Air Inlet                  | 1    |
| ★ | 02  | QE-441P02 | O-Ring                     | 1    |
| ★ | 03  | QE-441P03 | Exhaust Deflector          | 1    |
| ★ | 04  | QE-441P04 | Washer                     | 1    |
| ★ | 05  | QE-441T05 | Housing Assembly (05A.05B) | 1SET |
| ★ | 05A | -         | Motor Housing              | 1    |
| ★ | 05B | -         | Steel Ball                 | 1    |
| ● | 06  | QE-441P06 | Muffler Element            | 1    |
| ★ | 07  | QE-441P07 | Pin                        | 1    |
| ● | 08  | QE-441T08 | O-Ring (2pcs)              | 1SET |
| ★ | 09  | QE-441P09 | Throttle Valve Seat        | 1    |
| ★ | 10  | QE-441P10 | O-Ring                     | 1    |
| ★ | 11  | QE-441P11 | Throttle Valve Plunger     | 1    |
| ★ | 12  | QE-441P12 | Spring                     | 1    |
| ★ | 13  | QE-441P13 | Trigger                    | 1    |
| ★ | 14  | QE-441P14 | O-Ring                     | 1    |
| ★ | 15  | QE-441T15 | O-Ring (2pcs)              | 1SET |
| ★ | 16  | QE-441P16 | Reverse Valve              | 1    |
| ★ | 17  | QE-441P17 | Reverse Valve Knob         | 1    |
| ★ | 18  | QE-441P18 | Screw                      | 1    |
| ▲ | 19  | QE-441P19 | Ball Bearing               | 1    |
| ▲ | 20  | QE-441P20 | Rear End Plate             | 1    |
| ▲ | 21  | QE-441P21 | Rotor                      | 1    |
| ● | 22  | QE-441T22 | Rotor Blade (5pcs)         | 1SET |
| ▲ | 23  | QE-441P23 | Cylinder                   | 1    |
| ▲ | 24  | QE-441T24 | Spring Pin (2pcs)          | 1SET |

|   | NO. | INDEX NO. | DESCRIPTION                    | Q'TY |
|---|-----|-----------|--------------------------------|------|
| ▲ | 25  | QE-441P25 | Front End Plate                | 1    |
| ▲ | 26  | QE-441P26 | Ball Bearing                   | 1    |
| ★ | 27  | QE-441T27 | Ball Bearing (3pcs)            | 1SET |
| ★ | 28  | QE-441P28 | Steel Ball                     | 1    |
| ★ | 29  | QE-441P29 | Spring                         | 1    |
| ● | 30  | QE-441P30 | Main Gear                      | 1    |
| ● | 31  | QE-441T31 | Planet Gear (2pcs)             | 1SET |
| ● | 32  | QE-441T32 | Pin (4pcs)                     | 1SET |
| ▲ | 33  | QE-441P33 | Work Spindle                   | 1    |
| ★ | 34  | QE-441T34 | Gear Housing Assembly (34.34A) | 1SET |
| ★ | 34A | -         | Grease Fitting                 | 1    |
| ★ | 35  | QE-441P35 | Retainer                       | 1    |
| ★ | 36  | QE-441T36 | Planet Gear (2pcs)             | 1SET |
| ● | 37  | QE-441P37 | Work Spindle                   | 1    |
| ▲ | 38  | QE-441P38 | Ball Bearing                   | 1    |
| ★ | 39  | QE-441P39 | End Cap                        | 1    |
| ★ | 40  | QE-441P40 | Washer                         | 1    |
| ★ | 41  | QE-443P41 | Key Chuck (for QE443)          | 1    |
| ★ | 42  | QE-443P42 | Chuck Key                      | 1    |
| ● | 43  | QE-441P43 | Screw                          | 1    |
| ★ | 44  | QE-441T44 | Handle Assembly (44A.44B.44C)  | 1SET |
| ★ | 44A | -         | Handle                         | 1    |
| ★ | 44B | -         | Screw                          | 1    |
| ★ | 44C | -         | Lock Nut                       | 1    |
| ● | 45  | QE-441P45 | Keyless Chuck (for QE441)      | 1    |