


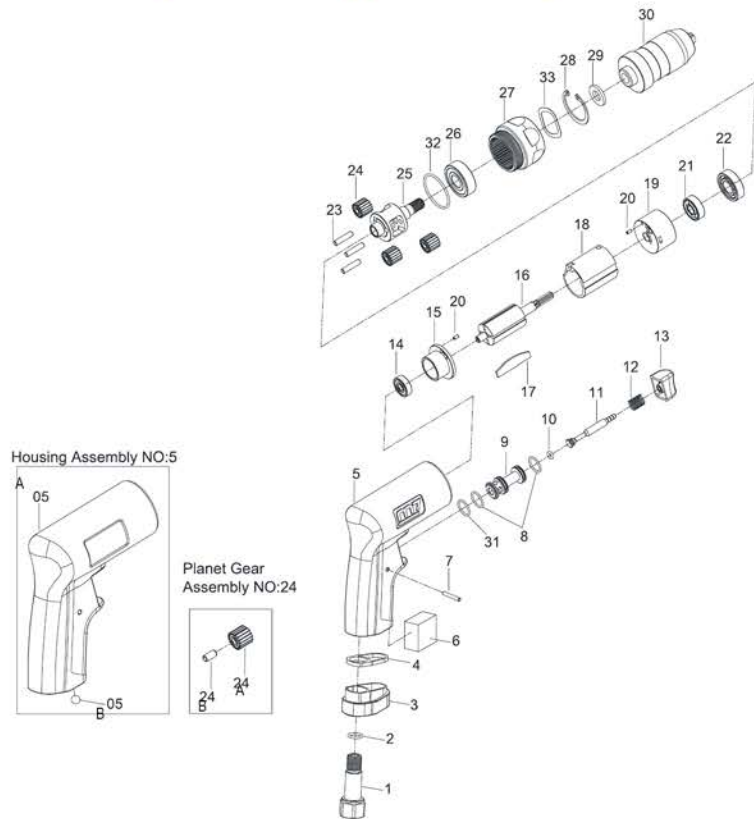

Part List QE-532

	NO.	INDEX NO.	DESCRIPTION	Q'TY
★	01	QE-532P01	Air Inlet	1
●	02	QE-532P02	O-Ring	1
★	03	QE-532P03	Exhaust Deflector	1
●	04	QE-532P04	Washer	1
★	05	QE-532T05	Housing Assembly (05A.05B)	1SET
★	05A	-	Motor Housing	1
★	05B	-	Steel Ball	1
●	06	QE-532P06	Muffler Element	1
★	07	QE-532P07	Pin	1
★	08	QE-532T08	O-Ring (2PCS)	1SET
★	09	QE-532P09	Throttle Valve Seat	1
★	10	QE-532P10	O-Ring	1
★	11	QE-532P11	Throttle Valve Plunger	1
★	12	QE-532P12	Spring	1
★	13	QE-532P13	Trigger	1
●	14	QE-532P14	Ball Bearing	1
★	15	QE-532P15	Rear End Plate	1
★	16	QE-532P16	Rotor	1
●	17	QE-532T17	Rotor Blade (4PCS)	1SET
★	18	QE-532P18	Cylinder	1

★	19	QE-532P19	Front End Plate	1
★	20	QE-532T20	Spring Pin (2PCS)	1SET
●	21	QE-532P21	Ball Bearing	1
▲	22	QE-532P22	Ball Bearing	1
●	23	QE-532T23	Pin (3PCS)	1SET
●	24	QE-532T24	Planet Gear Assembly (24A.24B)	1SET
●	24A	-	Planet Gear (3PCS)	1SET
●	24B	-	Bushing (3PCS)	1SET
▲	25	QE-532P25	Work Spinder	1
▲	26	QE-532P26	Ball Bearing	1
★	27	QE-532P27	Gear Housing	1
★	28	QE-532P28	Retainer	1
★	29	QE-532P29	Washer	1
★	30	QE-532P30	Keyless Chuck	1
★	31	QE-532P31	O-Ring	1
★	32	QE-532P32	O-Ring	1
★	33	QE-532P33	Washer	1