




Air surface-cleaning tool

Item No : QB-812

● The consumable parts ▲ The replacement parts ★ The non-replacement parts



# Part List QB-812

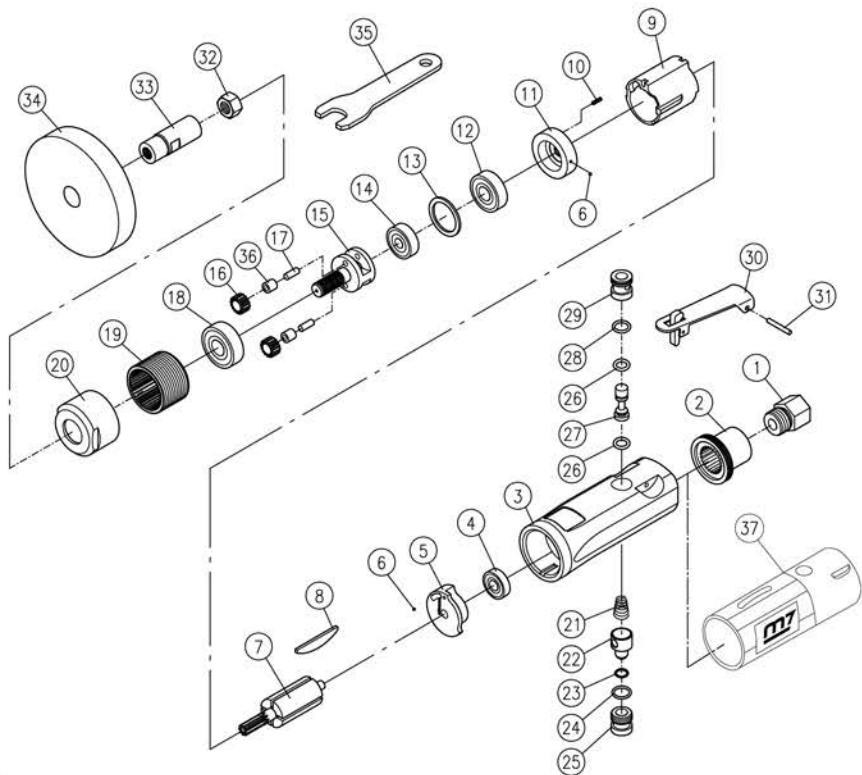

	NO.	PART NO.	DESCRIPTION	Q'TY
★	1	QB-812P01	Air Inlet	1
▲	2	QB-812P02	Exhaust Deflector	1
★	3	QB-812P03	Motor Housing	1
●	4	QB-812P04	Ball Bearing	1
▲	5	QB-812P05	End Plate	1
★	6	QB-812T06	Steel Ball ( 2 pcs )	1 SET
▲	7	QB-812P07	Rotor	1
●	8	QB-812T08	Rotor Blade ( 4 pcs )	1 SET
▲	9	QB-812P09	Cylinder	1
▲	10	QB-812P10	Pin	1
▲	11	QB-812P11	Front Plate	1
●	12	QB-812P12	Ball Bearing	1
▲	13	QB-812P13	Washer	1
●	14	QB-812P14	Ball Bearing	1
▲	15	QB-812P15	Gear Cage	1
●	16	QB-812T16	Planet Gear ( 2 pcs )	1 SET
●	17	QB-812T17	Pin ( 2 pcs )	1 SET
●	18	QB-812P18	Ball Bearing	1

	NO.	PART NO.	DESCRIPTION	Q'TY
★	19	QB-812P19	Internal Gear	1
★	20	QB-812P20	Clamp Nut	1
▲	21	QB-812P21	Spring	1
★	22	QB-812P22	Air Regulator	1
●	23	QB-812P23	"O" Ring	1
●	24	QB-812P24	"O" Ring	1
★	25	QB-812P25	Valve Screw	1
●	26	QB-812T26	"O" Ring ( 2 pcs )	1 SET
▲	27	QB-812P27	Throttle Lever	1
●	28	QB-812T28	"O" Ring ( 2 pcs )	1 SET
★	29	QB-812P29	Valve Bushing	1
▲	30	QB-812P30	Throttle Lever	1
▲	31	QB-812P31	Pin	1
★	32	QB-812P32	Nut	1
★	33	QB-812P33	Spindle	1
●	34	QB-812P34	Pad	1
★	35	QB-812P35	Spindle	1
●	36	QB-812T36	Bushing ( 2 pcs )	1 SET
▲	37	QB-812P37	Grip	1