


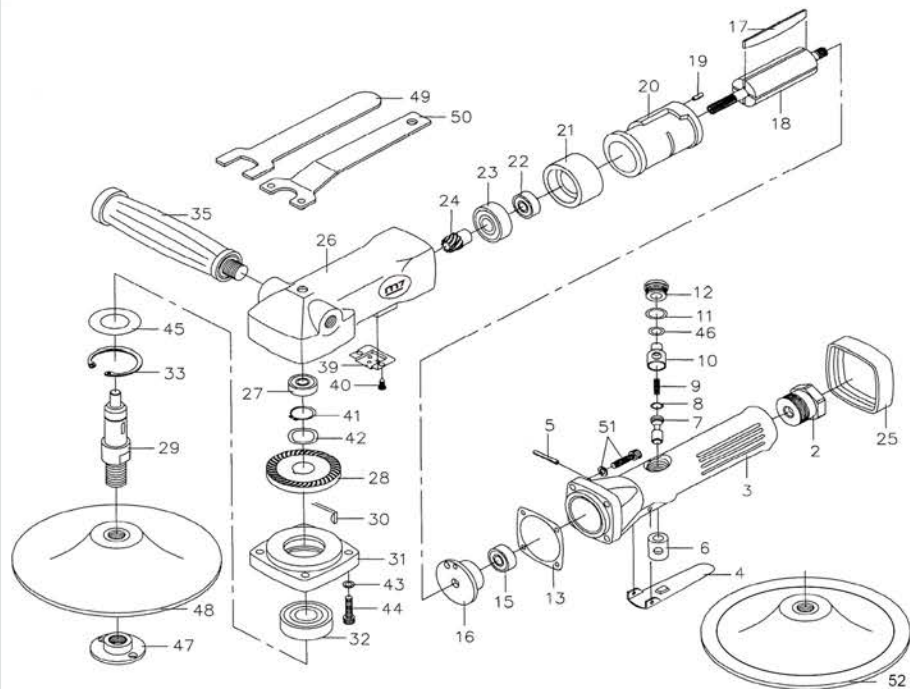

7" Air Angle Polisher

Item No : QP-317 / QP-327

● The consumable parts ▲ The replacement parts ★ The non-replacement parts



Part List Item No : QP-317 / QP-327



NO.	Index No.	Description	Q'ty	NO.	Index No.	Description	Q'ty		
★	2	QP-317P02	Air Inlet	1	★	26	QP-317P26	Motor Housing	1
★	3	QP-317P03	Valve Body	1	●	27	QP-317P27	Bearing	1
★	4	QP-317P04	Lever	1	●	28	QP-317P28	Bevel Gear	1
★	5	QP-317P05	Lever Pin	1	★	29	QP-317MP29	Spindle M14	1
★	6	QP-317P06	Valve Bushing	1	★	30	QP-317SP29	Spindle 5/8"-11	1
★	7	QP-317P07	Valve Stem	1	★	30	QP-317P30	Woodruff Key	1
★	8	QP-317P08	O Ring	1	★	31	QP-317P31	Housing Cap	1
★	9	QP-317P09	Valve Screw	1	▲	32	QP-317P32	Bearing	1
★	10	QP-317P10	Air Controller	1	★	33	QP-317P33	Retaining Ring	1
★	11	QP-317P11	O Ring	1	★	35	QP-317P35	Handle	1
★	12	QP-317P12	Valve Screw	1	★	39	QP-317P39	Exhaust Deflector	1
●	13	QP-317P13	Gasket	1	★	40	QP-317T40	Exhaust Deflector Screw (2pcs)	1 SET
★	15	QP-317P15	Bearing	1	★	41	QP-317P41	Retaining Ring	1
▲	16	QP-317P16	Rear End Plate	1	★	42	QP-317P42	Wave Washer	1
●	17	QP-317T17	Rotor Blade (4pcs)	1 SET	★	43	QP-317T43	Spring Washer (4pcs)	1 SET
★	18	QP-317P18	Rotor	1	★	44	QP-317T44	Screw (4pcs)	1 SET
★	19	QP-317P19	Cylinder Pin	1	★	45	QP-317P45	Wave Washer	1
★	20	QP-317P20	Cylinder	1	★	46	QP-317P46	O Ring	1
★	21	QP-317P21	Front End Plate	1	★	47	QP-317MP47	Locknut M14	1
●	22	QP-317P22	Bearing	1	★	48	QP-317SP47	Locknut 5/8"-11	1
●	23	QP-317P23	Bearing	1	▲	48	QP-317P48	7" Sanding Pad	1
●	24	QP-317P24	Bevel Pinion	1	★	49	QP-317P49	Wrench	1
★	25	QP-317P25	Housing Band	1	★	50	QP-317P50	Wrench	1
					★	51	QP-317P51	Screw (4pcs)	1 SET
●					●	52	QP-327MP52	7" Pad (for QP-327) M14	1
							QP-327SP52	7" Pad (for QP-327) 5/8"-11	1