

The operating manual of Shut-off Screwdriver



- How to change the bits



Push the directional switch and plug in the bit to the center.

- How to lubricate this air tool

Inject 2~3 C.C air tool oil from the inlet of tool for extended using period.



- How to set up the desired torque

1. Open the adjustment cover



2. Use the screwdriver to adjust the torque.

(1) Turn the screwdriver forward to adjust the higher torque. (H)

(2) Turn the screwdriver reversal to adjust the lower torque. (L)



3. Close the adjustment cover



4. Test the torque of shut-off screwdriver by digital torque tester for confirming the torque which is suitable.



5. The instruction button

(1) The reversal button by push with turn



(2) The forward button by turn back






Shut off screwdriver

Item No : RA-4021



● The consumable parts ▲ The replacement parts ★ The non-replacement parts

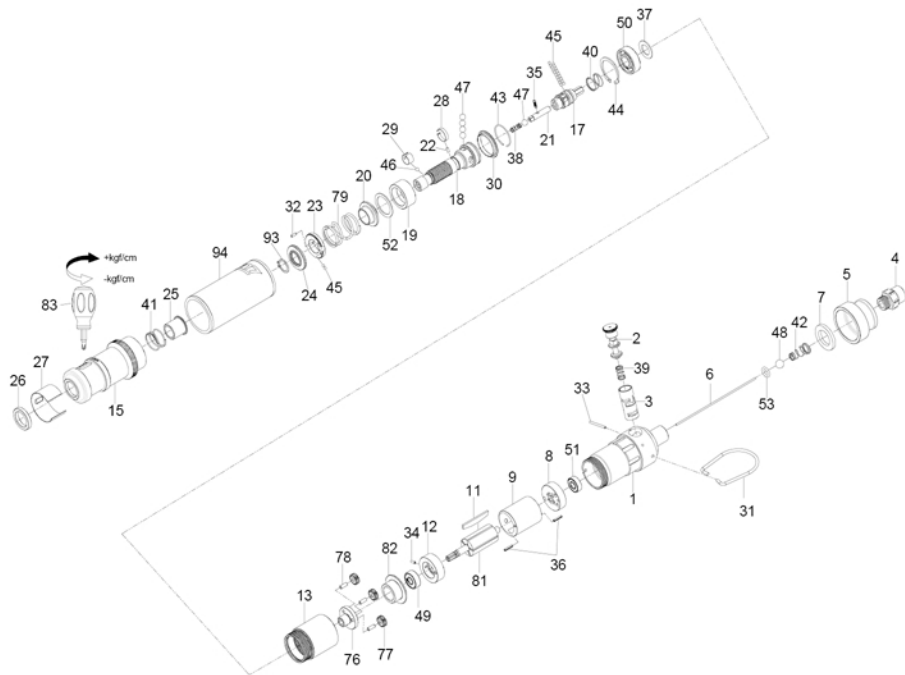

Part List

Item No : RA-4021



	NO.	PART NO.	DESCRIPTION	QTY
★	1	RA-4021T01	Housing Assembly (01. 03)	1 set
★	2	RA-4021P02	Reverse Valve	1
★	3	---	Reverse Valve Bushing	1
★	4	RA-4021P04	Air Inlet	1
★	5	RA-4021P05	Exhaust Deflector	1
▲	6	RA-4021P06	Throttle Valve Plunger	1
★	7	RA-4021P07	Muffler Element	1
★	8	RA-4021P08	Rear End Plate	1
★	9	RA-4021P09	Cylinder	1
★	10	RA-4021P10	Rotor	1
●	11	RA-4021T11	Rotor Blade (5PCS)	1 set
★	12	RA-4021P12	Front End Plate	1
★	13	RA-4021P13	Gear Housing	1
★	14	RA-4021P14	Washer	1
★	15	RA-4021P15	Hammer Case	1
▲	17	RA-4021P17	Cam Spindle	1
▲	18	RA-4021P18	Standard Anvil	1
★	19	RA-4021P19	Cam Ring	1
▲	20	RA-4021P20	Spring Collar	1
★	21	RA-4021P21	Driving Shaft	1
★	22	RA-4021P22	Pin	1
▲	23	RA-4021P23	Adjustment Nut	1
▲	24	RA-4021P24	Adjustment Lock Ring	1
★	25	RA-4021P25	Bushing	1
★	26	RA-4021P26	Retainer	1
★	27	RA-4021P27	Adjustment Cover	1
★	28	RA-4021P28	Band	1
●	29	RA-4021P29	Band	1
★	30	RA-4021P30	Ball Holder	1
★	31	RA-4021P31	Hanger	1
★	32	RA-4021P32	Pin	1
★	33	RA-4021P33	Pin	1
★	34	RA-4021P34	Spring Pin	1

	NO.	PART NO.	DESCRIPTION	QTY
★	35	RA-4021P35	Pin	1
★	36	RA-4021T36	Spring Pin (2PCS)	1 set
★	37	RA-4021P37	Gasket	1
★	38	RA-4021P38	Spring	1
★	39	RA-4021P39	Spring	1
★	40	RA-4021P40	Spring	1
★	41	RA-4021P41	Spring	1
★	42	RA-4021P42	Spring	1
★	43	RA-4021P43	Retainer	1
★	44	RA-4021P44	Retainer	1
★	45	RA-4021T45	Steel Ball (21PCS)	1 set
●	46	RA-4021P46	Steel Ball	1
★	47	RA-4021T47	Steel Ball (5PCS)	1 set
▲	48	RA-4021P48	Steel Ball	1
★	49	RA-4021P49	Ball Bearing	1
★	50	RA-4021P50	Ball Bearing	1
▲	51	RA-4021P51	Ball Bearing	1
▲	52	RA-4021P52	Gasket	1
★	53	RA-4021P53	O-Ring	1
▲	76	RA-4021P76	Work Spinner	1
▲	77	RA-4021T77	Planet Gear (3PCS)	1 set
▲	78	RA-4021T78	Pin (3PCS)	1 set
▲	79	RA-4021P79	Spring	1
★	81	RA-4021P81	Rotor	1
★	82	RA-4021P82	Washer	1
★	83	RA-4021P83	Screwdriver	1
★	93	RA-4021P93	Retainer	1
★	94	RA-4021P94	Rubber Grip	1