





LOCKWOOD COMMERCIAL DOOR FURNITURE MOUNTING INSTRUCTIONS

Product ranges applicable:

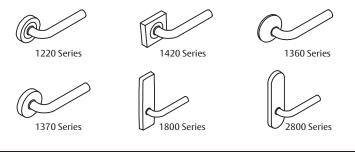

HAND OF DOOR ACCORDING TO ENGLISH PRACTICE	
DOOR OPENING IN	DOOR OPENING OUT
RIGHT INSIDE LEFT HAND LOCK OUTSIDE	INSIDE RIGHT HAND LOCK OUTSIDE INSIDE RIGHT LEFT HAND LOCK LOCK

1 Set Door Furniture Handing

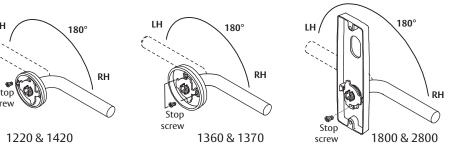

- Verify the correct handing of furniture on the door required. Lever should rotate downwards.
- For handing of furniture with non-handed levers or knobs, position the handle by rotating it 180° to suit the door LH or RH then insert the 4mm stop screw to suit.
- Stop screws are supplied in an accessory packet in the box.




2 Configuring Disabled Accessible Turn




If mounting a plate with a disabled accessible turn, the turn will need to be configured according to the mortice lock in use.


- 1. Refer to the images below to identify the mortice lock in use.
- 2. Position the screws according to the turn setting required. Selector configurations should allow 45° rotation, Synergy configurations should rotate to 90°.

Use images below as a guide.

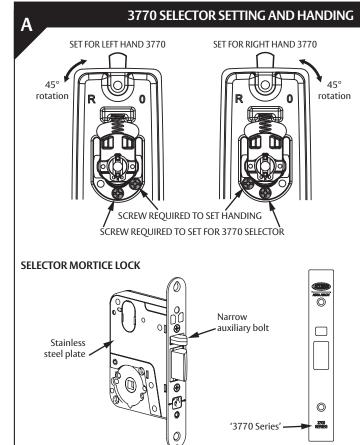

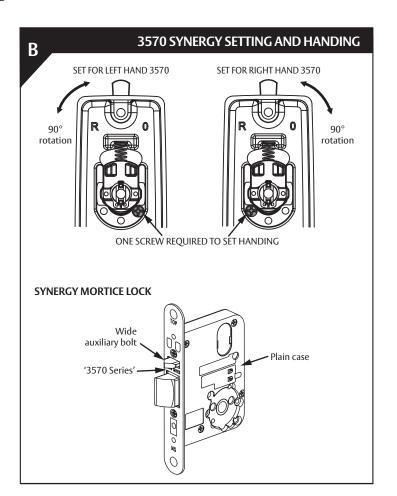


3 Door Preparation

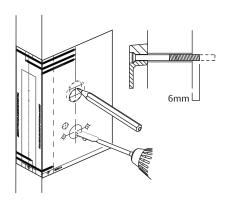

- Cut out template from instruction sheet.
- Remove lock from mortice and place the template in the correct alignment according to the backset required.
- Mark hole centres accurately and drill holes required.
- If required, cut screws to length as indicated. Deburr end of cut screws. Note: Do not cut with pliers or side-cutters as this is likely to cause thread damage upon assembly.

 4 Mounting Plate Furniture with Turn Configurations




Turn knob






Turn

 
Emergency




Disabled Accessible turn

 Use the appropriate tailbar according to the turn combination mounted.

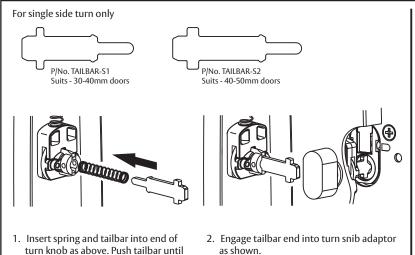



P/No. TAILBAR-E1

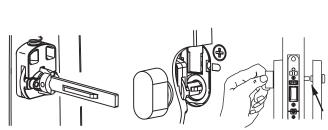


- 1. Insert spring and narrow end 2. Pass tailbar completely through the turn snib adaptor as shown. of tailbar into turnknob or disabled accessible turn until
 - escutcheon on the other side of the lock.
 - 3. Make sure tailbar engages with the turn

5 Final Assembly

door thickness.

engaged and retained in turn knob.

Refer above for correct tailbar for your

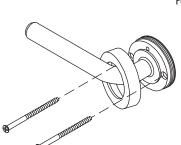


For Round Rose Furniture

- Insert fixing screws through inner retainer rose.
- Mount furniture on door through lock or latch.
- Secure furniture by tightening fixing screws.
- Check screw length is correct For 1220 & 1420, ensure screws do not protrude through outer furniture.

For Square Rose Trim Furniture (1420 only)
 
> If required, fix grub screw to outer square rose with allen key supplied.



engaged and retained.

For Captive Rose Furniture (1220 & 1420 only)

- For Captive Rose Furniture levers, loosen and undo outer rose trim.
- Rotate lever 45° and position rose trim to allow clear access to fixing screw
- Insert fixing screws.



