



Position 1 force 3
Position 2 force 4

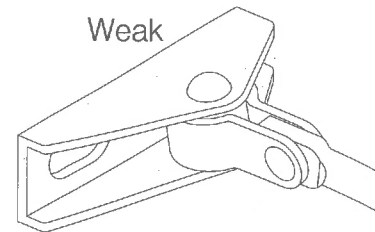

206

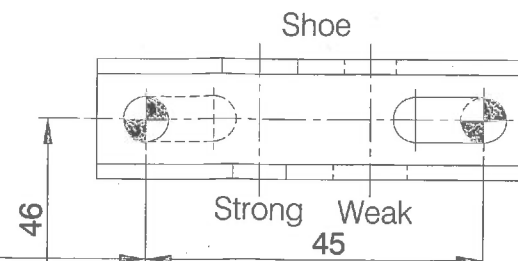


DETERMINE POSITION
OF SHOE FROM CHART OPPOSITE
AND FIX ACCORDINGLY

UNDERSIDE OF FRAME

SET TO TOP OF DOOR

Speed Adjusting Valve

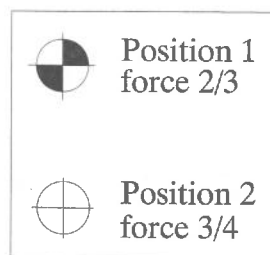

6-M5*P0.8

Use this side of template for clockwise opening door
(RIGHT HAND OPENING DOOR)


165

Ø2.5	Ø4.2
	M5

HINGE EDGE OF DOOR


(Position 1) force 2/3 90mm
(Position 2) force 3/4 110mm

①

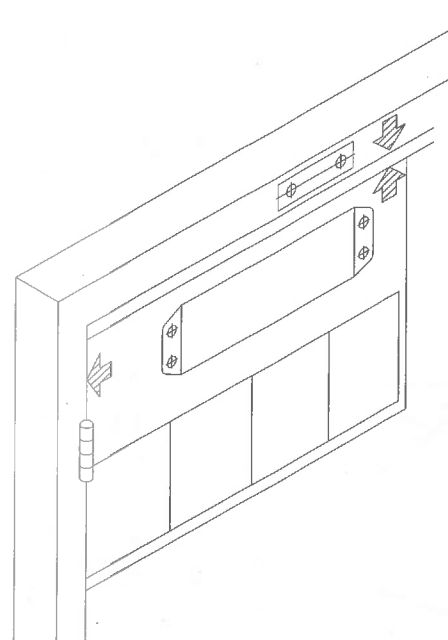


"Determine opening degree requirements 105 or 180 degrees, then select power requirement. This can be located on the template. Then use template to mark holes for closer body and arm pivot bracket"

②

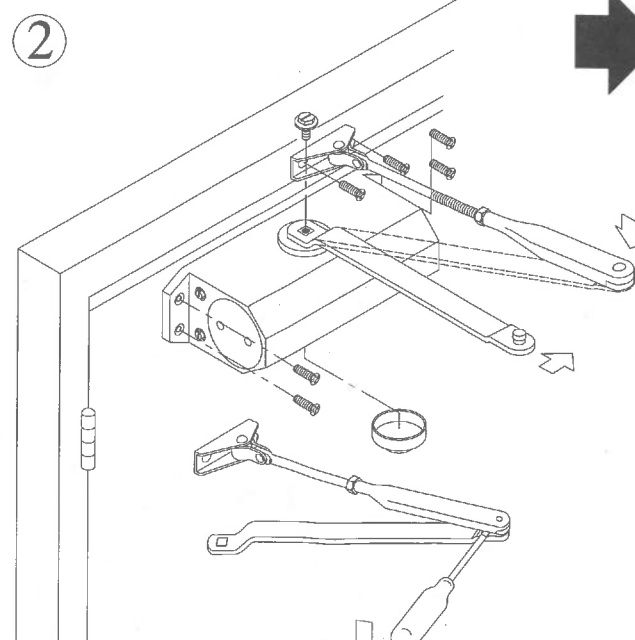

"Arm pivot bracket assembly into position and fix closer body to the marked holes ensuring that you select the position of the shoe, on the face of the frame, in the correct direction" Refer weak or strong.

③

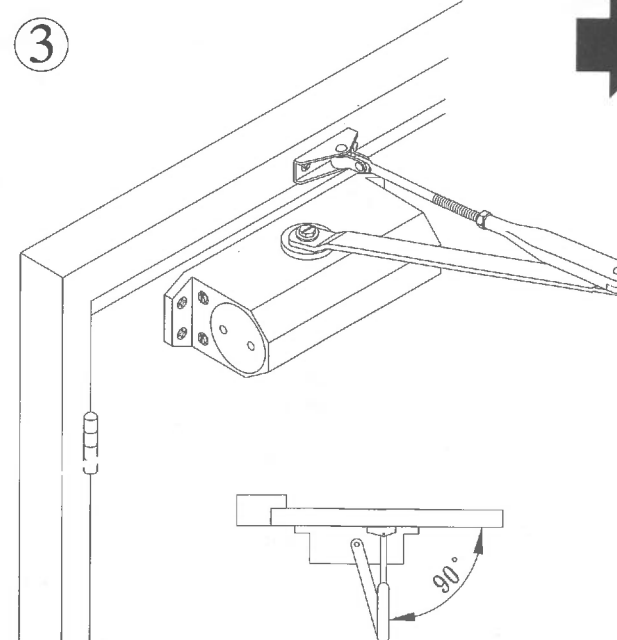


Standard drawing

④

No.1 Closing Speed

No.2 Latching Speed

FAST SLOW

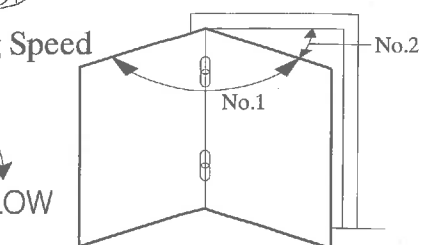

Adjust speed

① -1

DETERMINE POSITION
OF SHOE FROM CHART OPPOSITE
AND FIX ACCORDINGLY





UNDERSIDE OF FRAME





SET TO TOP OF DOOR

ø4.2	ø2.5
M5	

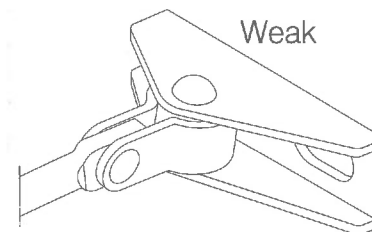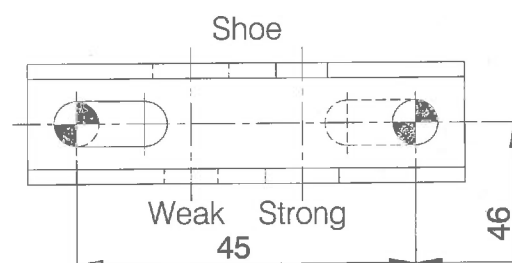

Position 1 force 2
Position 2 force 3

Position 1 force 3
Position 2 force 4

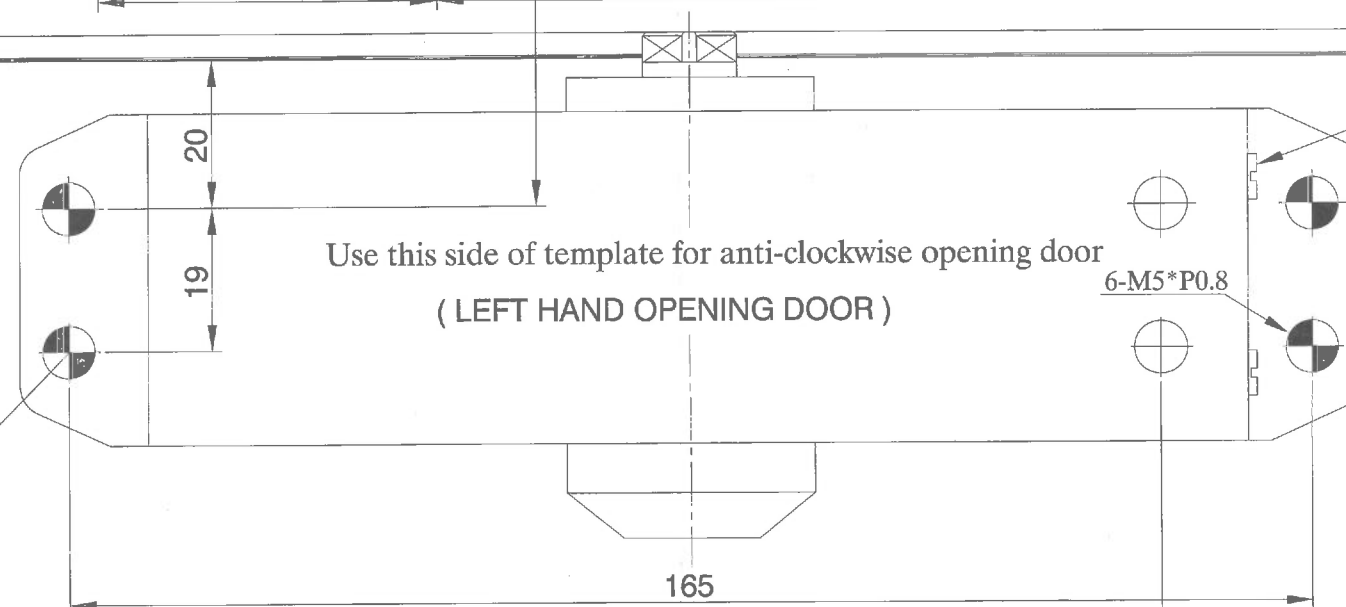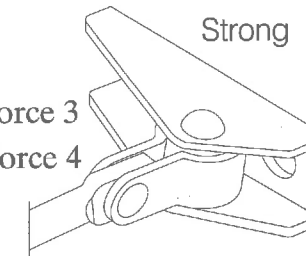


Speed Adjusting Valve

Position 1
force 2/3

Position 2
force 3/4


(Position 1) force 2/3 90mm
(Position 2) force 3/4 110mm

①

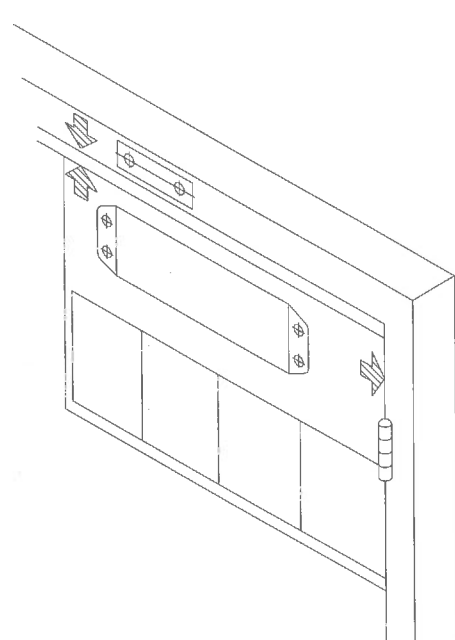


"Determine opening degree requirements 105 or 180 degrees, then select power requirement. This can be located on the template. Then use template to mark holes for closer body and arm pivot bracket"

②

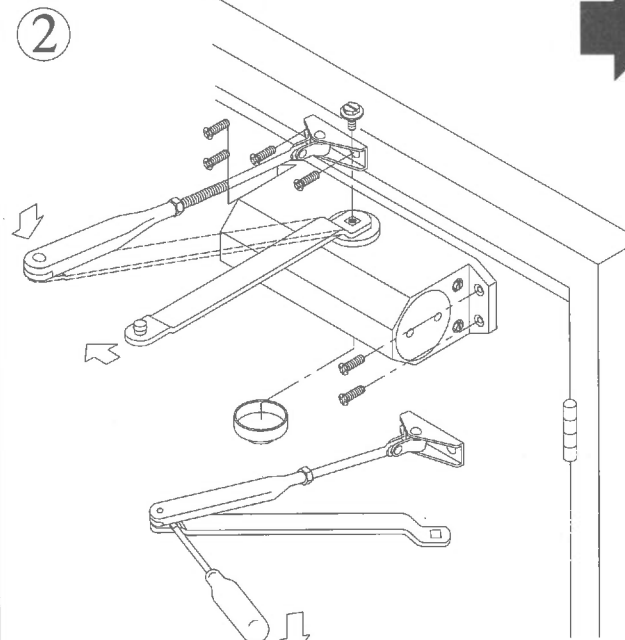


"Arm pivot bracket assembly into position and fix closer body to the marked holes ensuring that you select the position of the shoe, on the face of the frame, in the correct direction" Refer weak or strong.

③

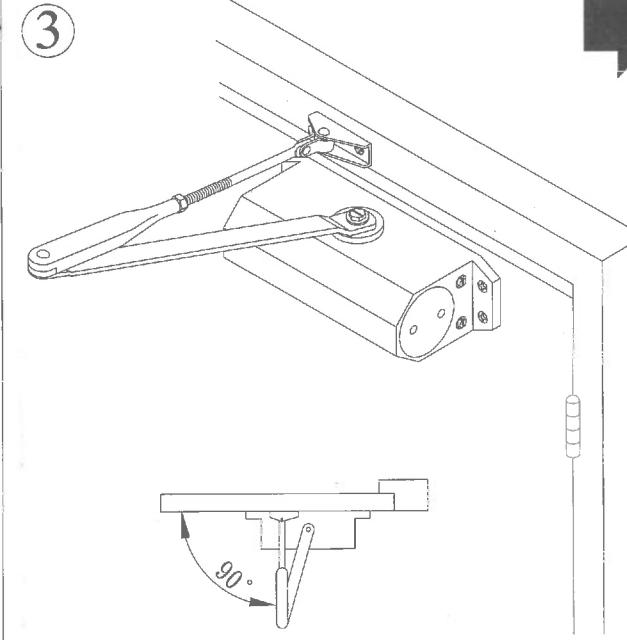

Standard drawing


④

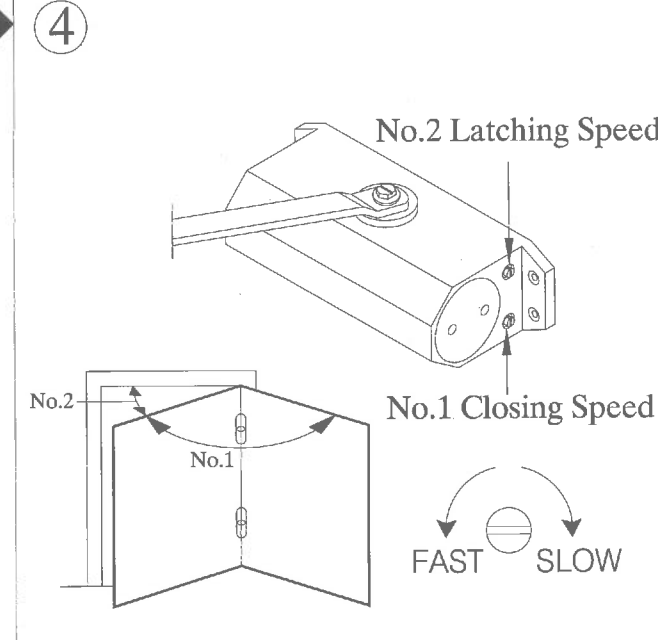


Adjust speed

PARALLEL ARM INSTALLATION FOR ANTI CLOCKWISE OPENING DOOR
FOR ANTI CLOCKWISE OPENING DOOR SEE THE BACK PAGE

This template covers regular parallel arm installations to 180° openings.

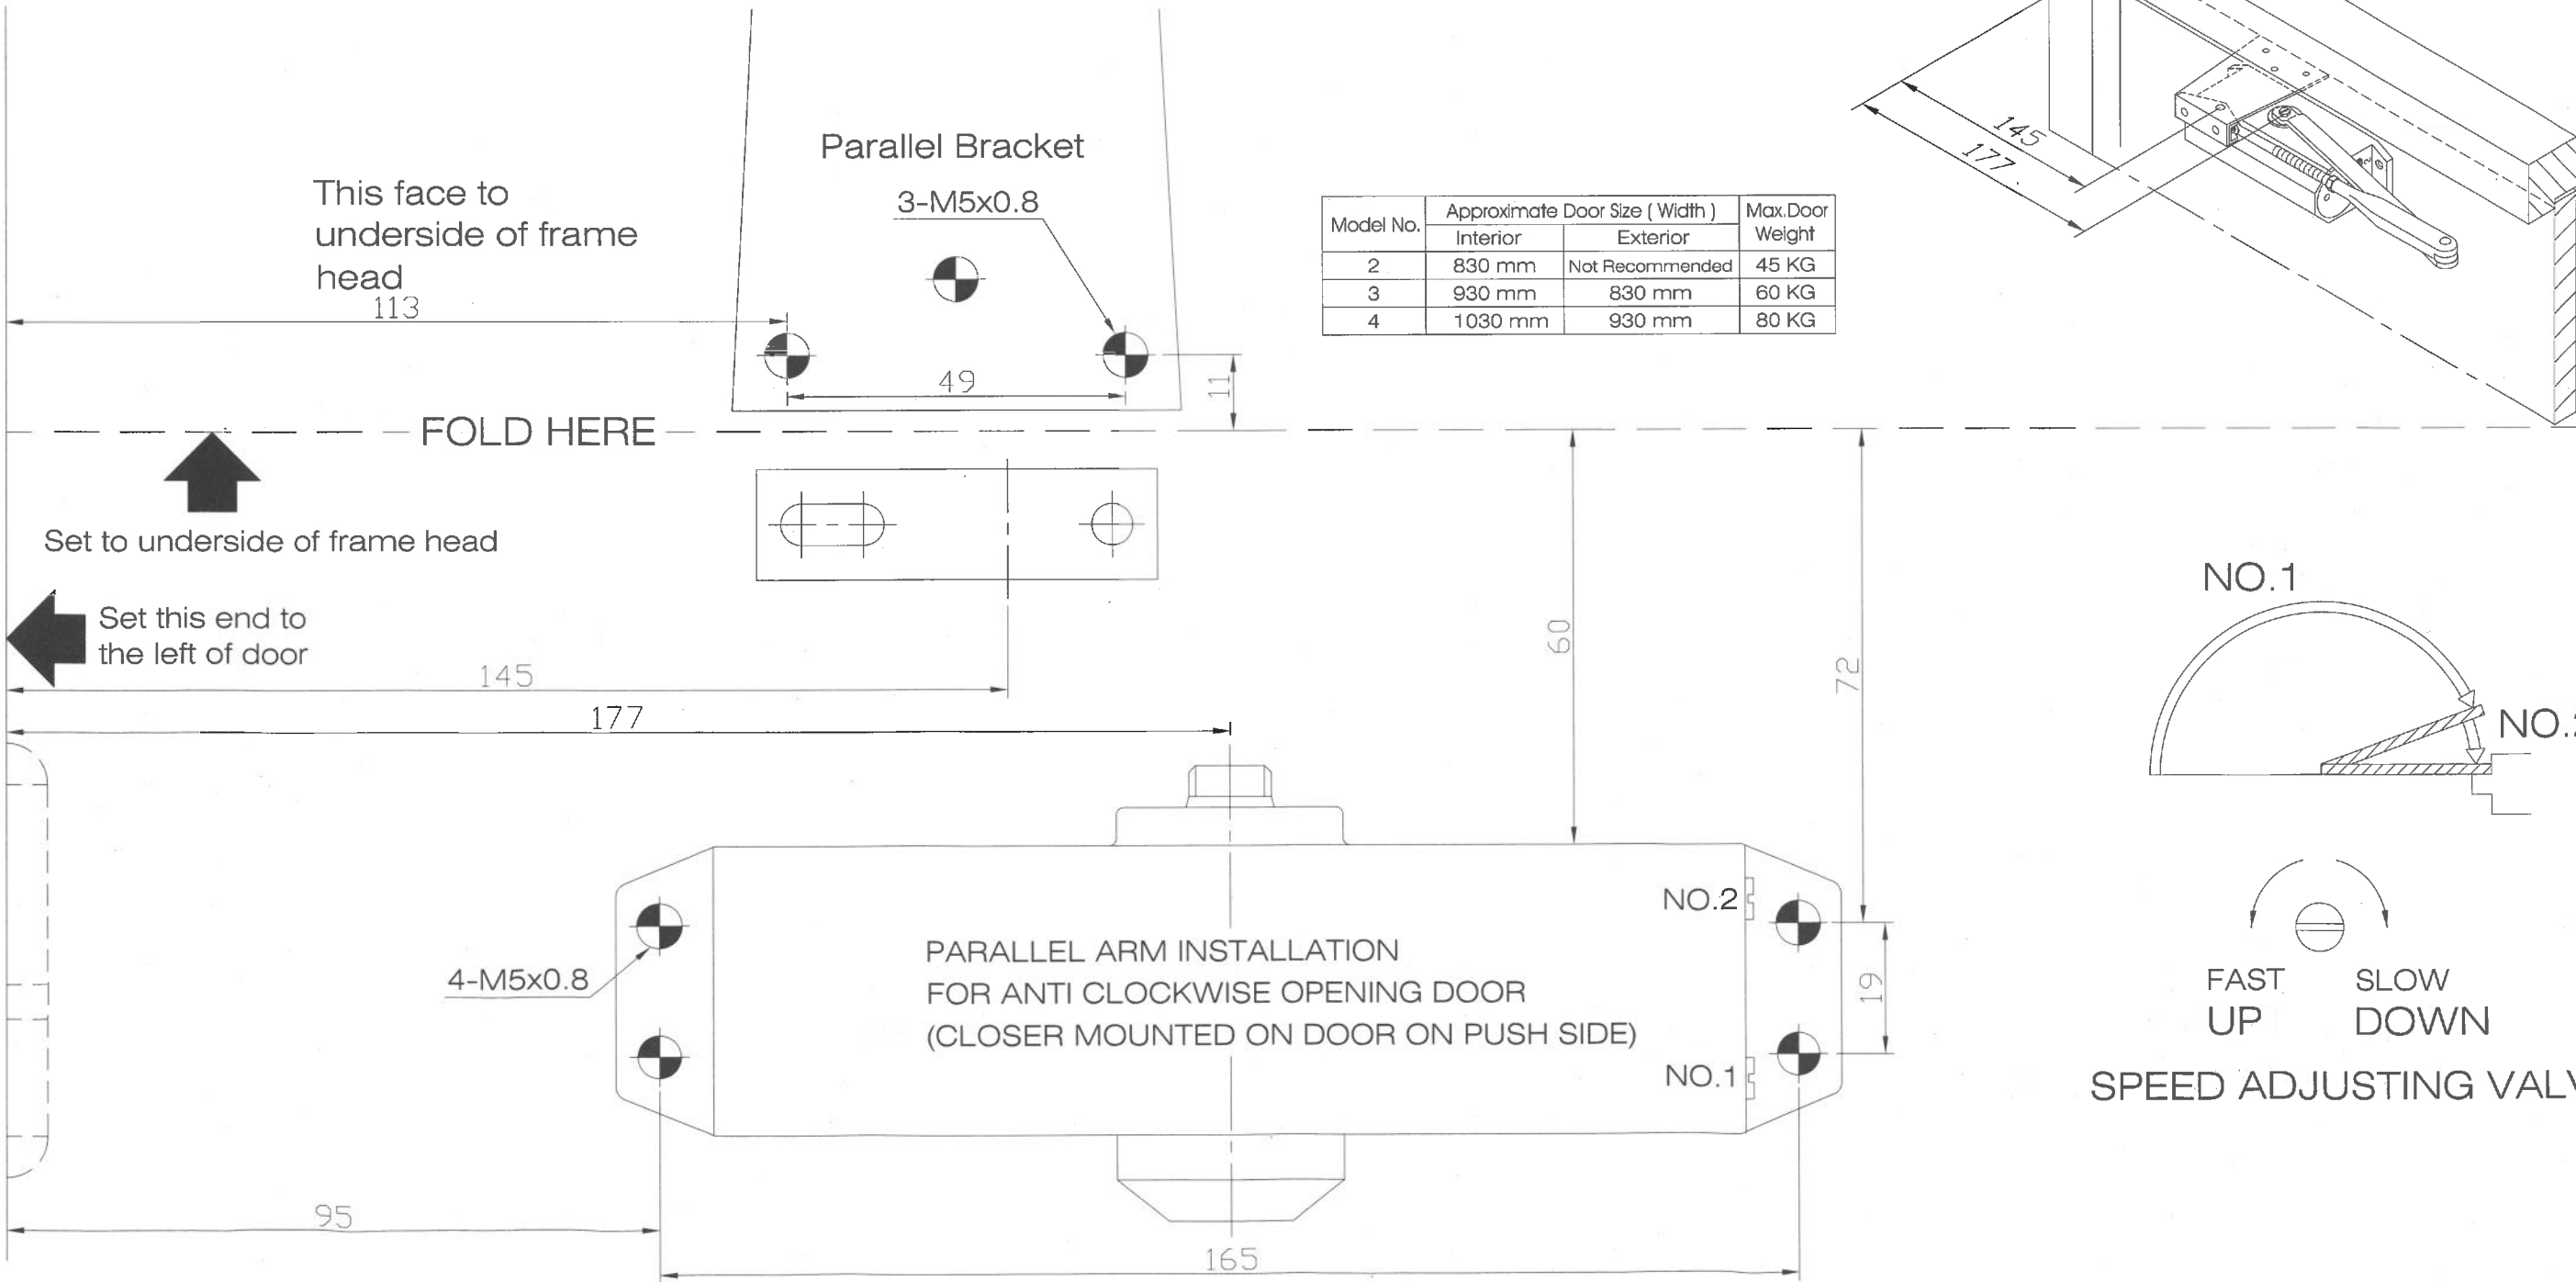


31

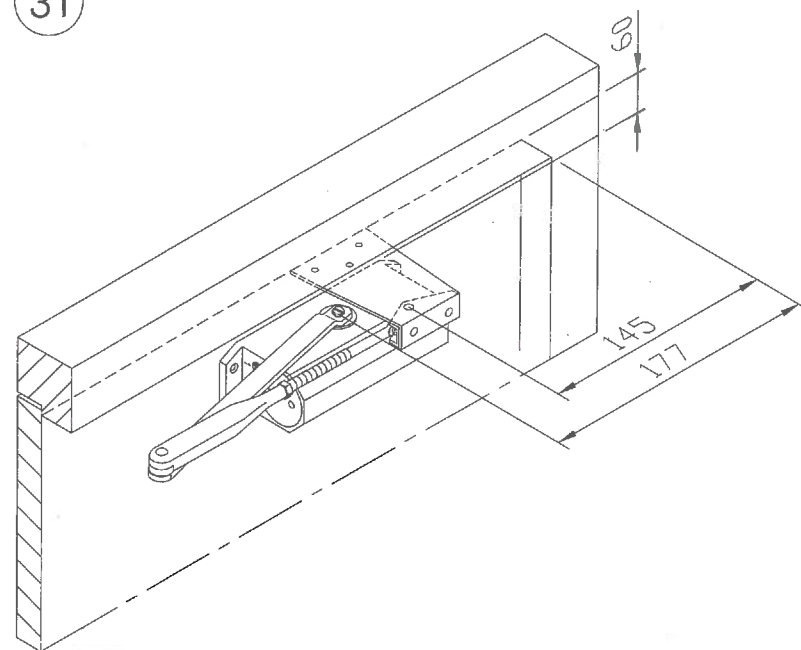

PARALLEL ARM INSTALLATION FOR CLOCKWISE OPENING DOOR FOR CLOCKWISE OPENING DOOR SEE THE BACK PAGE

This template covers regular parallel arm installations to 180° openings.



Model No.	Approximate Door Size (Width)		Max. Door Weight
	Interior	Exterior	
2	830 mm	Not Recommended	45 KG
3	930 mm	830 mm	60 KG
4	1030 mm	930 mm	80 KG

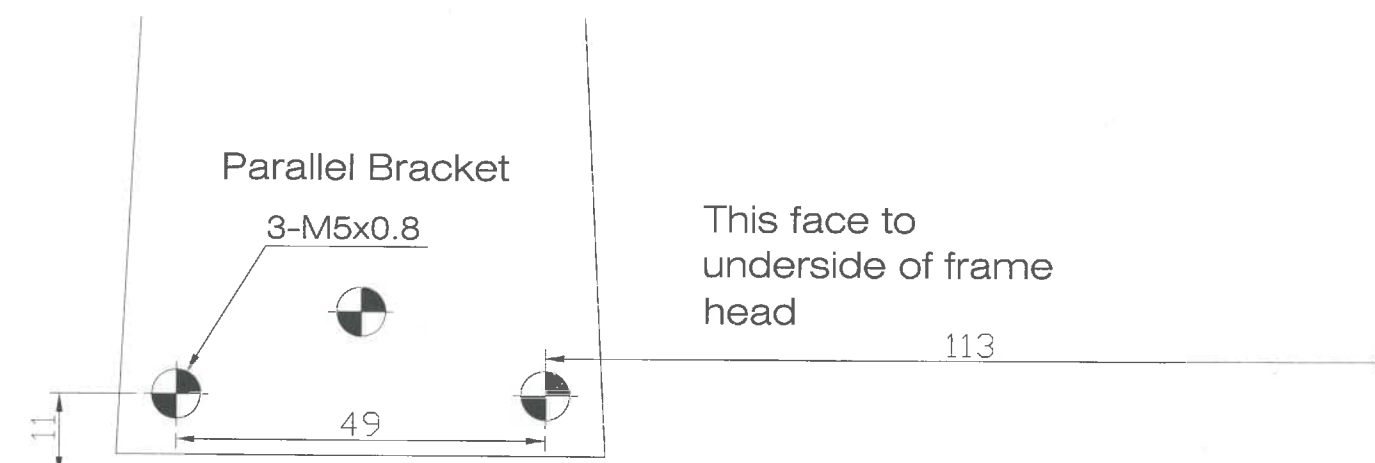

FOLD HERE

Set to underside of frame head

Set this end to the right of door

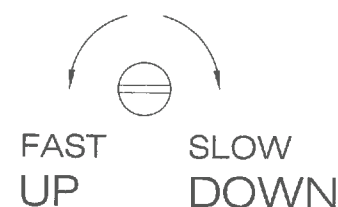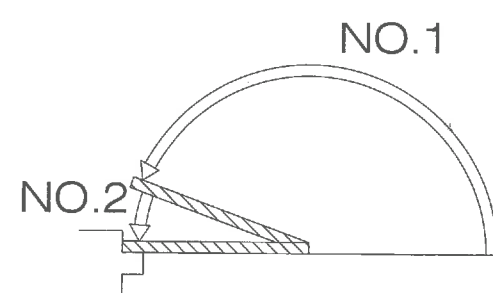

SPEED ADJUSTING VALVE

