




# **Description**


Various deadlocking functions operated generally by a key outside and by a turnknob or key inside. Locked by key or turnknob when the door is closed.

For all deadlock functions specify primary lock (3571SC). This lock can then be easily adapted to suit function required.

Product Details				
Backset	60mm standard backset 89 and 12mm extended backsets available on application.			
Bolt	19mm stainless steel bolt.			
Furniture	Compatible with most Lockwood cylinder escutcheons, turnknobs and plate furniture. Refer to lockweb.com.au for further details.			
Standard Finishes	Satin Chrome Brushed <b>(SC)</b> Chrome Plate <b>(CP)</b> Polished Brass <b>(PB)</b> Other finishes on application.			



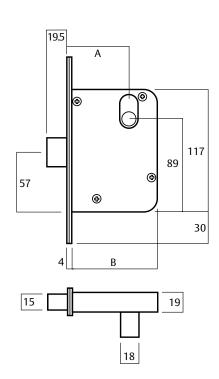

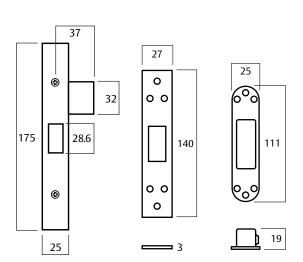

Svnergy	3571	Deadbolts
2,		

Part Number	3571	4571	5571	
Dimension A	60	89	127	
Dimension B	84	113	151	


#### Cylinder and Turn Deadbolt

 Part Number

3571WT

## Description

Cylinder and Turnknob. Reversible. **Outside:** Locked or unlocked by key. **Inside:** Locked or unlocked by turnknob.



### Double Cylinder Deadbolt


**Part Number** 

3571YY

### **Description**

 $Double\ Cylinder.\ Reversible.$ 

**Outside:** Locked or unlocked by key. **Inside:** Locked or unlocked by key.

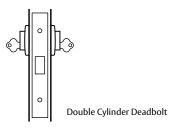

#### Exit Door Deadbolt


**Part Number** 

3571-T

# **Description**

Turnknob Inside. Reversible.

**Inside:** Locked or unlocked by turnknob.

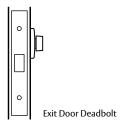

#### Single Cylinder Deadbolt

Part Number


3571Y

## Description

Single Cylinder. Reversible.

Lockset may be installed with cylinder either inside or outside.

Outside/Inside: Locked or unlocked by key.

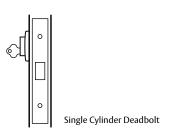

# Escape Deadbolt

Part Number	Description	
3571DEL	Left Hand	
3571DER	Right Hand	



Cylinder and Escape Lever.

Outside: Locked or unlocked by key.

**Inside:** Unlocked only by escape turn. Inside turn will not lock door.

# Through Fix Privacy Deadbolt Part Number 3571PT

## Description

Emergency Turnknob Escutcheon. Turnknob. Reversible.

**Outside:** Operated by coin or screwdriver in emergency situation by operating the slotted emergency turn button.

**Inside:** Locked or unlocked by turn knob.

