INSTRUCTIONS FOR INSTALLATION AND MAINTENANCE

Bobrick Models B-822 Series "G" and B-8226 Series "G" Lavatory-Mounted Soap Dispensers

HOW TO MOUNT DISPENSER (see FIGURE A)

- Make sure countertop surface around mounting hole is clean and free of soap residue. Insert shank through 1" (25mm) diameter hole. Make sure the rubber washer is in place between the countertop and shank.
- 2. Insert pump assembly into shank. Turn shank to lock.
- Place spring washer and retaining nut onto shank under countertop. Tighten retaining nut against underside of countertop.
- 4. Screw on container cap and soap container.

HOW TO FILL DISPENSER

- 1. Turn escutcheon counterclockwise slightly until it stops.
- Insert the longest projection at one end of the BobKey into the round hole of escutcheon (see FIGURE B). Push straight in. While holding BobKey in, turn escutcheon counterclockwise about 1/8 turn.

CAUTION: Do not use BobKey to turn escutcheon.

- 3. Lift out the entire soap pump assembly.
- 4. Fill dispenser with liquid or lotion soaps.
- 5. Replace soap pump assembly, reversing the steps above.
- Secure the escutcheon by turning clockwise until lock snaps into position.

 
NOTES:

- Never use abrasive cleaners.
- Dispenser may also be filled by removing soap container from beneath countertop.
- 3 If a shorter shank is desired, remove soap pump assembly, then cut shank at break in threads.
- For proper maintenance, the soap pump assembly should be flushed every six months by pumping warm water through it.

CAUTION: Do not over tighten retaining nut.

& Top Cover Assembly Soap Pump Assembly (Includes Supply Tube) Escutcheon Rubber 822-619 Hole Washe 8226-619 1" (25mm) Lavatory Dia. Mounting Hole Universal Mounting Shank Group 822-402 Spring Washer Retaining Nut Supply Tube Soap Container & Cap 822-45 FIGURE A

Piston, Spout



REPLACEMENT PARTS LIST

822-619 Soap Pump Assembly – 4-inch Spout

8226-619 Soap Pump Assembly - 6-inch Spout

822-402 Universal Mounting Group

822-45 Soap Container & Cap

24-17 BobKey

822-94 Container Cap

822-95 Soap Container

Designer's Note:

Do not use iodine-based surgical soaps, or alcohol-based antiseptic solutions in this unit; soap valve is not designed to dispense these types of corrosive soaps.



In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

200 Commerce Drive, Clifton Park, New York 12065-1350 • Tel: (518) 877-7444 • FAX: (518) 877-5029 11611 Hart Street, North Hollywood, California 91605-5882 • Tel: (818) 982-9600 • FAX: (818) 503-1102

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Ontario East: Tel: (877) 423-6555 • FAX: (877) 423-8555 • Manitoba West: Tel: (877) 423-6444 • FAX: (877) 423-8444