


Easicode Pro (ECP) Instructions V4

The following instructions are applicable for all 2000 ECP models.

The code should be changed with the door in the open position. To change the code you will need to know what the keypad is currently set to. The code can be changed with the unit fitted on/off the door.

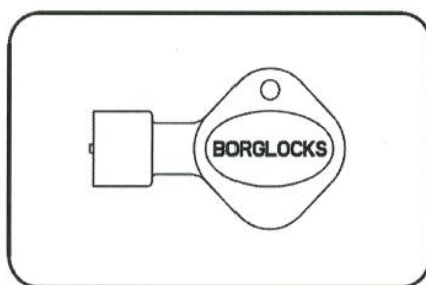

Code Change Key

1. Enter existing code
2. Using code change key - insert into the hole in the * button - fully press and hold until step 5
3. Press `C` button to clear the existing code
4. Enter the new code
5. Release the code change key from the hole in the * button
6. Press `C` to set the new code
7. The new code is now set and ready for use
8. Check that the code is working 5 times and that it is withdrawing the latchbolt in the door before closing the door.

Please note: If a mistake is made whilst entering a new code (with the * button pressed) the `C` button can be pressed which will cancel any buttons that have been pressed and you can start again.

Fitting & positioning the spindle

Non key override models

When positioning the spindle ensure that the spindle is facing towards the top opening edge of the door (**as per fig.1 overleaf**) when viewed from the outside (keypad side) of the door. Use the longest spindle supplied to ensure that it does not move out of position when fitted to the door.

Further fitting & positioning the spindle instructions overleaf

BORG LOCKS (UK) LTD

9, Upminster Trading Park, Warley Street, Upminster, Essex, RM14 3PJ
T: 44 (0)1708 225700 F: 44 (0)1708 226338
sales@borglocks.com www.borglocks.com

Fitting & positioning the spindle

Non key override models

When positioning the spindle ensure that the spindle is facing towards the top opening edge of the door (**as per fig.1 below**) when viewed from the outside (keypad side) of the door. Use the longest spindle supplied to ensure that it does not move out of position when fitted to the door.

Key override models

When positioning the spindle ensure that the spindle is facing towards the top opening edge of the door (**as per fig.1 below**) when viewed from the outside (keypad side) of the door. The spring located around one side of the spindle should be between the keypad and the side of the latch to ensure the spindle is reaching the cylinder in the keypad.

If the spindle needs to be cut down - the only side which should be cut is the side for the inside handle. The keypad side should not be cut at all as the entire bladed part of the spindle is required to reach the back of the cylinder to allow the key override function to operate correctly.

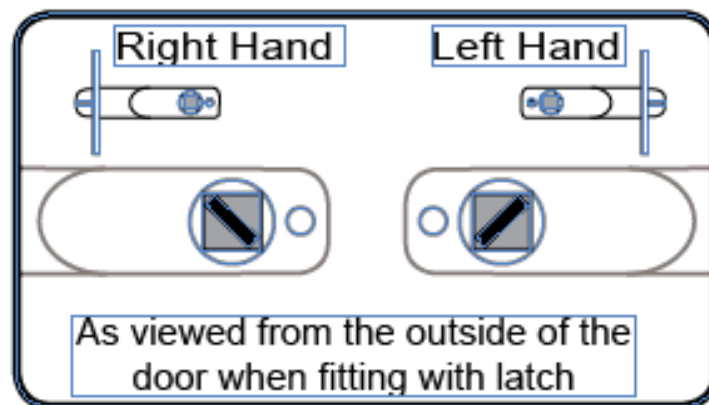


Fig.1

BORG LOCKS (UK) LTD

9, Upminster Trading Park, Warley Street, Upminster, Essex, RM14 3PJ

T: 44 (0)1708 225700 F: 44 (0)1708 226338

sales@borglocks.com www.borglocks.com

To install the BL2521/2621/2771 ECP units to the door, the inside keypad (with the fixing holes) will need to have the knob handle removed in order to allow the bottom hex head machine screw to pass through.

REMOVAL OF THE INSIDE KEYPAD KNOB HANDLE

1. Remove the grey grommets located either side of the inside keypad knob handle; this will expose the head of the grub screws.
2. Using the smaller hex key in the accessory pack, loosen the grub screws either side of the keypad knob handle until they are flush with the hole. With the grub screws loosened the knob handle will come away and leave the knob holder and cylinder exposed.

SECURING KEYPADS TO THE DOOR

1. Using the larger hex key in the accessory pack, screws 1 of the hex head machine screws in the top fixing hole of the inside keypad to secure both keypads to the door.
2. For key override models (BL2771 ECP), the bottom fixing hole will be obscured by the cylinder, enter the correct combination into the inside keypad and rotate the cylinder until the bottom hole becomes visible.
3. Hold the cylinder in the rotated position and screws 1 of the hex head machine screws in the bottom fixing hole of the inside keypad. The keypads should now be secured onto the door at the top and bottom.

REFITTING OF THE INSIDE KEYPAD KNOB HANDLE

1. Place the knob handle back over the knob holder and cylinder (BL2771 ECP Models).
2. Tighten the grub screws either side of the keypad knob handle and replace the grey grommets.

Using the correct combination, ensure that when the knob handle is turning and retracting the latch smoothly and returns to the locked position under its own spring pressure. For key override (BL2771 ECP models) also check that the cylinder retracts the latch smoothly and returns under its own spring pressure. If not the grub screws may need to be loosened by 1/4 of a turn.

