 


**RP94Si****FITTING INSTRUCTIONS****Door Frame Seal  
Anti-microbial Silicon Gasket**

Category J gaskets for use with Listed steel frames and/or Classified steel covered composite, hollow metal doors rated up to 2 hrs; wood and plastic covered composite doors rated up to 1-1/2 hrs; and wood core doors rated for 20 minutes.

**DETAILS****LOCATION**

Head and jambs of single or double butt hinged doors.

**MIN/MAX GAP**

0mm to 6mm.

**SEAL MATERIAL**

Silicon Rubber.

**REPLACEMENT SEAL**

RP378Si.

**USED IN CONJUNCTION**

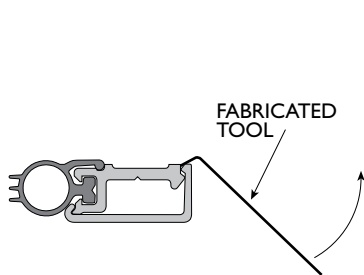
RP8Si, RP16Si, RP35Si, RP38Si, RP70Si, RP99Si, RP126Si, RP127Si, RP128Si.

**ADDITIONAL DETAILS****FIXING METHOD**

Zinc plated, cross recess head S.T. screws of the appropriate size are supplied.

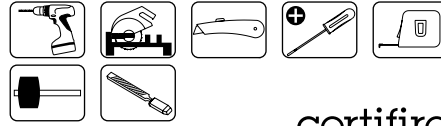
**Notes:** If a face mounted seal is to be fitted on the bottom of the door, fit the RP94Si to the door frame first (user determined).

If fixing to rebated frames of single doors, a long backset door latch is recommended.

**FIG. 6****DESCRIPTION**

A weather and acoustic seal, suitable for rebated frames. RP94Si is quick and easy to install, either mitred or butt jointed to the head and jambs without removing the door. Slotted for installation adjustment, the soft silicon bulb accommodates a tighter seal and with a tamper proof cover strip, provides a fit and forget feature.

**Note:** The tamper proof aluminium cover strip is not recommended for removal once installed. Refer to RP10Si or RP78Si for this feature.

**TOOLS**

certifire  
CF 5710

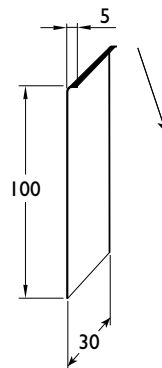
RAVEN PRODUCTS PTY. LTD. Designed and produced by  
18-22 Aldershot Rd, Raven Products Pty Ltd  
Lonsdale SA 5160 Australia (Australia)  
T +61 8 8384 5455  
raven.com.au

Made in P.R.C. by Raven

Raven Products is an  
ISO9001 QMS company  
certified by SGS

Copyright: 08/24 (F)

Part No. ZSDSRP94Si

**FIG. 5****INSTALLATION****NOTES**

- » When cutting the aluminium, slide back the gasket then cut to size with a utility knife. Use a spacer when clamping the aluminium to ensure an accurate cut. **(FIG.3)**
- » An accurate mitre joint is important and good measurements are necessary.
- » **CAUTION:** Once cover strip has been fitted, it may be damaged if removed.

**STEP 1** Machine cut the aluminium to the required length.

**STEP 2** With the door closed and the cover strip removed, position the seal at the head of the door first. The door should rest against the RP94Si gasket lightly. Screw fix in the centre of all the adjusting slots. **Note:** Screw fix firmly but do not over tighten. For best results use the minimum torque setting to seat screw all the way home. Overtightening may make the cover strip difficult to fit.

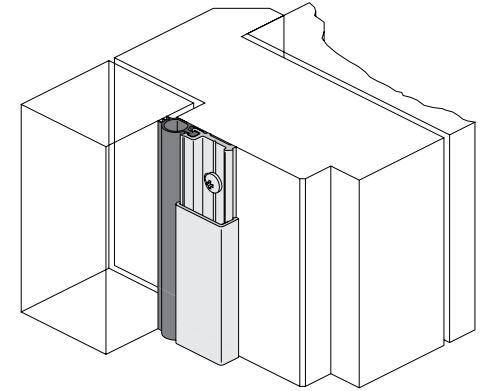
 
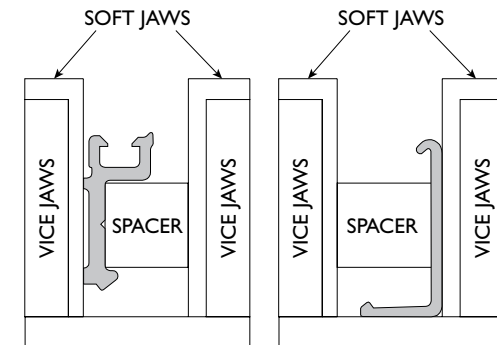
**STEP 3** Proceed to fit the seals.

**STEP 4** Test the door for correct fitment by inserting this sheet of paper between the door and the door seal. Shut the door and adjust the seal to ensure a consistent seal all around. A tight seal is not necessary. The door should just firmly hold this sheet of paper to ensure a perfect seal.

**STEP 5** Open and shut the door to check for correct latching. Tighten all fixing screws.

**STEP 6** Snap in the head seal cover strip by hand or carefully with a rubber mallet. **(FIG.4)** Proceed with vertical cover strips.

In case the cover strip needs to be removed, fabricate tool **(FIG.5)** from 0.8mm sheet metal. Insert as shown and gradually work cover strip off. **(FIG.6)**

**FIG. 1****PAGE 1 OF 1****FIG. 2****FIG. 3****CLAMPING DETAIL****FIG. 4**