

LED DREAM MULTI COLOUR WHIP AERIAL REMOTE MANUAL (#019559)

Power on/off

Increase speed

Mode before (358 modes)

Decrease brightness

Decrease speed

Remote Control ID Match:
Long press for 5 seconds for remote control one to one match (LED strip will flash green 3 times).

Cancel The Match:
Press again for 5 seconds (LED strip will flash white 3 times)

Single Cycle Playback:
At automatic playback mode, press the Settings button once, then the Lock button to capture the current effect and loop play.

Short press to auto play 358 kinds of effects.

Long press for 5 seconds to enter the RGB colorful jump effect to facilitate LED strip test.

Mode after (358 modes)

Increase brightness

To adjust the number of LED pixel points and the RGB order:
Press and hold for 5 seconds to enter the setup menu.
Press MODE + and MODE - to adjust the number of LED pixel points.
Press the RGB buttons to adjust the RGB order. Press R until the LED strip shows red, G until the LED strip shows green and B until the LED strip shows blue.
Press the Settings button again to exit.

RGBW Static Monochrome Mode

