

# **PentaFOB® Programming Instructions**

Coding the PentaFOB® remotes and receivers can be done in 2 different ways.

1. Using the Receiver
2. Using another Remote Control

## **Coding using the Receiver**

1. Check that all switches are "OFF" on the receivers 12-way dip switch
2. Press and hold the program button on the receiver
3. Press the remote button for 2 seconds, receiver LED will flash and then turn Green
4. Release the button on the receiver and the remote
5. Press remote control button to test the receiver output

## **Coding using another Remote Control**

1. Open the case of a remote control that is already programmed and press and release the program button on the back of the board
2. Press the new remote control button for 2 seconds
3. Press the new remote control button again to test the receiver output

## **Deleting Receivers Memory**

Short the Code Reset pins on the receiver for 10 seconds. This will delete all the remotes from the receiver's memory.

## **PentaFOB® Programmer**

This programmer allows you to add and delete certain remotes from the receiver memory. This is used when a remote control is lost or a tenant moves from the premises and the owner wants to prevent un-authorized access.

## **PentaFOB® Backup Chips**

This chip is used to backup or restore the contents of a receiver. When there are 100's of remotes programmed to a receiver the installer normally backups the receiver memory in case the receiver is damaged.