

CNL-PRO-SC NIGHT HAWK PRO






1. LOCK INSTALLATION INSTRUCTIONS

For maximum security, the gap between the door and jamb should be kept to a minimum and must not exceed 5mm.

1. At the desired height, use the drilling template to align and determine position to mark the center hole. At the mark drill a 32mm diameter (1 1/4") through the door.

Note: Drill cylinder hole from both inside and outside of door to prevent splintering of door face.

Using a square, draw a horizontal line at the widest point of the hole. This is the centerline.

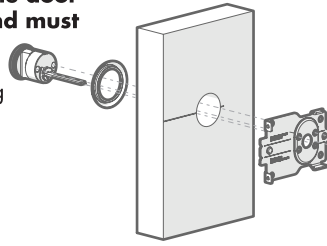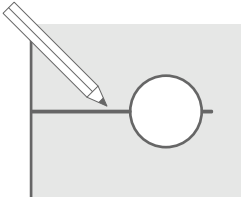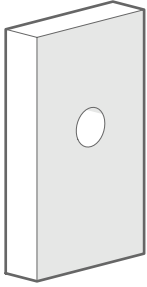


2. Insert the rim cylinder into the cylinder rose and fit through the cylinder hole in the door. Locate mounting plate over cylinder door and fasten cylinder retaining screws loosely.


For inward opening, align edge of mounting plate against the edge of the door and align the centerline on the mounting plate with the horizontal marked line. Securely fasten cylinder retaining screws.

For outward opening, align the centerline on the mounting plate with the horizontal marked line. Securely fasten cylinder retaining screws.

Inward Opening Installation


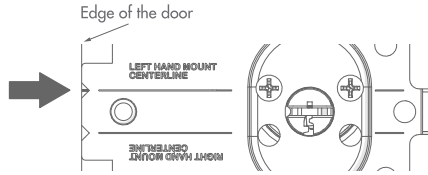


Outward Opening Installation

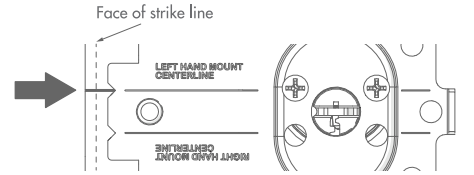

3. Using the mounting plate as the guide, mark the center of mounting holes and drill a 3.5mm diameter hole to a depth of 25mm.



Using three 12G x 25mm wood screws, screw the mounting plate to door at the three drilled positions.

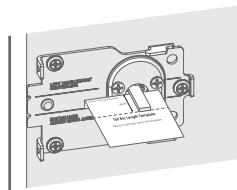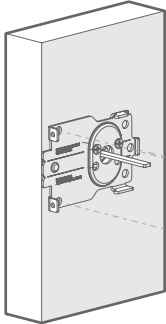

4. Using the template provided below, position and mark tail bar. Remove rim cylinder and carefully shorten tail bar at the marked length.

Reinstall rim cylinder and fasten cylinder retaining screws to door.
Note: Tail bar to protrude 16mm off the backplate.

5. Locate the lock case over the mounting plate by first inserting the tail bar inside the slot on the lock case. Push the lock body firmly onto the mounting plate and slide sideward until flush with mounting plate guide.

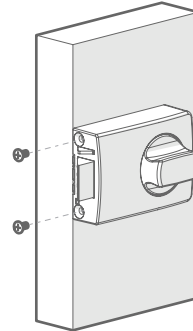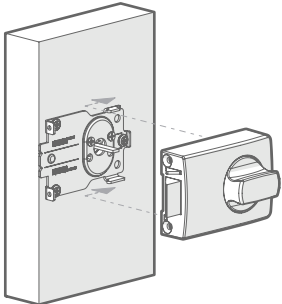

6. Secure lock case to mounting plate by using two M4 x 8mm CSK screws, fasten tight.


Continues over the page.

For outward opening installation, please use this line to align with face of strike.

For inward opening installation, please align door edge with this line

Left Hand Mount Centerline
Right Hand Mount Centerline

60mm Backset

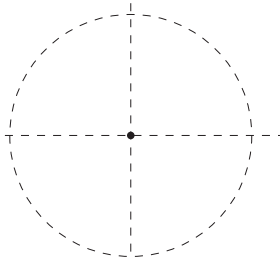

Tail Bar Length Template
Tail bar to protrude 16mm off backplate


16mm

Fold Here - Align against backplate


CNL-PRO-SC NIGHT HAWK PRO




2. STRIKE INSTALLATION INSTRUCTIONS

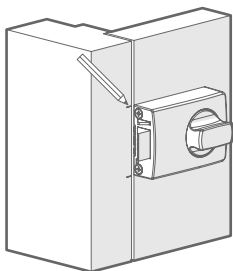


7. Close the door and using the lock case as a guide, mark the position to install the strike on the jamb.

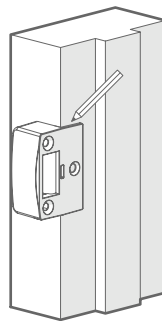

8. Using the strike, line up against the marked position and outline return profile of the strike.

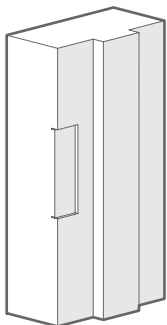


9. Chisel out a recess in the jamb within the marked area to hold the strike flush with the jamb.

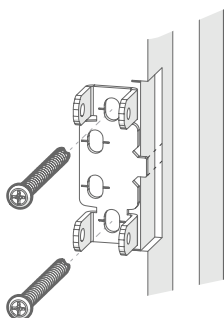


10. Align the strike mounting plate centrally within the marked horizontal lines, and position the tongue on the strike mounting plate flush with the door jamb.

Drill a 4.5mm diameter hole to a depth of 65mm and secure with two 12G x 63.5mm wood screws.

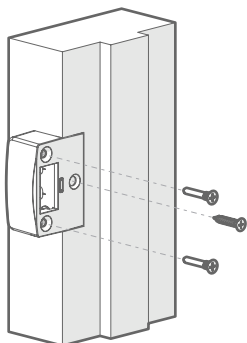

11. Place strike onto strike mounting plate and slide sideways into position. Secure with two M5 x 26mm Screw Pins first.

Drill a 3mm diameter hole in the jamb and secure with 9G x 25mm wood screw.

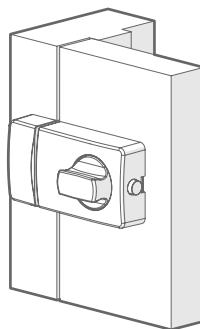

12. The installation of the Night Hawk Pro is now complete.

Special Notes:

INWARD OPENING INSTALLATION: Align the designated dashed line on the drilling template with the door edge. Metal frame strike available, product code CNL-MFS-SC.

OUTWARD OPENING INSTALLATION: Align the designated solid line on the drilling template with the face of strike. Outward opening strike is not supplied and is sold separately product code CNL-OSSC.

DOOR THICKNESS: This lock is suitable for installation on doors from 28 - 50mm thick.

SECURITY: For maximum security, the gap between the lock case and strike should be kept to a minimum and must not exceed 5mm.

WARNING
Please keep contents away from small children.
Suffocation Hazard.

NOTE
Please dispose of plastic bags and other packaging in a thoughtful manner



LOCK & KEY Phone: 1300 652 692

Web: www.locknkey.com.au

Web: www.daveweb.com.au

Distributed in Australia by
LOCK AND KEY a division on the
DAVCOR GROUP PTY LTD ABN 95 003 562 598
Distributed in New Zealand by
BABER LOCK & KEY


to Lock and Key Company specifications
This product is guaranteed to be free from defects in materials and workmanship for a period of one (1) year from the date of original purchase. This warranty is for replacement of product only and Lock and Key Company does not accept responsibility for any direct or consequential damage caused by this product or its use. This warranty

does not cover damage that results from faulty installation or usage, alteration or modification of the product or tarnishing of the finish including colour change due to weather, salt or chemical. Should this product not perform satisfactorily in its intended application, return it to place of purchase for replacement.



HOLDBACK SELECTION

Configuring the function of the knob.
Remove the screw, and position the switch to hold back mode as per diagram below and secure screw tightly.

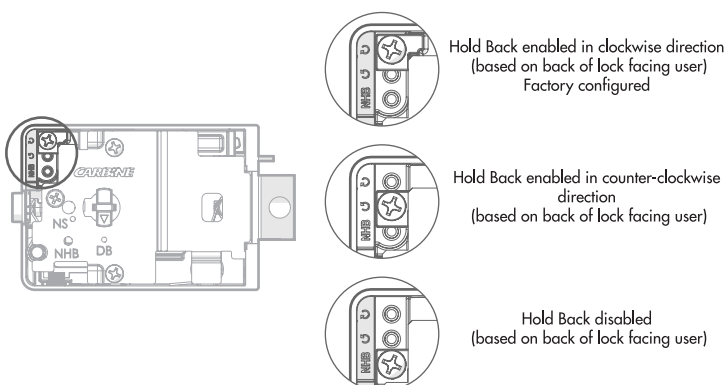

SNIB DISABLE AND ENABLE

The snib at the side of the lock dead lock external key cylinder when engaged.
The snib is factory configured enabled.

