

CODE CHANGE INSTRUCTIONS CL1112S DIGITAL CAM LOCK

RESETTING INSTRUCTIONS

- 1 Please read all instruction thoroughly before resetting combination.
- 2 Your 3 dial cam lock is factory set at 0-0-0

Push the reset pin which is located on the right hand side of the cam lock by
3 using a sharp pen to push in and hold until complete step 4.
- 4 Select new desired combination on the dials.
- 5 Please write down the new combination for future reference.