



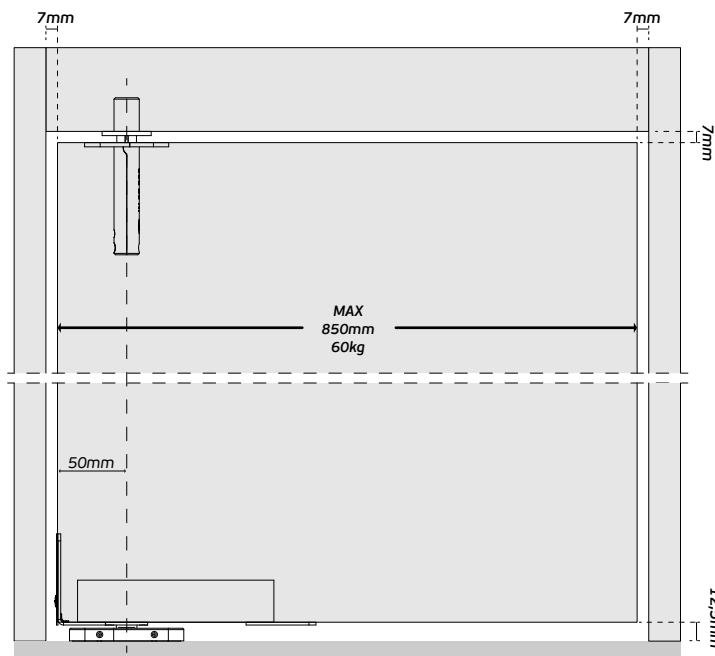


Ajustar o alinhamento da porta na base.
Verificar e bloquear os seis parafusos de ajuste, para garantir o posicionamento definido e o bom funcionamento /

Adjust the door's alignment on base.
Check and lock the six adjusting screws, to guarantee the good positioning and its function /


Ajuste el alineamiento de la puerta en la base.
Verificar y bloquear los seis tornillos de ajuste, para garantizar el buen posicionamiento y su función

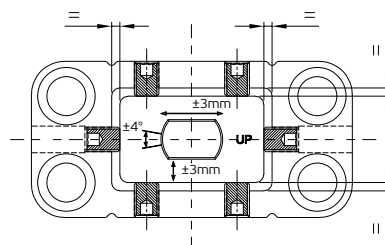


COVER

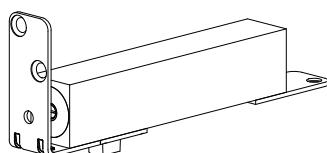

BOTTOM PIVOT

 


BASE

 

TOP PIVOT



 PIVOT SUPPORT



5mm

3mm



4x - Metallic plug M8



4x - M8x30



4x - M5x15



4x - Ø5x25



2x - Ø5x16



2x - Ø4x40



 
3x - Ø3,5x32





3x - PLUG



2x - CAP



4mm

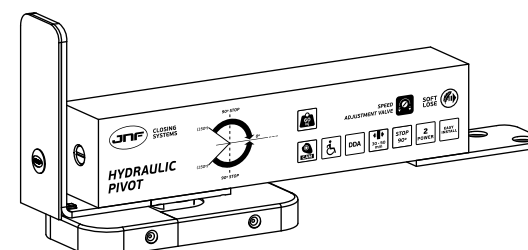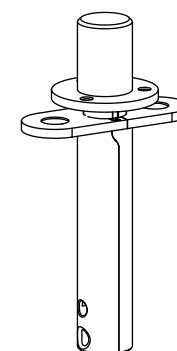

SPEED
ADJUSTMENT VALVE



SOFT
LOSE



IN.05.203.H0

KIT COMPLETO DE PIVOT HIDRÁULICO PARA PORTAS DE MADEIRA/
COMPLETE HYDRAULIC PIVOT SET FOR WOOD DOORS/
KIT COMPLETO DE PIVOTE HIDRAULICO PARA PUERTAS DE MADERA/

Entalhe / Door cut / Taladro

