

# Euro Lock

## Fitting Instructions

1. Always check that your template is the correct one for your lock and check that it is printed to scale with a ruler.
2. If necessary, reverse the tongue of the lock by undoing the two phillips head screws underneath the latch tongue. Attempting to open the lock case will void any warranty.
3. Make a center line on the edge of your door at the desired height.
4. Line up the center of the template with your center line on door edge.
5. Drill overlapping holes to depth shown on template.
6. Tidy up holes with a chisel if necessary.
7. Insert the lock into the hole and scribe around the face plate. Neatly Chisel out the scribed area to the thickness of the face plate (the face plate must sit flush with the door edge.)
8. Remove the lock from the door and line up the template on the face of the door.
9. Fix left and right face templates to the door. For rebate locks, place the template to align with the leading edge of the door, not the lower level of the rebate.
10. Drill holes for the spindle and for the euro cylinder. To prevent damage to the door face, do not drill holes right through. Drill from either side and meet in the middle.
11. Insert lock and Drill 2 x 2mm pilot holes for the lock face plate screws. Screw fix the lock.
12. Insert euro cylinder through the lock body and fix with the appropriately sized cylinder screw provided.
13. Mark out the door frame for the striker. Mortice out the door frame for the striker plate, as well as the latch and locking bolts. Bolt recesses should be 15mm deep.
14. Fit and then screw the striker plate to the door frame.

Further fitting instructions, templates, care & maintenance information and instructional videos can be found at our websites: **[tradco.com.au](http://tradco.com.au)** **[tradco.co.nz](http://tradco.co.nz)**

---