



USER GUIDE

Firmware Version: 1.1.x

Last updated on Oct 28, 2025

NAUTITALK EASY

CREW COMMUNICATION SYSTEM



The firmware version 1.1.x indicates that this manual is applicable to all firmware updates within the version 1.1 series.

QUICK REFERENCE

 : (+) button

 : (-) button

 : Multi-function button

 : Slide switch

Type	Operation	Button	Duration
Basic operations	Power on		Slide up
	Power off		Slide down
	Volume up/down	 or 	Single tap
Phone	Phone pairing		Press for 5 seconds
	Answer phone call		Single tap
	End phone call		Press for 2 seconds
	Reject phone call		Press for 2 seconds
	Activate voice assistant		Press for 3 seconds
	Speed dial		Double tap
	Play/Pause music		Press for 1 second
	Track forward/back	 or 	Press for 1 second
Mesh Intercom™	Mesh Intercom on/off		Single tap
	Channel selection		Double tap
	Mesh grouping		Press for 5 seconds
	Toggle Open/Group Mesh		Press for 3 seconds
	Mesh Reach-Out request		Triple tap
	Reset mesh		Press for 8 seconds
Troubleshooting	Factory reset		Press for 10 seconds

BEFORE GETTING STARTED

■ Sena Marine App

Download the Sena Marine app from the Google Play Store or the App Store.



CLICK ANY SECTION TO BEGIN



ABOUT THE
NAUTITALK EASY



INSTALLATION



BASIC OPERATION



MESH INTERCOM



USING WITH A
SMARTPHONE



FIRMWARE UPDATE



TROUBLESHOOTING



01 ABOUT THE NAUTITALK EASY

Key Features

- Mesh Intercom 3.0 with improved sound quality, a more robust connection, and extended talk time
- Swivel microphone for easy mute/unmute
- IPx5 waterproof rating
- Bluetooth® version 5.2
- Over-the-Air (OTA) firmware update



① Battery cover button

③ (-) button

⑤ Multi-function button

⑦ USB-C charging port

 
② (+) button

④ Status LED


⑥ Charging LED

⑧ Slide switch

Package Contents

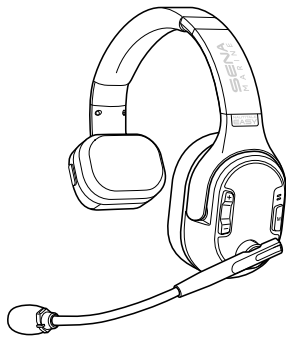

 
NAUTITALK EASY
(including rechargeable battery)



Color pins
(Orange, Black, White, Gray)



 Microphone sponges

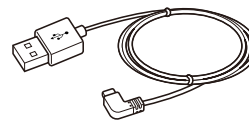


USB-C charging cable


02 INSTALLATION

■ Color Pins

 
Use different color pins to distinguish your device.

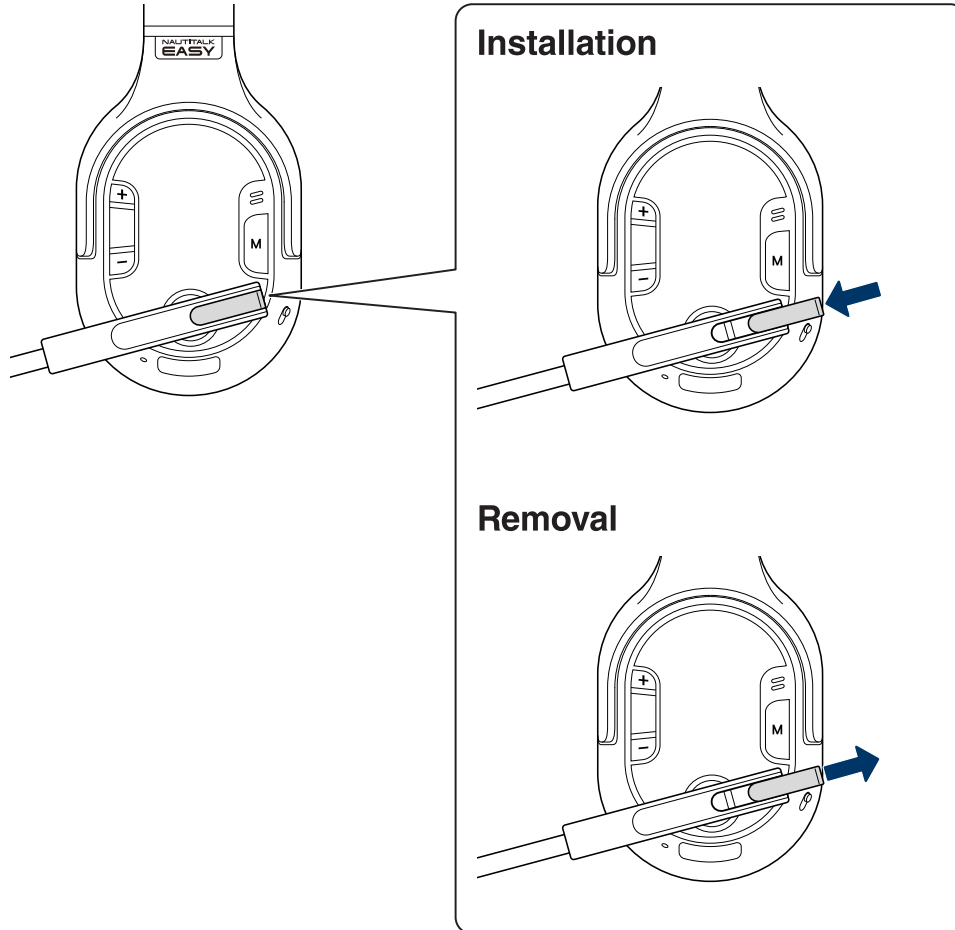


Rechargeable Battery

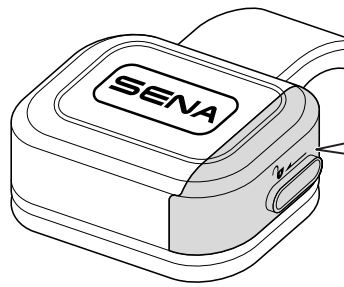 

 1. Press the button and slide the cover to the left.

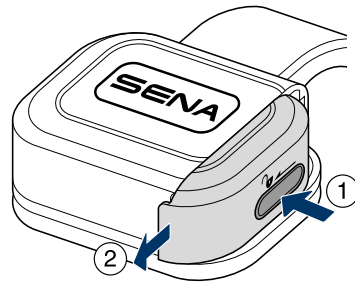

 2. Lift the cover to open it.

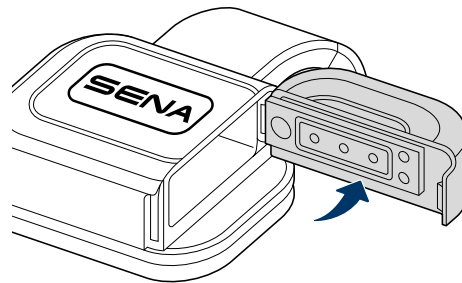


3. Insert or remove the battery.

03 BASIC OPERATION

1x	Tap Tap the button the specified number of times
1s	Press and Hold Press and hold the button for the specified amount of time
" "	Voice Prompt
	LED

 
Charging

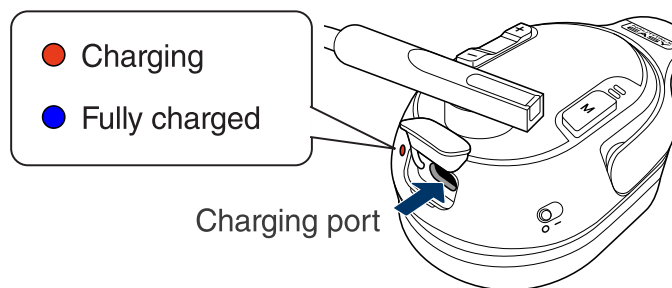


It takes 2.5 hours to fully charge.

- Any third-party USB charger can be used, as long as it is approved by the FCC, CE, IC, or other locally recognized regulatory agencies.
- Using a non-approved charger may cause fire, explosion, leakage, and other hazards, potentially reducing the battery's lifespan or performance.

 Power On

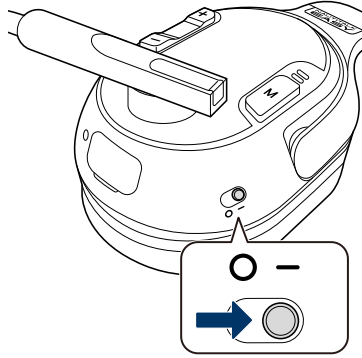


Power Off

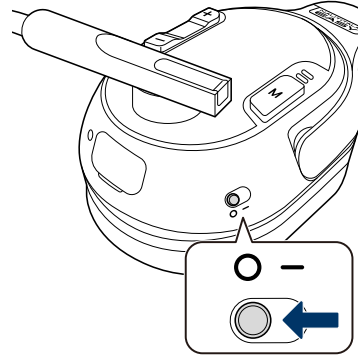 


Mute/Unmute Mic

 Use the swivel microphone arm to mute/unmute the microphone.

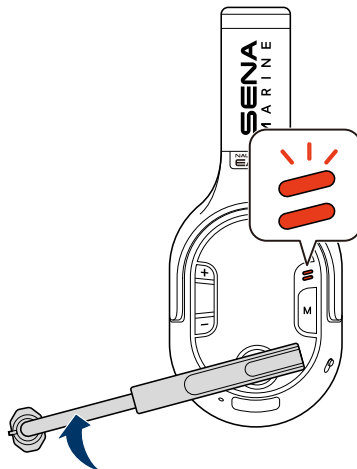

 **Mute:** "Mic off"

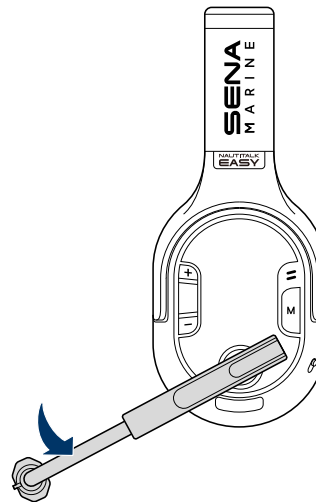 


 **Unmute:** "Mic on"

04 MESH INTERCOM


The NAUTITALK EASY provides two Mesh Intercom modes:

- Open Mesh™ for open group intercom conversations.
- Group Mesh™ for private group intercom conversations.

 Open Mesh

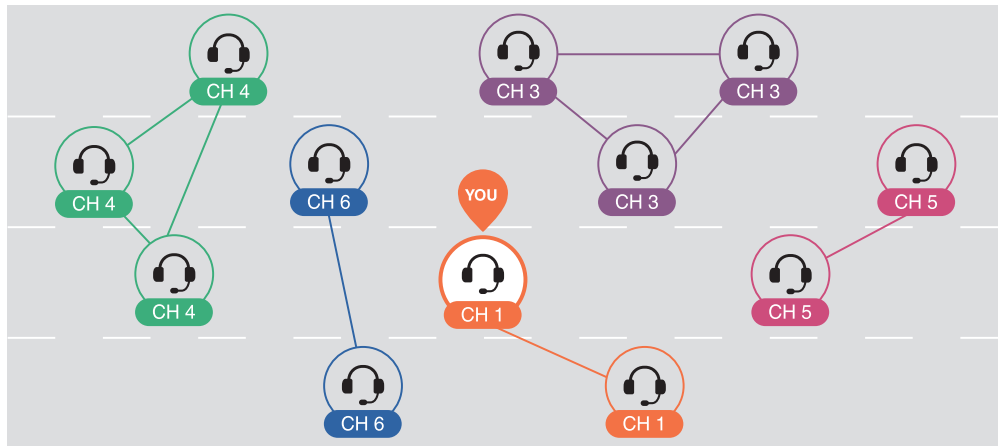

Group Mesh

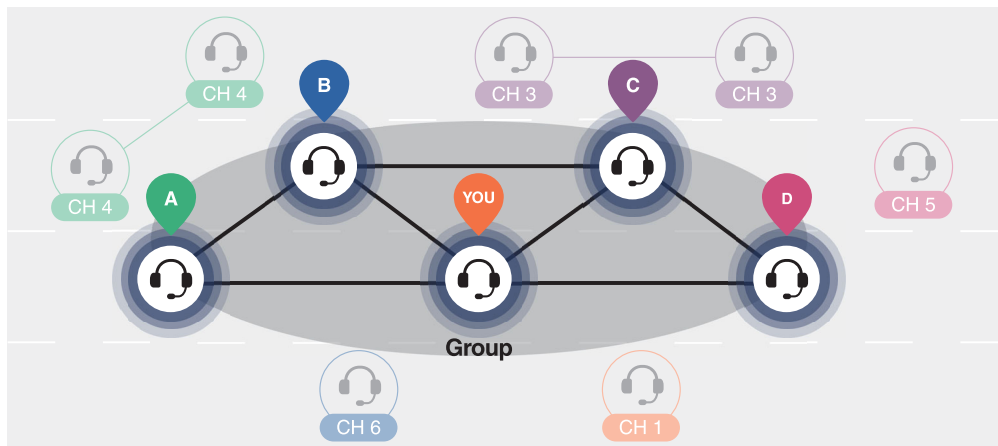 

Mesh Version Switch


Switch to Mesh 2.0 for Backward Compatibility

Mesh 3.0 is the latest Mesh Intercom technology, but to communicate with legacy products using Mesh 2.0, please switch to Mesh 2.0 using the Sena Marine app.


Open Mesh

You can freely communicate with virtually unlimited users in each of the 6 available channels. The default Mesh Intercom channel is 1.

 Mesh Intercom On/Off

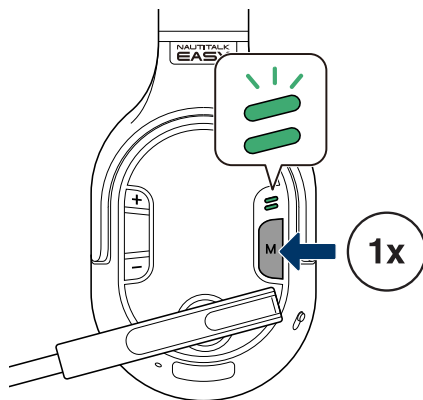

 
 **On:** "Mesh intercom on,
Open Mesh, channel 1"

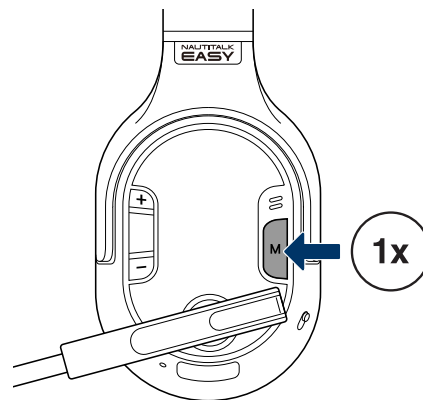


 **Off:** "Mesh intercom off"

Channel Selection

 
1. Enter the channel setting.

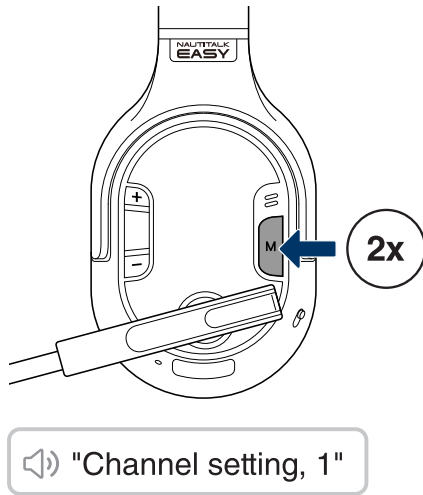

 2. Navigate between channels.

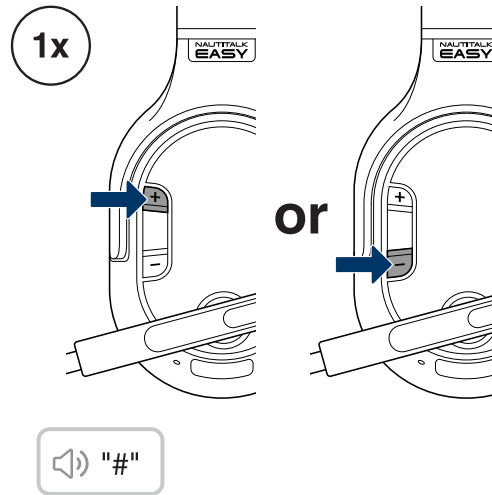

 3. Confirm and save the channel.

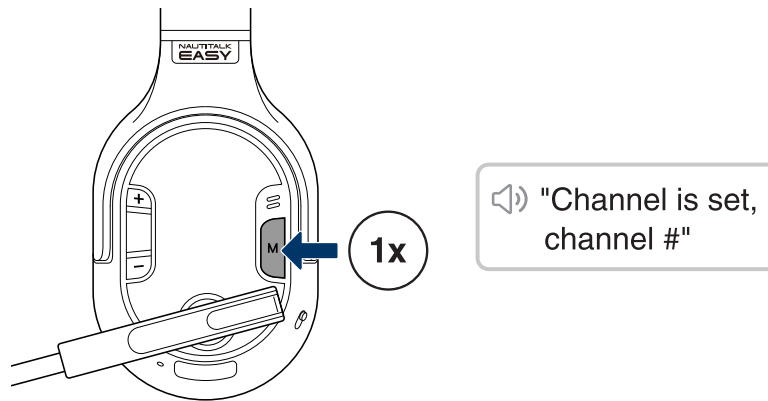


- The channel will be automatically saved if no buttons are pressed for 10 seconds on a specific channel.
- The channel will be saved even if the NAUTITALK EASY is turned off.


Group Mesh

By using group mesh, a private conversation group can be created for up to 24 participants.

 Create a Group Mesh

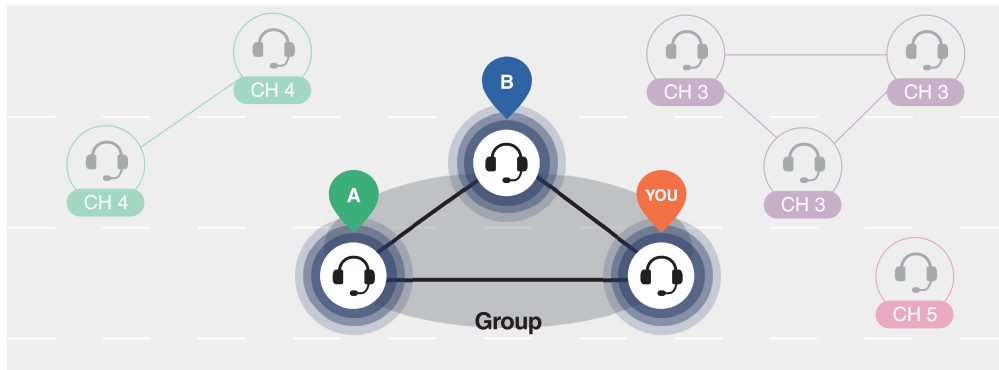

 
1. Users (You, A, and B) enter the mesh grouping by pressing the multi-function button for 5 seconds while staying in the open mesh. They don't need to be on the same open mesh channel to create a group mesh together.

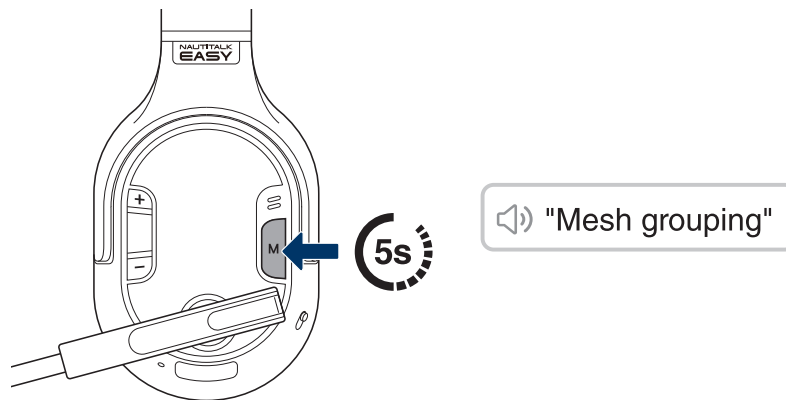

2. When mesh grouping is completed, it automatically switches from open mesh to group mesh.

 "Group Mesh"

 
- If you want to cancel mesh grouping, tap the multi-function button.

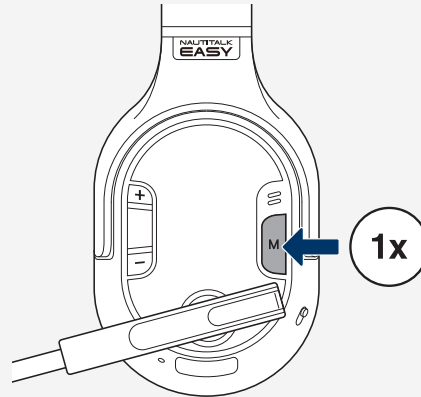

- If the mesh grouping is not successfully completed within 30 seconds, users will hear a voice prompt saying, "Grouping failed."


Join an Existing Group Mesh

 When you are in a group mesh, you can invite other users in open mesh to join the group.

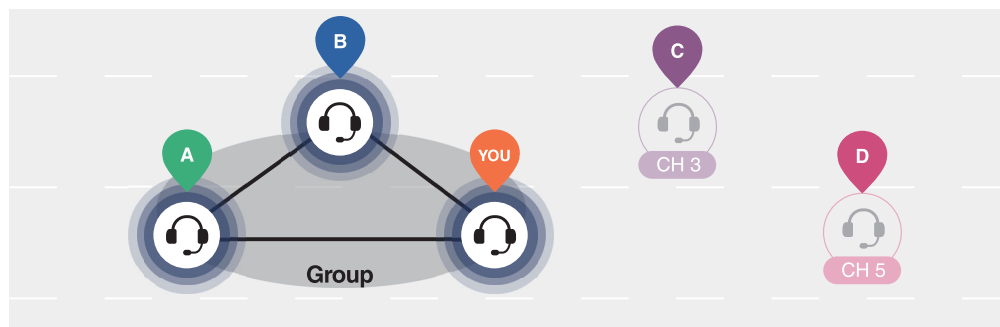

You are already in group mesh with A and B, and the other users, C and D, are in open mesh.

 1. You and the other users, C and D, enter mesh grouping by pressing the multi-function button for 5 seconds.

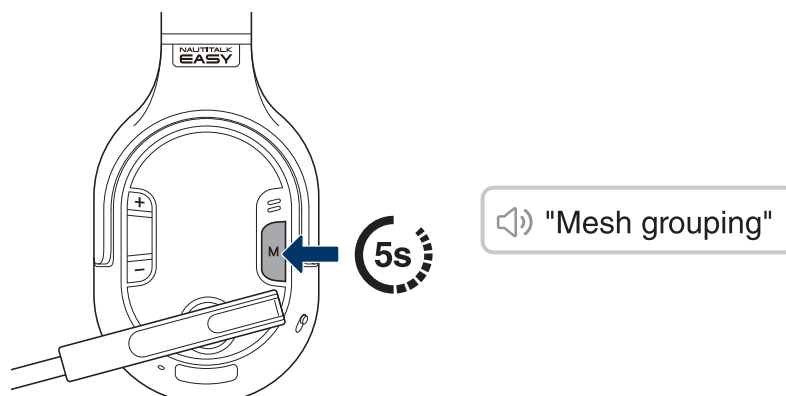

- When mesh grouping is completed, the other users, C and D, automatically join the group mesh while leaving the open mesh.

 
 "Group Mesh"

New participants (C and D)

- If the mesh grouping is not successfully completed within 30 seconds, the current user (You) will hear a low tone double beep and the new users (C and D) will hear a voice prompt saying, "Grouping failed."

Toggle Open/Group Mesh

You can toggle between open mesh and group mesh without resetting the mesh.

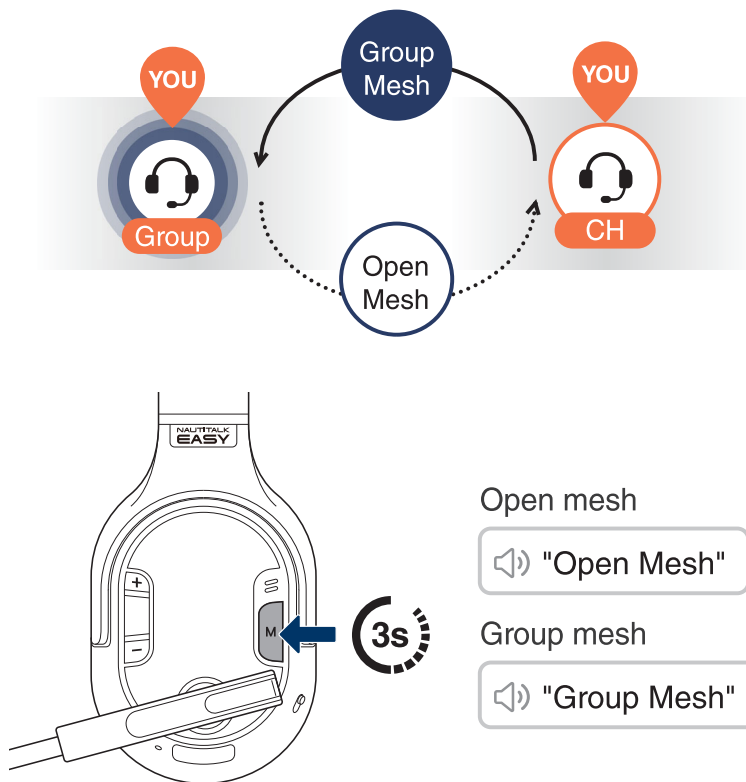


- If you have never participated in group mesh, you cannot toggle between open mesh and group mesh. You will hear a voice prompt saying, "No group available."

Mesh Reach-Out Request

You (caller) can send a Mesh Reach-Out request to turn on Mesh Intercom to nearby* friends who have it turned off.

1. If you want to send or receive a Mesh Reach-Out request, you need to enable it in the Sena Marine app.
2. You can send a Mesh Reach-Out request using the multi-function button or the Sena Marine app.

 Caller

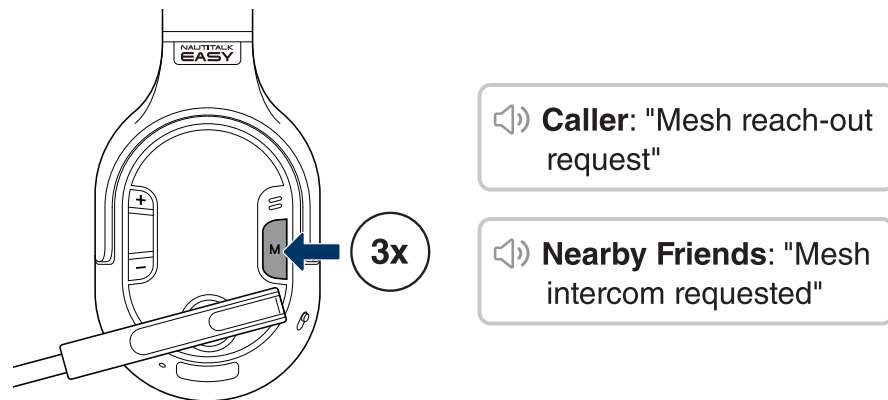


3. Friends who receive the Mesh Reach-Out request need to manually turn on their Mesh Intercom.

* Up to 330 ft in open terrain


Reset Mesh

 If the NAUTITALK EASY resets the mesh while in open mesh or group mesh, it will automatically return to open mesh, channel 1.

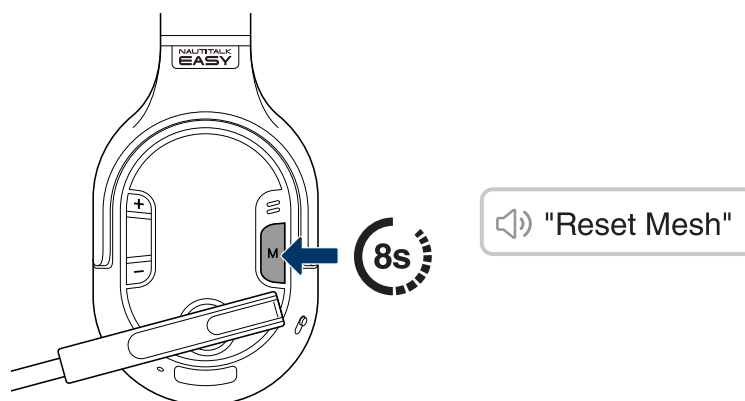

05 USING WITH A SMARTPHONE

 
Phone Pairing

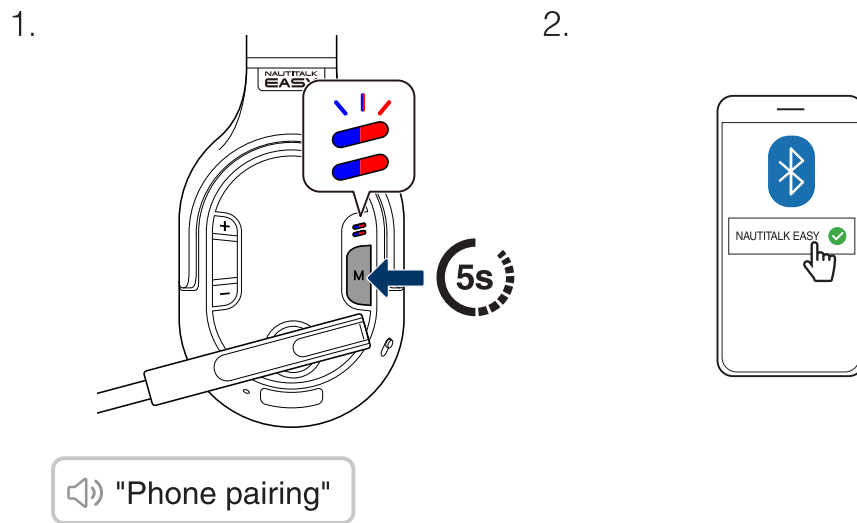


- To cancel phone pairing, press any button.

Making and Answering Calls

 
Answer a Call

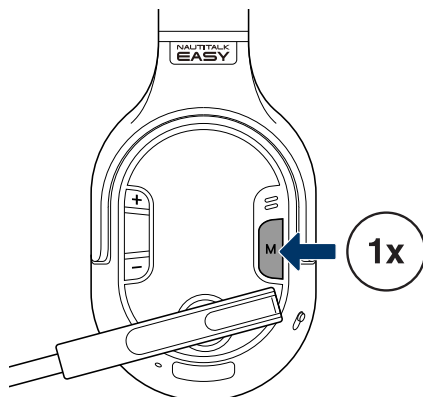


End a Call

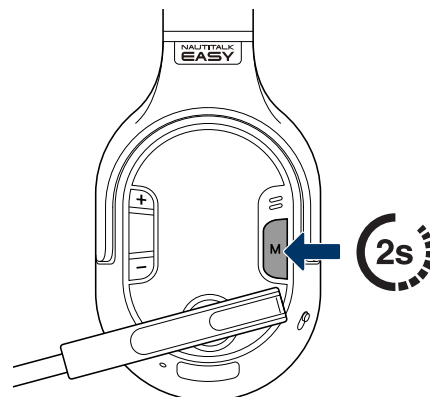 

Reject a Call

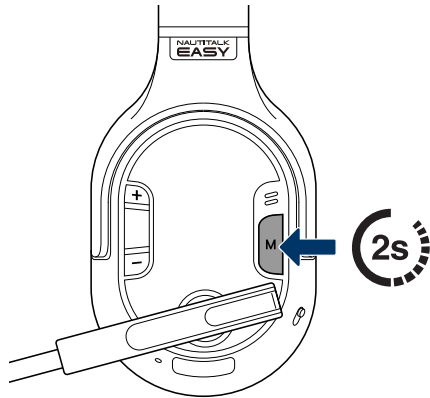 

Activate Voice Assistant

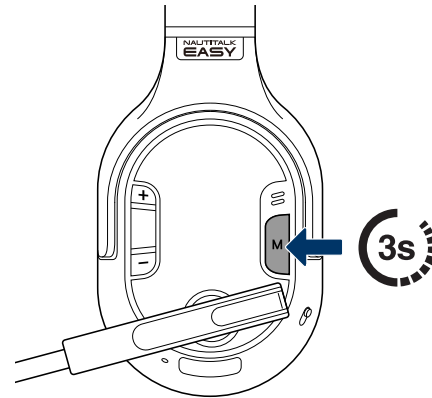 



Speed Dial

Assign Speed Dial Presets

Speed dial presets can be assigned using the Sena Marine app.


Use Speed Dial Presets

  1. Enter the speed dial menu.
2. Navigate forward or backward through speed dial preset.

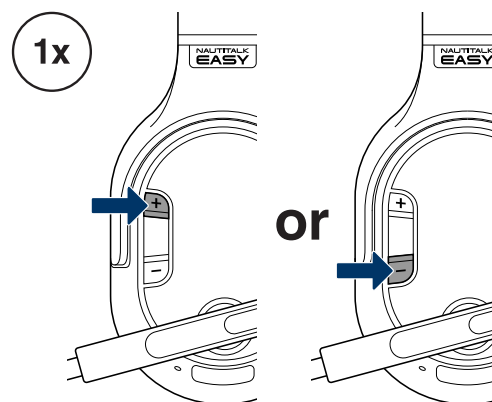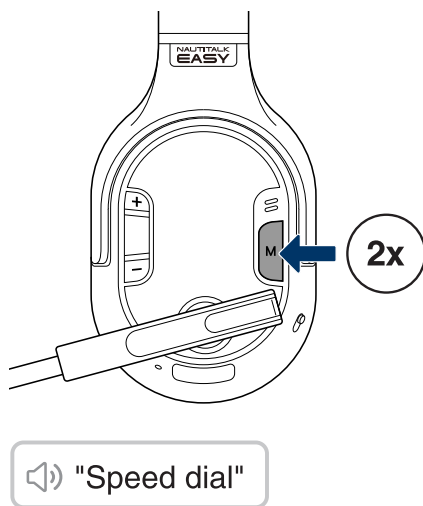


- ① Last number redial
- ② Speed dial (1→2→3)
- ③ Cancel

 3. Tap the multi-function button to confirm.

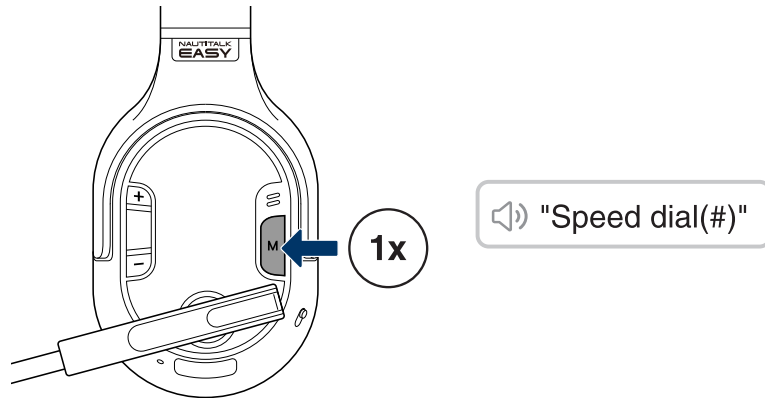


Music

 ■ Play/Pause Music

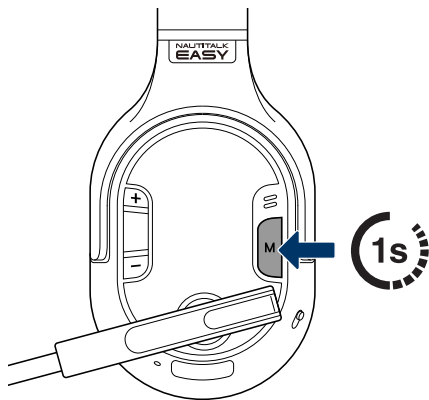

■ Track Forward/Backward

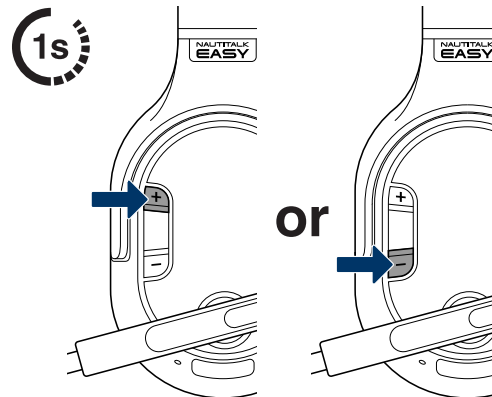 


06 FIRMWARE UPDATE

You can update the firmware via Over-the-Air (OTA) directly from the settings in the Sena Marine app.

07 TROUBLESHOOTING

Factory Reset

 
To restore the NAUTITALK EASY to its factory default settings, simply use the factory reset feature.

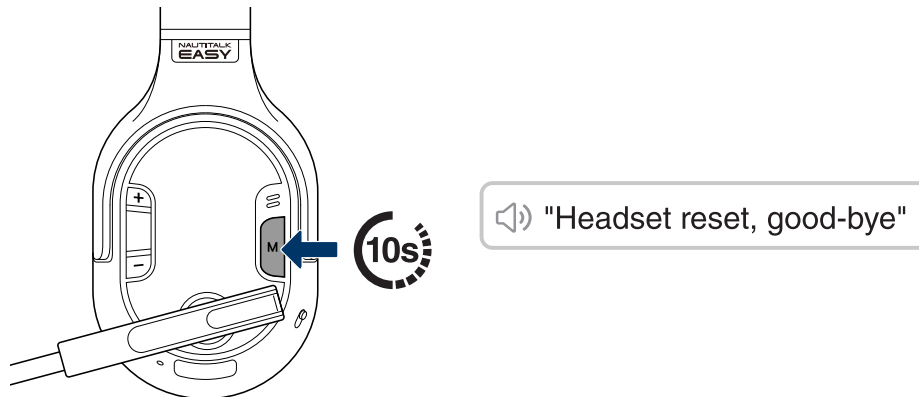


Fault Reset

If the NAUTITALK EASY is on but unresponsive, you can perform a fault reset to restore functionality.

 
1. Press the button and slide the cover to the left.

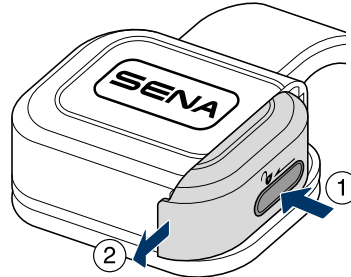

 2. Lift the cover to open it.

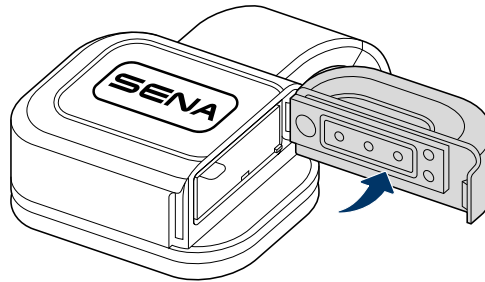

 3. Remove the battery from the slot, put it back in, and restart the device.

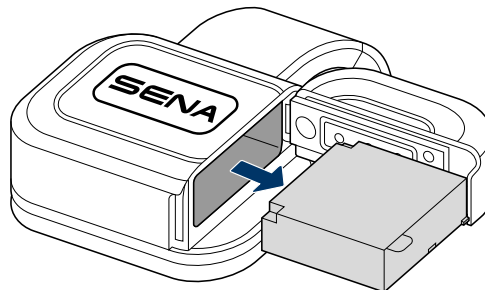

All settings will remain unchanged.



Copyright 2025 Sena Technologies, Inc.
All rights reserved.

© 1998–2025 Sena Technologies, Inc. All rights reserved.

Sena Technologies, Inc. reserves the right to make any changes and improvements to its product without providing prior notice.

Sena™ is a trademark of Sena Technologies, Inc. or its subsidiaries in the USA and other countries.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sena is under license.

Sena Technologies, Inc.
152 Technology Drive, Irvine, CA 92618