




AVAILABLE ACCESSORIES

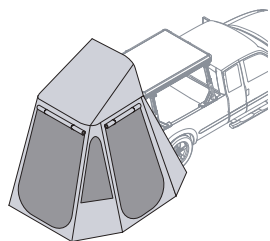


SkyPeak HD Annex
#8007514

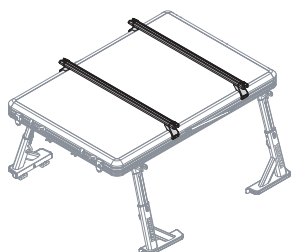


SkyPeak HD Crossbar Kit
#8007513

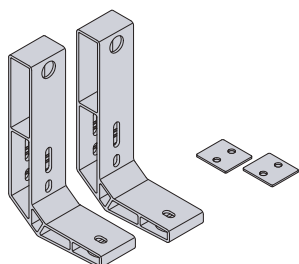


SkyPeak HD Side Bracket
#8005071

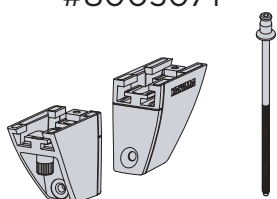

Tent Clamp, Pair
#8005072

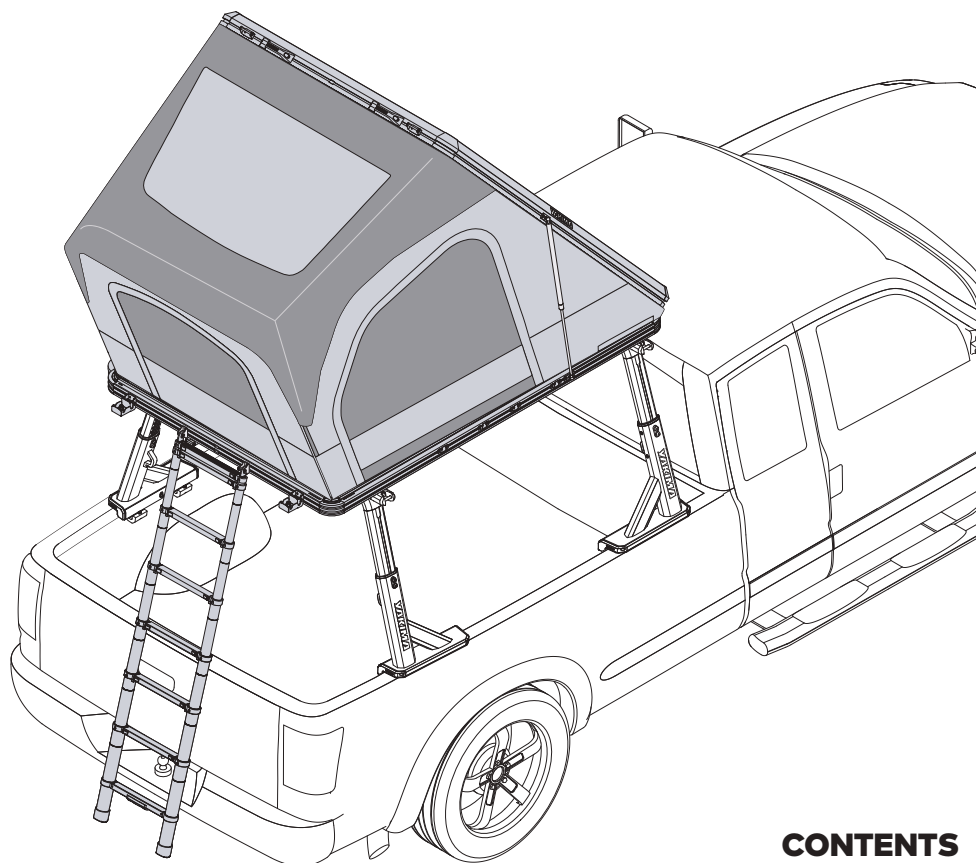

CONTENTS

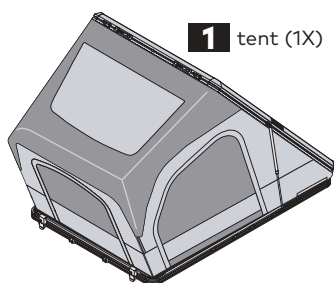


1 tent (1X)




2 ladder (1X)




3 shoe bag (2X)

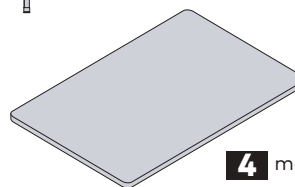

4 mattress (1X)

 

5 clamp (static) (4X)

 


6 clamp (adjustable) (4X)



7 5 mm



 8 4 mm



9 3 mm



10 torque wrench (1X)



11 clamp rod w/ cap (4X)



12 handle (2X)



13 key (2X)



14 O-ring (1X)



15 M5 washer (4X)



16 M5 x 25 screw (4X)



17 M5 shoulder screw (1X)



18 end cap (4X)



19 M8 x 8 screw (2X)



20 lock (2X)



21 ladder latch (4X)



22 upper hinge cover (3X)



23 lower hinge cover (3X)



24 M8 x 14 screw (12X)



25 M8 washer (14X)



26 M8 nut plate (18X)



27 M6 screw (6X)



28 M6 washer (6X)



29 M6 nut plate (4X)



30 M4 x 6 plastite screw (8X)



31 solar port w/ cap (1X)



32 bottle opener (1X)



33 lock cores (2X)

Français.....P10

Dansk.....P16

Deutsch.....P27

Polski.....P33

Slovenčina.....P45

Español.....P10

Nederlands.....P21

Italiano.....P27

Português.....P39

Svenska.....P45

Čeština.....P16

Suomi.....P21

Norsk.....P33

Русский.....P39

Українська.....P51

WEIGHT LIMITS



Do not exceed your vehicle or rack's maximum capacity when driving (dynamic) or parked (static).

Total Tent Weight: 180 lb. (82 kg).
Interior Tent Capacity: 600 lb. (272) (Static).
Side T-slot Capacity: Up to 75lb. (34) kg each side (Dynamic).
Tent Top Capacity with SkyPeak HD Crossbar Kit accessory (sold separately): Up to 165 Lb. (75 kg) with tent closed (Dynamic), up to 75lbs with tent open (Static).

READ ME FIRST!



For your safety register your new product online at: www.yakima.com/warranty-registration

FIRST OFF, THANKS!

Welcome to the Yakima family. We appreciate your support and are confident that you'll get years of solid performance from your new Yakima product. Below are a few helpful hints to make sure that you have a great ownership experience. Please keep these instructions.

WATCH FOR THESE SYMBOLS!



=

SAFETY – Keep safe by reading the important safety warnings included in the product instructions! Safety warnings are identified with this symbol.



=

STOP – Please read all important product notes in the product instructions to ensure proper installation or fit information. These notes are identified with this symbol.

SOME DO'S AND DON'TS (additional warnings are contained in these instructions)

- ✓ Do have a friend or dealer help with installation.
- ✓ Do use the tent when parked on level ground.
- ✓ Do dry the tent before storage.
- ✓ Do fully secure the tent close before driving away.
- ✓ Do assist children on the ladder.
- ✓ Do close and secure the cover before driving.
- ✗ Do not climb on your vehicle's roof.
- ✗ Do not allow more than one adult on the ladder at a time.
- ✗ Do not use the tent in high-winds or heavy-snow.
- ✗ Do not use an open flame nor cook inside tent.

IMPORTANT FIT INFORMATION

WARNING: DO NOT USE THIS PRODUCT ON A VEHICLE THAT IS INDICATED AS "NO-FIT".

The Yakima Fit-List now includes approved SkyPeak HD™ fits for many popular vehicles. Updates and additions to the Yakima Fit-List for rooftop tents are being made continually. **Please go to fitlookup.yakima.com for latest updates.**

Vehicles that we have seen and tested are designated as "FIT" or "NO-FIT" for SkyPeak HD. Fits for SkyPeak HD are different than for other Yakima products. **Please note that virtually all factory crossbars are too flexible for rooftop tents. So vehicles approved in the Fit-List will still require a Yakima roof-rack system.** If we have not tested your particular vehicle and rack system, you can use the checklist below to evaluate whether your vehicle and rack system may support a SkyPeak HD.

Remember, the checklist below is designed to be a guideline only and any installation not on our approved Fit-List is at the sole risk and responsibility of the owner or installer.

- ❑ The vehicle and rack system have a minimum load carrying capacity of 185lb. (84 kg).
- ❑ For factory-tracks or fixed-points (see figure 1), ensure that the roof does not deform when heavy loads are applied.
- ❑ For vehicles with raised-rails, position the crossbars as close as possible to rail supports.
- ❑ Ensure that the crossbar spread is between 30" - 68" (76 - 172 cm).
- ❑ Do not use with factory-crossbars, they are too flexible.
- ❑ Do not position the mounting hardware more than 1" outside of the Tower (see figure 2).

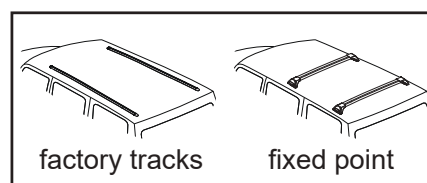


fig. 1

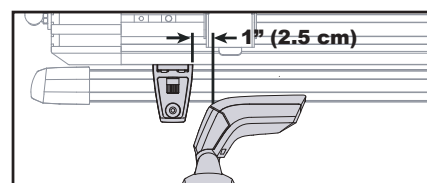


fig. 2


ASSEMBLE AND INSTALL

1 REMOVE THE CONTENTS FROM THE TENT.

2

INSTALL THE HANDLES.

- Slide four M8 nut plates into the top channel cutout, positioning two on the left and two on the right, as shown.
- Align the handle and secure it with two M8 washers and two M8 screws using a 5 mm wrench, as shown. Fully tighten to 6 Nm (4.4 lb-ft). Repeat this process for the other handle.

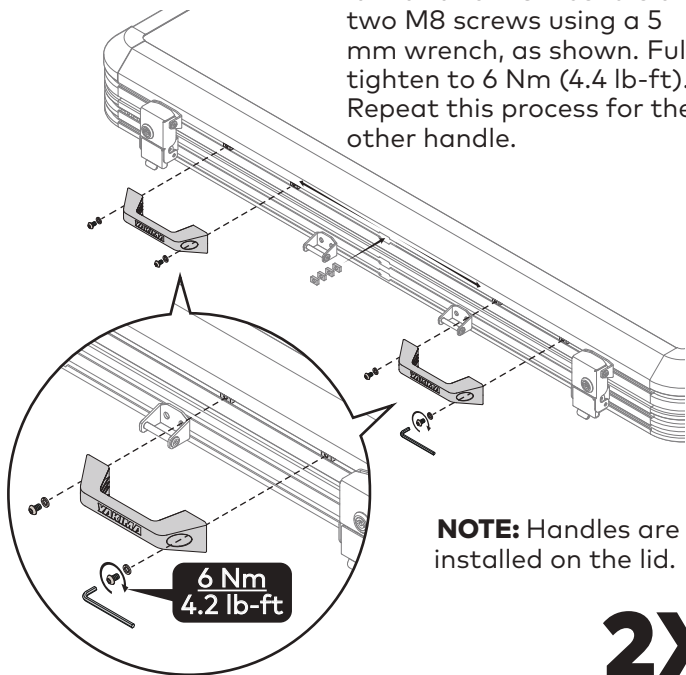


NOTE: Handles are installed on the lid.

2X

3

INSTALL THE LADDER LATCHES.

- Slide four M8 nut plates into the bottom channel cutout, positioning two to the left and two to the right, as shown.
- Align the ladder latches and secure each with an M8 washer and M8 screw using a 5 mm wrench, as shown. Space the ladder latches 17" (40 cm) apart, then fully tighten to 8 Nm (5.9 lb-ft).

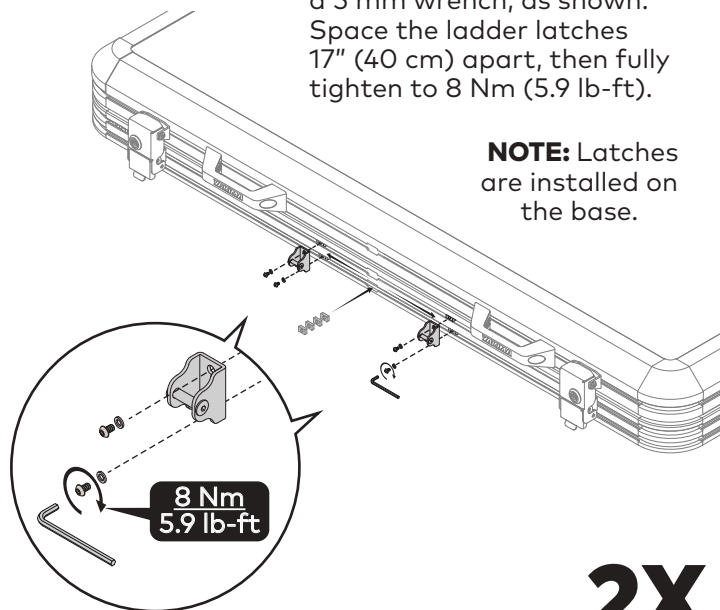


NOTE: Latches are installed on the base.

2X

4

INSTALL THE HINGE COVERS.

Position the hinge cover as shown, placing the lower hinge covers below and the upper hinge cover above. Using a 4 mm wrench, secure each cover with an M6 screw and an M6 washer. Tighten fully to 3.5 Nm (2.6 lb-ft).

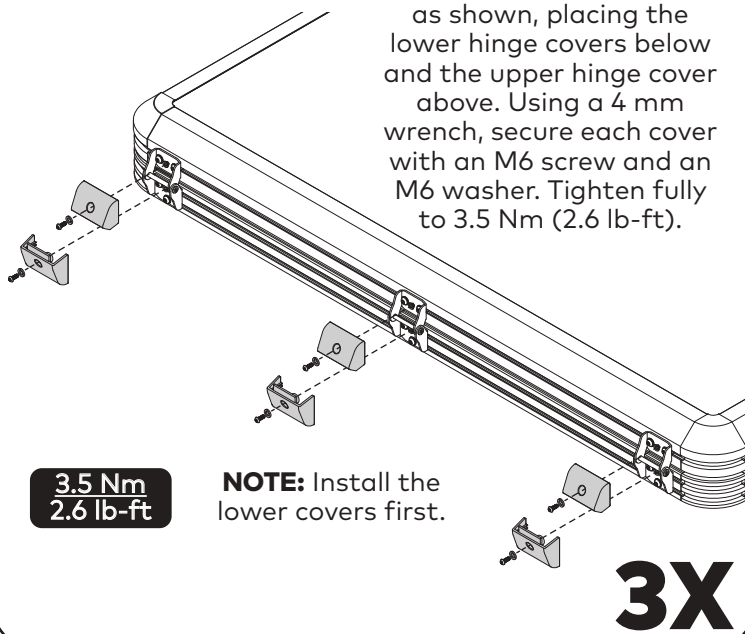


NOTE: Install the lower covers first.

3X

5

INSTALL THE LOCK CORES INTO THE LATCHES.


- Using a key, dislodge the black plastic plug from the latches.
- Insert a key into the lock core, and insert the lock core into the latch. Rotate the as necessary until the lock core fully seats.
- Remove the key. Repeat for the other latch.

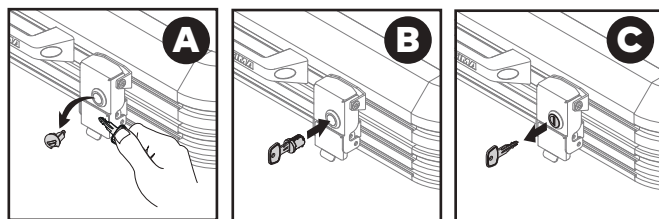

6

PLACE THE TENT ON YOUR CROSSBARS.


Have at least three additional people assist you in lifting the SkyPeak™ onto your vehicle's crossbars.

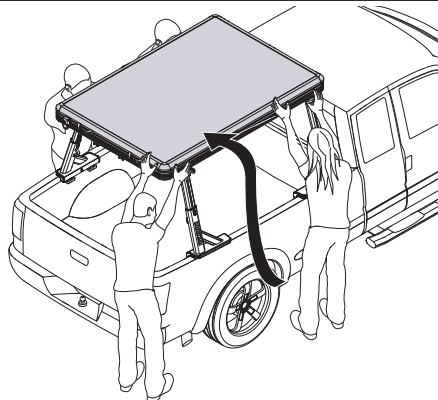


NOTE: Be mindful of antennas or other potential contact points on the vehicle's roof.

7 INSTALL THE CROSSBAR CLAMPS.


Install the Rear Crossbar Clamps:

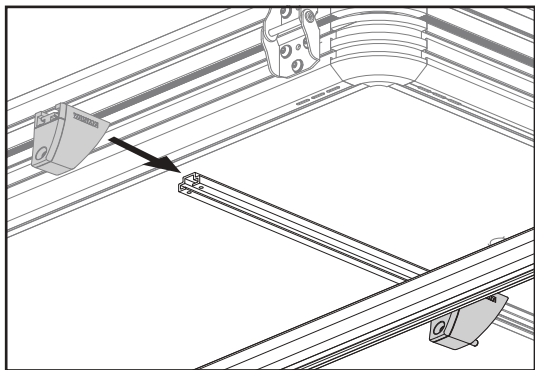


- From the hinge side of the tent, install an adjustable clamp followed by a sliding clamp on each track, positioning them as shown.
- Lift the tent off the front crossbar and slide all clamps past it toward the middle of the tent.
- Then, lift the tent off the rear crossbar and move the adjustable clamps on each track past the rear crossbar to the end of the tracks.

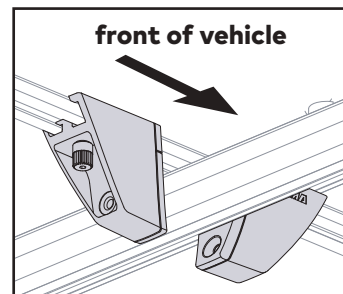

Install the Front Crossbar Clamps:





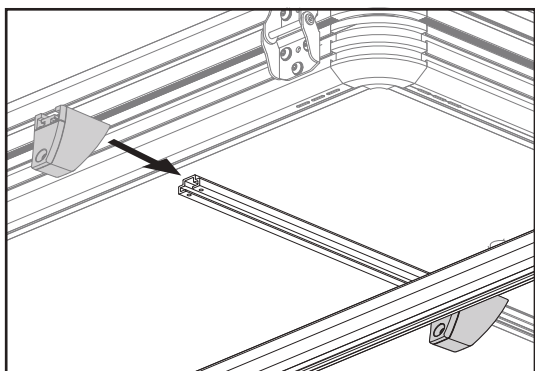


- From the hinge side of the tent, install a sliding clamp followed by an adjustable clamp on each track, positioning them as shown.
- Lift the tent off the front crossbar and slide the sliding clamp on each track past it.

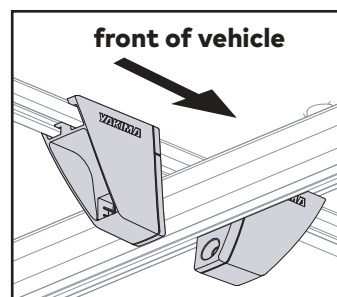

8 SECURE CROSSBAR CLAMPS

- With the tent properly positioned on the vehicle, slide all clamps until they contact the crossbars. Using a 4 mm wrench, tighten each clamp knob as shown. Fully tighten to 3.5 Nm (2.6 lb-ft).
- Insert the clamp rod through both halves of the clamp, hand-tightening until both halves make firm contact with the crossbar.
- Then, use a torque wrench to fully tighten to 3.5 Nm (2.6 lb-ft).
- Attach a lock to a clamp rod on both the front and rear crossbars, then secure them as shown.
- Finally, using the 4 mm wrench, install the four end caps using two M4 x 6 plastite screws each. Fully tighten to 1 Nm (0.7 lb-ft).

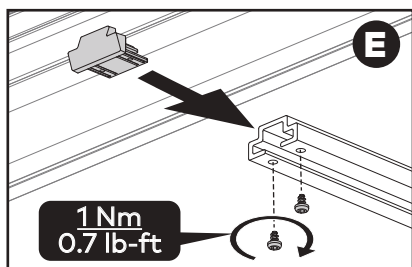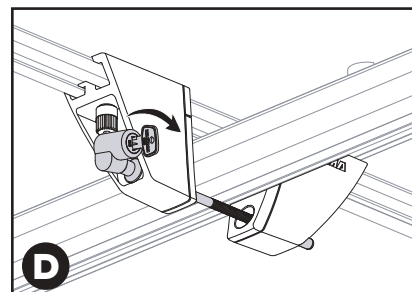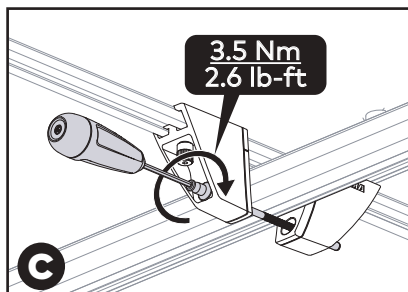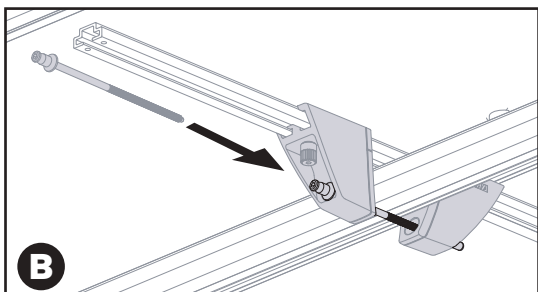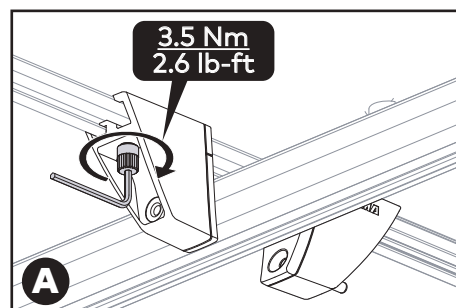

NOTE: After 12 hours of initial use, retighten the clamp rod.

NOTE: On certain vehicles, reversing the positions of the front and rear clamps may improve access to the clamp bolt.

4X