

KEY SAFE

en Operation







en Key Safe – Operation

Dear customer,

Thank you very much for deciding for a KEY SAFE manufactured by BURG-WÄCHTER. The KEY SAFE permits a reliable storage of keys and /or other valuables.

Important: Please read the entire User Manual before you start to mount the device and before resetting.

Let us wish you a high level of security and quality of living with your KEY SAFE

your BURG-WÄCHTER

To Open

Slide shutter door down to reveal the dials and the door release button. Rotate all 4 dials to the pre-set combination, grasp the sides on the top section of the box and pull lid towards you.

Resetting Combination

- 1. Open the KEY SAFE using the secret number (the factory preset is "0 0 0 0").
- 2. Slide the reset pin to the left and down as per arrow (Fig $\ 2$) .
- Rotate the 4 dials on the front to your new secret combination. Ensure the numbers are positioned centrally and have clicked into position.

Attention: If the code gets lost the opening of the KEY SAFE is impossible.

- 4. Return the reset pin to the original position.
- 5. Close the lid and check the operation of the box using the new combination.

To lock

The combination must be scrambled by rotating the 4 dials.

Fitting Instructions

Attention: Depending on different types of walls and floors special dowels are recommended to increase the effectiveness of anchoring.

The box should be mounted on to a solid wall using all 4 corner holes on the back plate.

Wall plugs should be used for masonry and brick walls. Use a Ø6 mm drill for the holes and put in the anchors. Now fix the KEY SAFE with the screws on the wall

The KEY SAFE should be mounted in a discreet location for maximum protection and in an area with sufficient light for authorised users to see the dials

Maintenance:

It is recommended the dials are rotated weekly to keep them moving freely.

Errors and changes reserved.