

REMOTE ORDERING OPTIONS

Art ID:
ECO-EGG



SPECIFICATIONS
ECO
Frequency - 433Mhz
Buttons - 4
Battery - LR27A

COMPATIBLE WITH



ECO-GB

RECEIVER COMPATIBILITY

- Suits Models:
Eco Garage/Gate Receivers

Remote Programming Steps

Adding Remote Controls

1. Press & hold the 'Learn' button on the receiver (garage door motor) until the LED lights up.
2. Then press any button on the new remote once, the LED will turn off.
3. Press any button on the remote again and the LED will start flashing.
4. Once the screen shows '1 1' the programming is complete

Removing All Remote Controls from Transmitter

1. Press 'CODE' button on the receiver (garage door motor) for more than 8 seconds until the LED displays 'C'. All stored remotes should now be deleted