

# CHAMBERLAIN

## REMOTE ORDERING OPTIONS

Art ID:  
**MC100AML**



**SPECIFICATIONS**  
Chamberlain  
Frequency - Multiple  
Buttons - 2  
Battery - CR2032

## COMPATIBLE WITH



## COMPATIBLE WITH (EXTENDED)



**Remote Programming Steps  
ON NEXT PAGE**

# Remote Programming Steps

## Program New Remotes to Receiver

1. Start with your garage door closed. Ensure that the door is clear of all obstructions.
2. Press and hold the bottom button on the remote control until the blue LED on the remote stays solid (approximately 15 seconds), then release the button.
3. Press and hold the LEARN button on your garage door opener for 2-3 seconds before releasing it
4. On the remote control, press and release the remote button you would like to program. The blue LED will blink for up to 60 seconds. Once the LED changes to solid blue, press & release the button on the remote that you are programming.
5. The remote will begin flashing once every three seconds. Once the door begins moving press the remote button again. Your remote is now programmed to the garage door opener.
6. Repeat process for additional remotes if necessary

## Program New Remotes to ATA Receiver

1. Start with your garage door closed. Ensure that the door is clear of all obstructions.
2. Press and hold the bottom button on the remote control until the blue LED on the remote stays solid (approximately 15 seconds), then release the button.
3. Press and hold the CODE SET button on the opener until the completion of the next step
4. On the remote, press and release the remote button that you would like to program. The blue LED on the remote will blink for up to 60 seconds. Once the remote LED changes to solid blue, release CODE SET button on the opener and press & release the remote button you are programming.
5. The remote will begin flashing once every three seconds. Once the door begins moving press the remote button again. Your remote is now programmed to the garage door.
6. Repeat process for additional remotes if necessary