


Installation Instructions:


Parallel Fixing

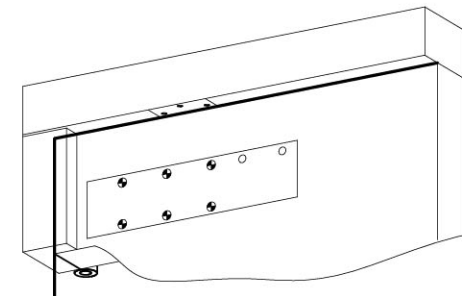


Please install the closer body and parallel arm bracket according to the template

1

Dismount the main arm and link arm

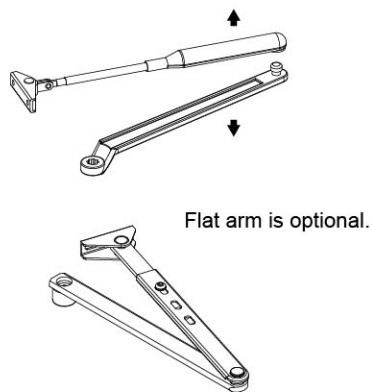


2

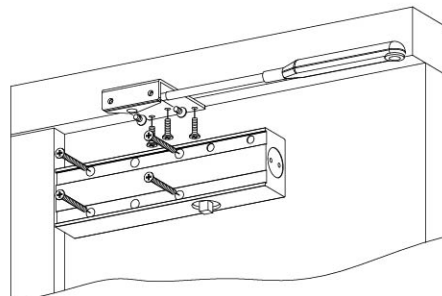


Fix link arm, parallel arm bracket and closer body by M5 screws

3

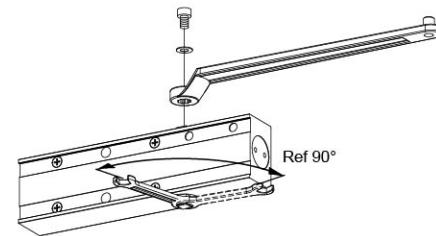

Rotate the pinion approximately at 90° by wrench as illustrated and then assemble the main arm with pinion by M6 screw tightly



4

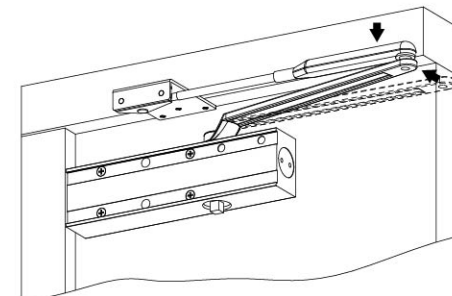

Connect the main arm and link arm as illustrated

5

Speed Adjustable

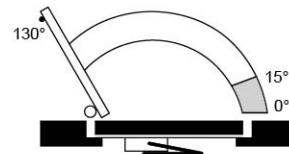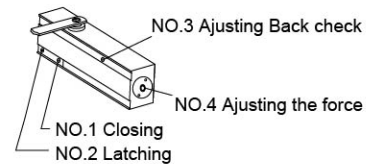


※ If the strength is too light, it could be adjusted at clockwise rotation. On the contrary, it could be done at counterclockwise.

10701 ZINS-Fxxxx-6S

Installation Instructions:


Parallel Fixing

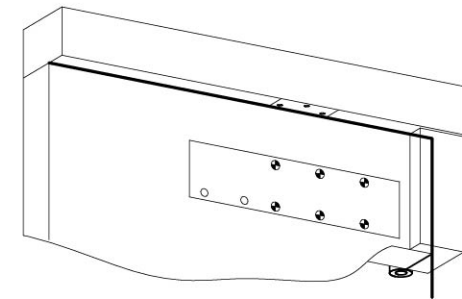


Please install the closer body and parallel arm bracket according to the template

1


Dismount the main arm and link arm

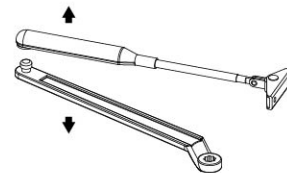

Flat arm is optional.

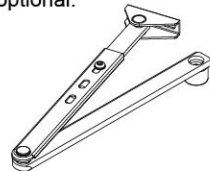


2

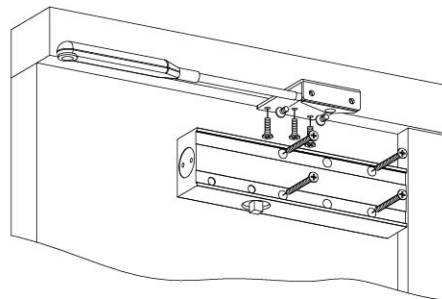


Fix link arm, parallel arm bracket and closer body by M5 screws

3

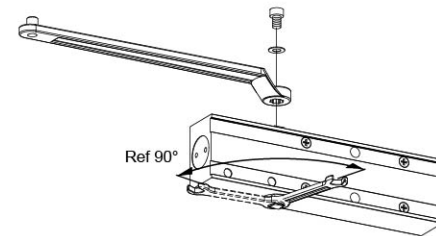

Rotate the pinion approximately at 90° by wrench as illustrated and then assemble the main arm with pinion by M6 screw tightly




4

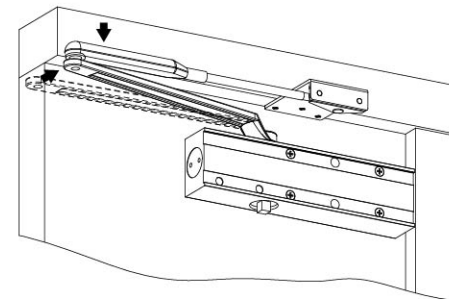

Connect the main arm and link arm as illustrated

5

 Speed Adjustable

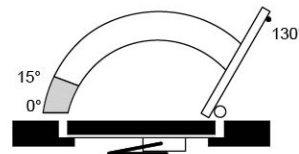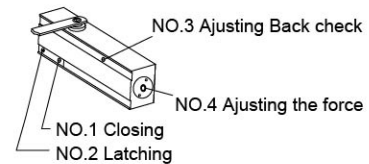

※If the strength is too light, it could be adjusted at clockwise rotation. On the contrary, it could be done at counterclockwise.