GRYPHON

REMOTE ORDERING OPTIONS



COMPATIBLE WITH



SEIP-433

RECEIVER COMPATIBILITY

• Suits Models: Gryphon TM50,TM60,TM70,TM80 Receivers

Remote Programming Steps

Program Existing Remote to New Remote

- Depending on your motor's model you may need to remove a screw to allow the hinged cover to open. Once open locate the RED push button which is located on the main circuit board.
- 2. Press the RED button for approximately 3-5 seconds until the LED indicator light begins to flash. Once flashing this indicates that your motor has successfully entered 'learn mode'.
- 3. On the new remote, press and hold any button (should only take about 1-2 seconds) that you wish to operate the door. The LED on the motor should stop flashing once the remote has been programmed.

Deleting All Remotes from Receiver

- 1. To erase all remotes from the motor's memory, push & hold the RED button on the circuit board panel for 10 seconds.
- 2. After three seconds the light will begin to flash & after 10 seconds the light will remain on.
- **3.** After the light remains on, release the RED button & check to ensure your remotes have been erased.

Whilst every effort has been made to ensure the accuracy of the information supplied herein, we assume no liability for any errors or omissions. Information contained in this document is subject to change without prior notice.