ACDC

REMOTE ORDERING OPTIONS



COMPATIBLE WITH



ACDC-XI

RECEIVER COMPATIBILITY

• Suits Models: RollerGlide, PowerGlide, EuroGlide & SlimGlide

Remote Programming Steps

Program Remote to a RollerGlide Receiver

- Remove the white plastic light diffuser Beware of connected Push button attached
- Press the button on the remote you wish to operate this door for 2 seconds.
- 3. Pause for 2 seconds.
- 4. Press the same button again for 2 seconds.

Program Remote to PowerGlide & EuroGlide Receivers

- 1. Press and release LEARN button A dot will be indicated in the corner of the LED display.
- Press the button on the remote you wish to operate this door for 2 seconds.
- 3. Pause for 2 seconds.
- **4.** Press the same button again for 2 seconds.
- 5. The dot in the corner of the display will flash to confirm the code and then turn off.
- 6. Repeat this process for additional Remotes that need to be stored.

Deleting All Remotes from RollerGlide, PowerGlide & EuroGlide Receivers

1. To erase existing remote controls press and hold the 'LEARN' button on the control panel (garage door motor) for 15 seconds.

Program Remote to a SlimGlide Receiver

- 1. Remove the light diffuser cover.
- 2. Press K1 button on the control board, the coding light will come on.
- **3.** Press the button on the remote you wish to operate this door for 2 seconds the coding light will turn off.
- 4. Pause for 2 seconds.
- **5.** Press the same button again for 2 seconds.
- 6. The coding light will flash 8 times then turn off indicating the transmitter has been coded successfully.

Deleting All Remotes from a SlimGlide Receiver

 To delete all codes, press and hold button K1 down for approximately 8-10 seconds. The code light will come on and then go off confirming deletion

Whilst every effort has been made to ensure the accuracy of the information supplied herein, we assume no liability for any errors or omissions. Information contained in this document is subject to change without prior notice.