

GLIDEROL

REMOTE ORDERING OPTIONS

Art ID:
TM-305C




SPECIFICATIONS
Gliderol
Frequency - 315Mhz
Buttons - 3
Battery - LR23A

Art ID:
SGT070




SPECIFICATIONS
>>>SGT
Frequency - 315Mhz
Buttons - 4
Battery - LR27A

COMPATIBLE WITH

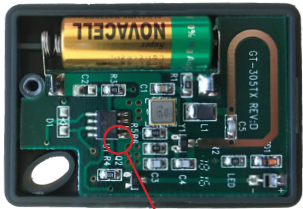

This programming is for Green
Circuit Board Versions Only

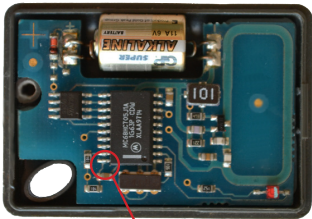

If you have Blue Circuit Board
Version use M-BT (see page 63)

RECEIVER COMPATIBILITY

- Suits Models:
GTX U3, GTS, GTS2000, GRD & GRD2000

Remote Programming Steps

Programming New Remotes to Receiver

1. Locate the receiver board on the garage door motor. (May vary between different models.)
2. Press the learn button once.
 - A Red LED will light up.
3. Press large button on the remote once and hold until Red LED on receiver board turns off.
 - This confirms that the handset is programmed

(Always use the large button for coding, even if configured to use small buttons for normal operation.)

Deleting All Remote Controls from Receiver

1. To reset the receiver (garage door motor) press and hold the learn button for 12 seconds.
2. This will erase all handsets from the memory.

Whilst every effort has been made to ensure the accuracy of the information supplied herein, we assume no liability for any errors or omissions. Information contained in this document is subject to change without prior notice.