

GLIDEROL

REMOTE ORDERING OPTIONS



COMPATIBLE WITH

RECEIVER COMPATIBILITY

- Suits Models:
Glidermatic GTS Optima, Glidermatic GRD+, Glidermatic GRD Dual & Glidermatic IGDU

Remote Programming Steps

Programming New Remotes to Receiver

1. Press and hold the 'Enter' button for 2 seconds to access the operator menu. The unit will beep twice to confirm this has been selected.
2. Use the arrow (Up & Down) buttons to select the 'Learn' option and press 'Enter' to confirm selection. The unit will beep three times to confirm the unit is in 'Learn' mode.
3. Press the 'Large' button on the handset. The unit will beep twice to confirm successful coding. Wait approx 3 seconds for the unit to exit setup mode.

(Always use the large button for coding, even if configured to use small buttons for normal operation.)

Deleting All Remote Controls from Receiver

1. Pressing the enter button for 5 seconds or more will erase all handset data from your receiver (garage door motor.)

Whilst every effort has been made to ensure the accuracy of the information supplied herein, we assume no liability for any errors or omissions. Information contained in this document is subject to change without prior notice.