

REMOTE ORDERING OPTIONS

Art ID:
M-TC



SPECIFICATIONS
JMA
Frequency - 433-434Mhz
Buttons - 4
Battery - CR2032

COMPATIBLE WITH



PTX5v2



PTX5-P



PTX5



PTX2v2



PTX2



062731



062730



70241

RECEIVER COMPATIBILITY

- Suits Models:
ATA Trio Code & B&D Tri-Tran Compatible remote

Remote Programming Steps

Setting New Remote

This remote is compatible with original ATA Trio Code and B&D Tri-Tran remote. The default coding type is ATA TrioCode. In order to switch between ATA TrioCode and B&D Tri-Tran code, the procedure is as follows:

1. Press and hold key1 and key2 of remote control at the same time. Led will turn on.
2. After 4 seconds, LED will turn off.
3. Release the buttons. The coding type has been switched successfully. (to switch back repeat step 1-3)

Programming New Remote

4. Press and hold SW1 (for Relay 1) or SW2 (for Relay 2) on the receiver board. The led will start to flash.
5. Press the transmitter button which you would like to use to control the device for two seconds. The led will start to flash faster.
6. Release the transmitter button and pause for two seconds. Press the same button again for two seconds, the led will stay on for a second then turn off.
7. Release SW button.
8. Test the button that has been introduced.

Delete All Remotes

9. Turn the power off to the receiver.
10. Press and hold SW1 button.
11. While holding SW1 turn power on again. After 15 seconds the Coding LED will illuminate to indicate that the receiver's memory has been cleared.
12. Release SW1. All the stored codes should now be deleted. Confirm this by pressing the transmitters previously used to operate the device. There should be no response.