



# Installation Instructions:

## Parallel Fixing

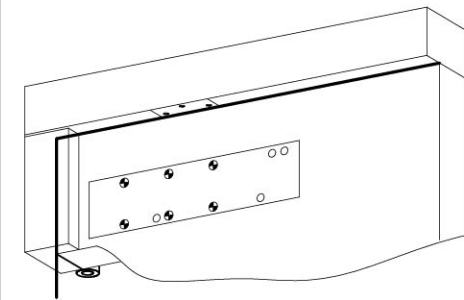


Please install the closer body and parallel arm bracket according to the template

1

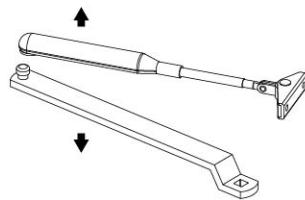


Dismount the main arm and link arm

2

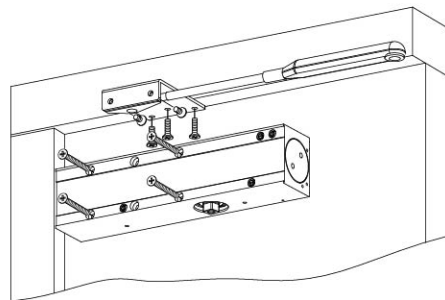


Fix link arm, parallel arm bracket and closer body by M5 screws

3

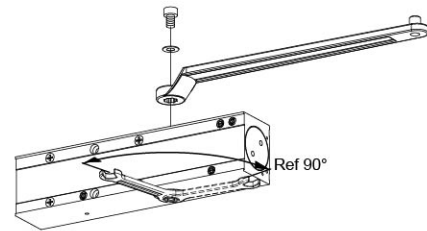

Rotate the pinion approximately at 90° by wrench as illustrated and then assemble the main arm with pinion by M6 screw tightly



4

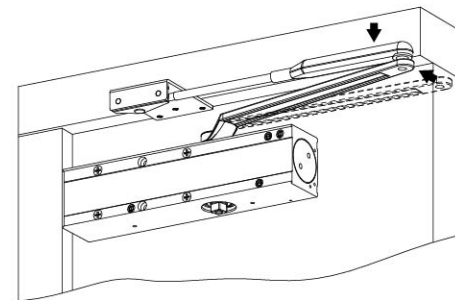

Connect the main arm and link arm as illustrated

5

## Speed Adjustable

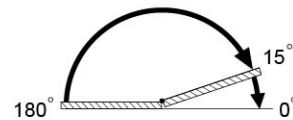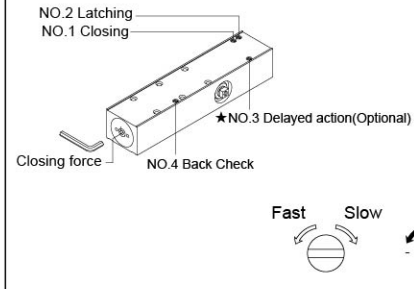


★This option is not covered by the Certificate

10701 ZINS-FAxxx-6S


# Installation Instructions:

## Parallel Fixing

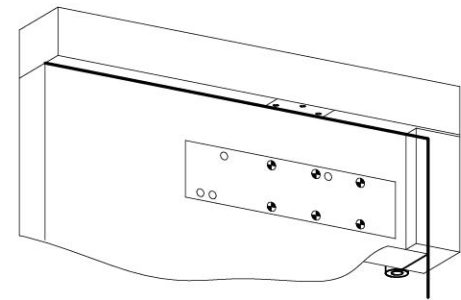


Please install the closer body and parallel arm bracket according to the template

1

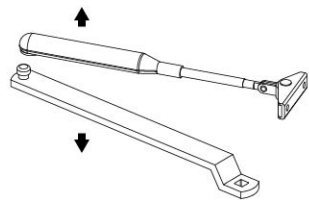


Dismount the main arm and link arm

2

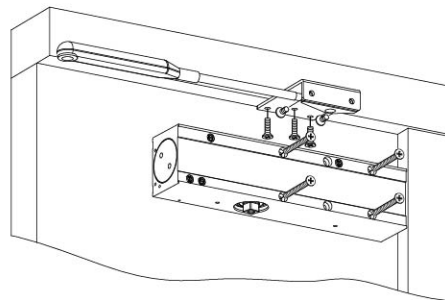


Fix link arm, parallel arm bracket and closer body by M5 screws

3

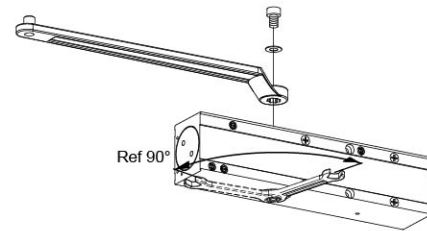

Rotate the pinion approximately at 90° by wrench as illustrated and then assemble the main arm with pinion by M6 screw tightly



4

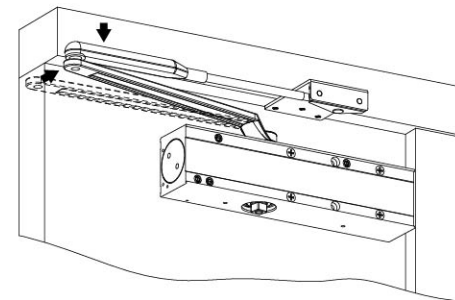

Connect the main arm and link arm as illustrated

5

## Speed Adjustable

 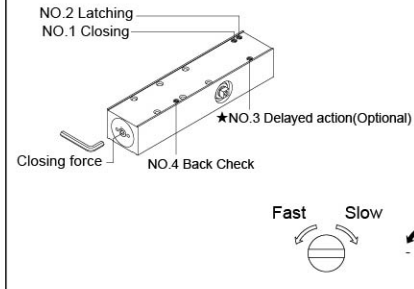

★This option is not covered by the Certificate