

SGT020

Battery:
LR27A

Battery fitted by manufacturer
for remote testing.
Battery fitted may be discharged.

DESCRIPTION

- 4 channel garage remote
- Uses SecuraCode® code hopping technology
- Controls up to 4 different doors or gates
- Suitable for pocket, or key chain



COMPATIBLE WITH:



PTX4



PTX4-P

Programming New Remote

Program Remote to Receiver

1. Press and hold the blue 'Door Code' button on the garage door opener or 'SW1' or 'SW2' on the receiver board.
2. On the new remote, press the button you would like to use for 2 seconds.
3. Release the remote button and wait for 2 seconds.
4. Press the same button again for 2 seconds.
5. Release the 'Door Code' or 'SW' button'.

Delete All Remotes (Clear Lost Remotes)

1. Turn off the receiver (garage door motor.)
2. Press and hold the blue 'Door Code' button on the garage door opener or 'SW1' on the receiver board. Turn on the power again, while holding the button. A coding LED will light up.

Program New/Existing remotes as above.