

# AIRKEY

## REMOTE ORDERING OPTIONS

Art ID:  
**AKTX2**



**SPECIFICATIONS**  
AIRKEY  
Frequency - 433Mhz  
Buttons - 2  
Battery - CR2032

Art ID:  
**AKTX4**



**SPECIFICATIONS**  
AIRKEY  
Frequency - 433Mhz  
Buttons - 4  
Battery - CR2032

## COMPATIBLE WITH



AK3XT6



AK3XT4



AKTX2-OLD



AKTX4-OLD



Serial must start with N  
NOT compatible with P version

## RECEIVER COMPATIBILITY

- Suits Models:  
AIRKEY Garage Door Opener D7 - P34

# Remote Programming Steps

## Program Remote to Receiver

1. Press and hold the ADD button on the receiver (garage door motor.) The Red LED will light up.
2. Press any button on the new remote to be added. The Red LED will blink to indicate a successful program.

## Program Existing Remote to New Remote

1. While within the operational range of the receiver (garage door motor), simultaneously press buttons 1 and 2 of an existing remote, then press any button on the new remote within 2 seconds.

## Delete All Remotes (Clear Lost Remotes)

1. Press and hold the CLR button on the receiver for about 5 seconds. The Red LED on the receiver (garage door motor) will light up to indicate that all memory has been cleared.